TOSHIBA

FILE NO. 140-200211

SERVICE MANUAL

COLOR TELEVISION/ VIDEO CASSETTE RECORDER

MV13DM2

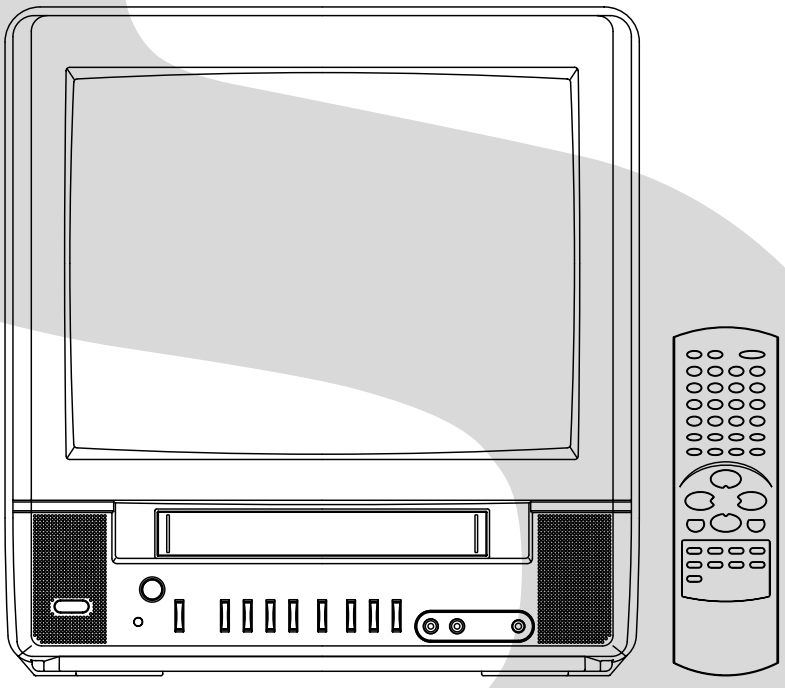

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.
Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a ⚠ mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.
Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.
Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER
   The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.
2. PART NO. and DESCRIPTION
   You can find it in your SERVICE MANUAL.

TAPE REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the VCR block from the main unit.
   (Refer to item 1 of the DISASSEMBLY INSTRUCTIONS.)
2. Remove the screw ① of the Deck Chassis and remove the Loading Motor.
3. Rotate the Pinch Roller Cam in the direction of the arrow by hand to slacken the Video Tape.
4. Rotate the Clutch Ass'y either of the directions to wind the Video Tape in the Cassette Case.
5. Repeat the above step 3~4. Then take out the Video Cassette from the Deck Chassis. Be careful not to scratch on the tape.

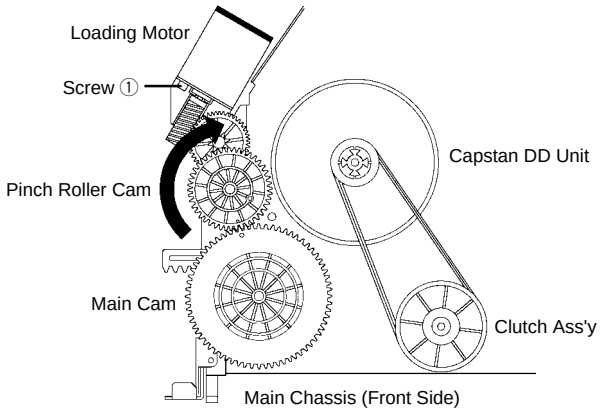

TABLE OF CONTENTS

SERVICING NOTICES ON CHECKING A1-1
HOW TO ORDER PARTS A1-1
TAPE REMOVAL METHOD AT NO POWER SUPPLY A1-2
TABLE OF CONTENTS A2-1
GENERAL SPECIFICATIONS ..... A3-1~A3-5
DISASSEMBLY INSTRUCTIONS
1. REMOVAL OF MECHANICAL PARTS AND P. C. BOARDS B1-1, B1-2
2. REMOVAL OF DECK PARTS ..... B2-1~B2-6
3. REMOVAL OF ANODE CAP B3-1
4. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC B4-1, B4-2

KEY TO ABBREVIATIONS C1-1, C1-2
SERVICE MODE LIST C2-1
PREVENTIVE CHECKS AND SERVICE INTERVALS C3-1, C3-2
WHEN REPLACING EEPROM (MEMORY) IC C4-1
SERVICING FIXTURES AND TOOLS D1-1
PREPARATION FOR SERVICING D1-1
MECHANICAL ADJUSTMENTS ..... D2-1~D2-4
ELECTRICAL ADJUSTMENTS ..... D3-1~D3-6
BLOCK DIAGRAMS
TV E-1, E-2
Y/C/AUDIO/HEAD AMP E-3, E-4
MICON/IN/OUT E-5, E-6

PRINTED CIRCUIT BOARDS
MAIN/CRT F-1, F-2
SYSCON ..... F-3~F-6

SCHEMATIC DIAGRAMS
Y/C/AUDIO/HEAD AMP G-1, G-2
MICON G-3, G-4
POWER G-5, G-6
IN/OUT G-7, G-8
CHROMA/IF G-9, G-10
SOUND AMP G-11, G-12
Hi-Fi G-13, G-14
IF G-15, G-16
TV POWER G-17, G-18
DEFLECTION G-19, G-20
CRT G-21, G-22

INTERCONNECTION DIAGRAM G-23, G-24
WAVEFORMS H-1, H-2
MECHANICAL EXPLODED VIEWS I1-1, I1-2
CHASSIS EXPLODED VIEWS I2-1, I2-2
MECHANICAL REPLACEMENT PARTS LIST J1-1
CHASSIS REPLACEMENT PARTS LIST J2-1
ELECTRICAL REPLACEMENT PARTS LIST ..... J3-1~J3-5

GENERAL SPECIFICATIONS

G-1	**TV System**	CRT		CRT Size / Visual Size	13 inch / 335.4mmV
				CRT Type	Normal
				Deflection	90 degree
				Magnetic Field BV/BH	+0.45G / 0.18G
		Color System			NTSC
		Speaker			1Speaker
				Position	Front
				Size	1.5 x 2.5 Inch
				Impedance	8 ohm
		Sound Output		MAX	1.25 W
				10%(Typical)	1.0 W
G-2	**VCR System**	System			VHS Player / Recorder
		Video System			NTSC
		Hi-Fi STEREO			No
		NTSC PB			-
		Deck		DECK	OVD-7
				Loading System	Front
				Motor	3
		Heads	Video Head		2 Head
			FM Audio Head		No
			Audio /Control		Mono/Yes
			Erase(Full Track Erase)		Yes
		Tape Speed	Rec	PAL	-
				NTSC	SP/SLP(EP)
			Play	PAL	-
				NTSC	SP/SLP(EP)
		Fast Forward / Rewind Time (Approx.) at 25oC			FF:4'50"/REW:2'30"
				with Cassette	T-120
		Forward/Reverse Picture Search		NTSC or PAL-M	SP/SLP(EP)=3x,5x/9x,15x
				PAL or SECAM	-
		Frame Advance			-
		Slow Speed			-
G-3	**Tuning System**	Broadcasting System			US Sysytem M
		Tuner and Receive CH		System	1Tuner
				Destination	US(w/CATV)
				Tuning System	F-Synth
				Input Impedance	VHF/UHF 75 ohm
				CH Coverage	2~69, 4A,A-5~A-1, A~I, J~W,W+1~W+84
		Intermediate Frequency		Picture(FP)	45.75MHz
				Sound(FS)	41.25MHz
				FP-FS	4.5MHz
		Preset CH			No
		Stereo/Dual TV Sound			No
		Tuner Sound Muting			Yes
G-4	**Signal**	Video Signal		Input Level	1 V p-p/75 ohm
				Output Level	-
				S/N Ratio (Weighted)	50dB
				Horizontal Resolution at SP Mode	220Lines
		Audio Signal		Input Level	-8dBm/50k ohm
				Output Level	-
				S/N Ratio at SP (Weighted)	38dB
				Harmonic Distortion at SP (1kHz) Typical	1.5 %
				Frequency Response at SP	100Hz - 10kHz
				at LP	-
				at SLP(EP)	100Hz - 4kHz
		Hi-Fi Audio Signal		Dynamic Range : More than	-
				Wow And Flutter : Less than	-
				Channel Separation : More than	-
				Harmonic Distortion : Less than	-
G-5	**Power**	Power Source		AC	120V 60Hz
				DC	12V
		Power Consumption		at AC	65 W at 120V 60Hz
				at DC	54W at 12V
				Stand by (at AC)	4 W at 120V 60 Hz
				Per Year	-
		Protector		Power Fuse	Yes
				Dew Sensor	Yes
G-6	**Regulation**			Safety	UL
				Radiation	FCC
				X-Radiation	DHHS
G-7	**Temperature**			Operation	+5oC ~ +40oC
				Storage	-20oC ~ +60oC
G-8	**Operating Humidity**				Less then 80% RH

GENERAL SPECIFICATIONS

G-9	**On Screen Display**	Menu			Yes	
			Menu	Type	Character	
			Timer Rec Set		Yes	
			Channel Setup		Yes	
				TV/CATV	Yes	
				Auto CH Memory	Yes	
				Add/ Delete	Yes	
				Guide CH Set		No
			TV Setup		Yes	
				V-chip Set	Yes	
				On/Off Timer Set	Yes	
				Picture	Yes	
				Audio		No
				Sap On/Off		No
			Auto Repeat On/Off		Yes	
			System Setup		Yes	
				Clock Set	Yes	
				Language	Yes	
				Auto Clock On/Off	Yes	
				Standard Time	Yes	
				Daylight Saving Time	Yes	
			Commercial Advance			No
				Marking On/Off		No
				Blueback On/Off		No
				Playback Auto/Manual		No
				Unmarked Tape		No
			Movie Advance			No
				Go To Movie		No
				Go To Preview		No
		G-CODE(or SHOWVIEW or PLUSCODE)No. Entry				No
		Clock			Yes	
		CH/AV			Yes	
		Tape Counter(Linear Counter)			Yes	
		Tape Speed			Yes	
		Sleep Time			Yes	
		Stereo/Audio Output				No
				Bilingal		No
				SAP		No
		Control Level	Volume		Yes	
			Bright / Contrast / Sharpness / Color		Yes	
			Tint		Yes	
			Bass/Treble/Balance			No
			Manual Tracking		Yes	
		Play/Stop/FF/Rew/Rec/OTR/T-Rec/Pause/Eject/Tape In (Symbol Mark)			Yes	
		Auto Tracking/Manual Tracking			Yes	
		Caption / Text			Yes	
		Index				No
		Muting			Yes	
		Hi-Fi				No
		Repeat			Yes	
		Zero Return				No
		DEW			Yes	
G-10	**OSD Language**				English French Spanish	
G-11	**Clock,Timer and Timer Back-up**	Calendar			1990/1/1 ~ 2081/12/31	
		Timer Events			8 prog/ 1 month	
		One Touch Recording Max Time			5 Hours	
		OTPB Valid Time			No	
		Sleep Timer		Max Time	120	min.
				Step	10	min.
		On/Off Timer		Program(On Timer / Off Timer)	1	prog.
		Auto Shut Off		No Signal	15	min.
				No Operation	-	
		Timer Back-up (at Power Off Mode)			5	sec.

GENERAL SPECIFICATIONS

G-12	**Remote Control**	Unit		RC-DQ
		Glow in Dark Remocon		Yes
		Format		NEC
		Custom Code		40-BFh , 44-BBh
		Power Source	Voltage(D.C)	3V
			UM size x pcs	UM-4 x 2 pcs
		Total Keys		42 Keys
		Keys	Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			CH Up	Yes
			CH Down	Yes
			Volume Up	Yes
			Volume Down	Yes
			Input Select	Yes
			Play	Yes
			F.Fwd	Yes
			Rew	Yes
			Pause/Still	Yes
			Stop	Yes
			Rec/OTR	Yes (2Keys)
			Eject	Yes
			Counter Reset	Yes
			Speed	Yes
			Timer Rec	Yes (2Keys)
			TV Monitor	No
			Quick View	Yes
			Program	Yes
			Slow	No
			Auto Tracking	Yes
			Set/Tracking+	Yes
			Set/ Tracking -	Yes
			Menu	Yes
			Enter	Yes
			Cancel	Yes
			Call	Yes
			TV/Caption/Text	Yes
			Sleep Timer	Yes
			Muting	Yes
			Zero Return	Yes
			CM Skip	Yes
			Audio Select	No
G-13	**Features**	Auto Head Cleaning		No
		Auto Tracking		Yes
		HQ (VHS Standard High Quality)		Yes
		Auto Power On, Auto Play, Auto Rewind, Auto Eject		Yes
		VIDEO PLUS+(SHOWVIEW,G-CODE)		No
		Auto Clock		Yes
		Forward / Reverse Picture Search		Yes
		One Touch Playback		No
		Auto CH Memory		Yes
		Closed Caption		Yes
		TV Auto Shut off Function		Yes
		End Call		No
		Index Search		No
		SQPB		No
		CATV		Yes
		CM Skip(30sec x 6 Times)		Yes
		Comb Filter		No
		TV Monitor		No
		Program Extend		No
		Choke Coil		No
		Energy Star		Yes
		Dirty Head		No
		V-chip	USA V-chip	Yes
			CANADA V-chip	No
		Power On Memory		No
		CM Advance		No
		Movie Advance		No
		Zero Return		Yes
		FBT Leak Test Protect		Yes

GENERAL SPECIFICATIONS

G-14	**Accessories**	Owner's Manual		Language	English
				w/Guarantee Card	Yes
		Remote Control Unit			Yes
		Battery			Yes
				UM size x pcs	UM-4 x 2 pcs
				OEM Brand	No
		Rod Antenna			No
				Poles	-
				Terminal	-
				w/300 ohm to 75 ohm Antenna Adapter	-
		Loop Antenna			No
				Terminal	-
		U/V Mixer			No
		300 ohm to 75 ohm Antenna Adapter			Yes
		Antenna Change Plug			No
		DC Car Cord (Center+)			Yes
		AC Plug Adapter			No
		AC Cord			No
		AV Cord (2Pin-1Pin)			No
		Guarantee Card			No
		Registration Card			Yes
		ESP Card			Yes
		Warning Sheet			No
		Dew/AHC Caution Sheet			No
		Quick Set-up Sheet			No
		Circuit Diagram			No
		Service Facility List			No
		Important Safeguard			No
G-15	**Interface**	Switch		Power	Yes
				Play	Yes
				Pause/Still	No
				System Select	No
				One Touch Playback	No
				Channel Up	Yes
				Channel Down	Yes
				F.FWD/Cue	Yes
				Eject/Stop	Yes
				Main Power SW	No
				Volume Up	Yes
				Volume Down	Yes
				Rew/Rev	Yes
				Rec/OTR	Yes
				Input Select	No
		Indicator		Power	No
				Rec/OTR	Red
				T-Rec	Red
				On Timer	No
				CS	No
		Key Light up		Rec/OTR	No
				One Touch Playback	No
				Play	No
		Terminals	Front	Video Input	RCA x 1
				Audio Input	RCA x 1
				Other Terminal	Head Phone(Stereo & Mono, 3.5mm)
			Rear	Video Input	No
				Audio Input	No
				Video Output	No
				Audio Output	No
				Euro Scart	No
				Diversity	No
				Ext Speaker	No
				DC Jack 12V(Center +)	Yes
				VHF/UHF Antenna Input	F Type
				AC Inlet	No
G-16	**Set Size**			Approx. W x D x H (mm)	362 x 369 x 382
G-17	**Weight**			Net (Approx.)	12.5 kg (27.6lbs)
				Gross (Approx.)	14.5 kg (32.0lbs)

GENERAL SPECIFICATIONS

G-18	**Carton**	Master Carton		No
			Content	-
			Material	-
			Dimensions W x D x H(mm)	-
			Description of Origin	-
		Gift Box		Yes
			Material	Double/White
			Dimensions W x D x H(mm)	423 x 447 x 443
			Design	As per Buyer's
			Description of Origin	Yes
		Drop Test	Natural Dropping At	1 Corner / 3 Edges / 6 Surfaces
			Height (cm)	62
		Container Stuffing(40' container)		700 Sets
G-19	**Cabinet Material**		Cabinet Front	PS 94V0 DECABROM
			Cabinet Rear	PS 94V0 DECABROM
			Jack Panel	PS 94V0 DECABROM

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS

1-1: BACK CABINET (Refer to Fig. 1-1)

1. Remove the 4 screws ①.
2. Remove the 3 screws ② which are used for holding the Back Cabinet.
3. Remove the AC cord from the AC cord hook ③.
4. Remove the Back Cabinet in the direction of arrow.

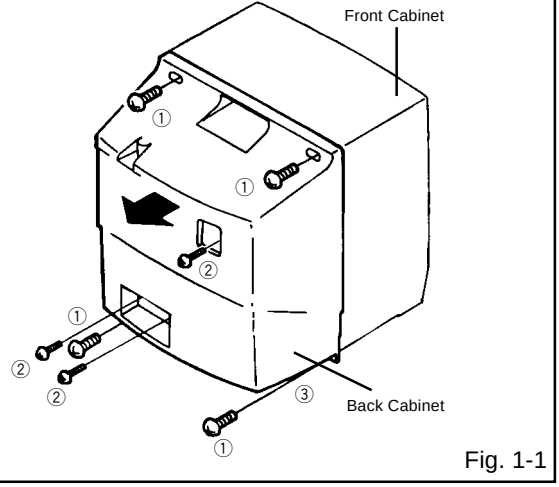

Fig. 1-1

1-2: CRT PCB (Refer to Fig. 1-2)

CAUTION: BEFORE REMOVING THE ANODE CAP, DISCHARGE ELECTRICITY BECAUSE IT CONTAINS HIGH VOLTAGE. BEFORE ATTEMPTING TO REMOVE OR REPAIR ANY PCB, UNPLUG THE POWER CORD FROM THE AC SOURCE.

1. Remove the Anode Cap. (Refer to REMOVAL OF ANODE CAP)
2. Disconnect the following connectors: (CP801 and CP850).
3. Remove the CRT PCB in the direction of arrow.

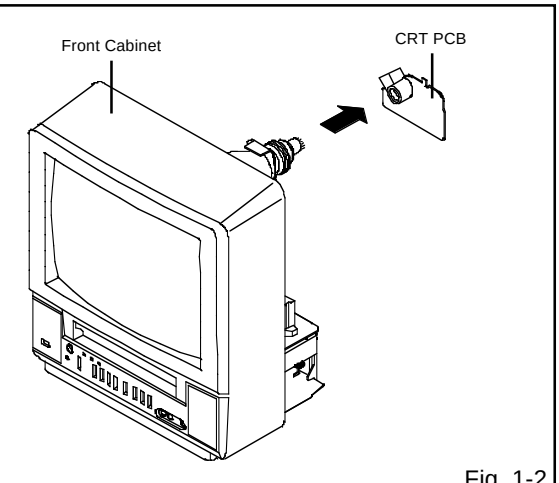

Fig. 1-2

1-3: TV/VCR BLOCK (Refer to Fig. 1-3)

1. Remove the 2 screws ①.
2. Disconnect the following connectors: (CP401, CP403, CP503 and CP304).
3. Unlock the support ②.
4. Remove the TV/VCR Block in the direction of arrow.

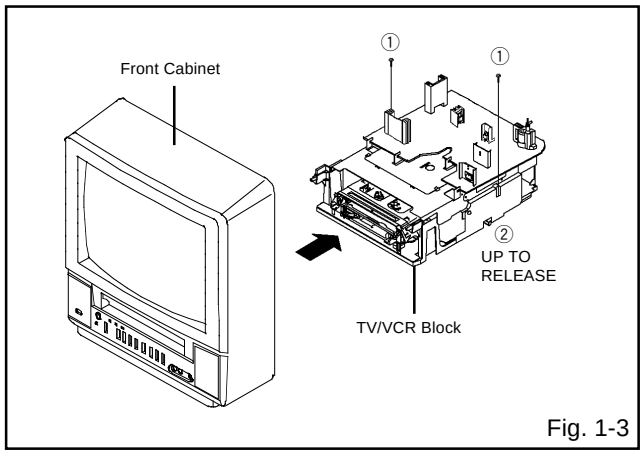

Fig. 1-3

1-4: MAIN PCB (Refer to Fig. 1-4)

1. Remove the screw ①.
2. Remove the Main PCB Holder.
3. Remove the 2 screws ②.
4. Remove the 3 screws ③.
5. Remove the screw ④.
6. Remove the TV PCB Holder.
7. Disconnect the following connectors: (CP402, CD502, CP502 and CP820).
8. Remove the Main PCB in the direction of arrow.

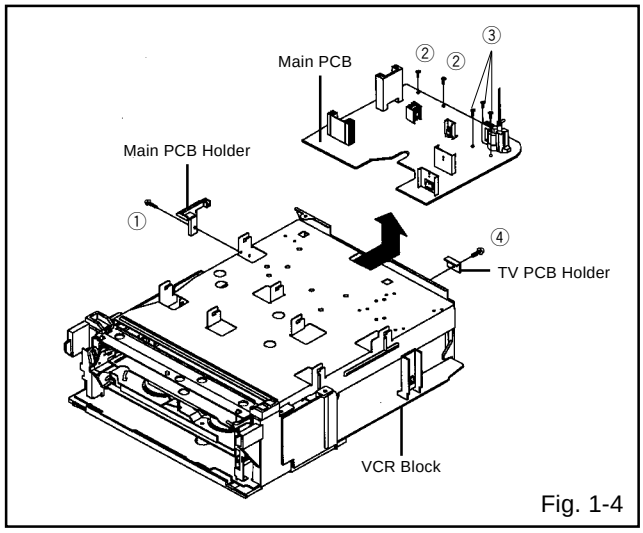

Fig. 1-4

DISASSEMBLY INSTRUCTIONS

1-5: DECK SHIELD PLATE AND BOTTOM SHIELD (Refer to Fig. 1-5)

1. Remove the 2 screws ①.
2. Remove the screw ②.
3. Remove the screw ③.
4. Remove the Deck Shield Plate in the direction of arrow (A).
5. Remove the screw ④.
6. Remove the Bottom Shield in the direction of arrow (B).

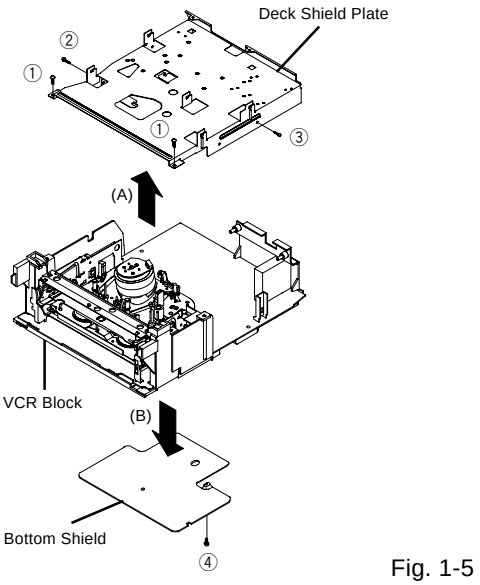

Fig. 1-5

1-6: DECK CHASSIS (Refer to Fig. 1-6)

1. Remove the screw ①.
2. Remove the Plate Cover Light.
3. Move the Cassette Holder Ass'y to the back side.
4. Remove the 3 screws ②.
5. Disconnect the following connectors:
   (CP605, CP1001, CP4001, CP4002 and CP4003).
6. Remove the Deck Chassis and Shield Cover Deck in the direction of arrow.

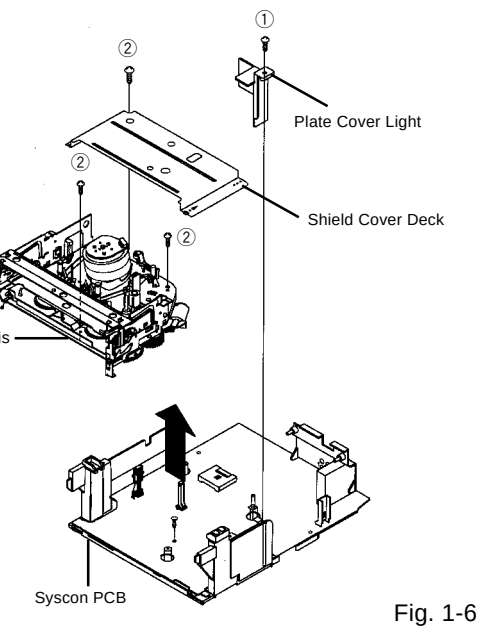

Fig. 1-6

1-7: JACK PLATE AND SYSCON PCB (Refer to Fig. 1-7)

1. Remove the screw ①.
2. Remove the Syscon PCB in the direction of arrow (A).
3. Unlock the 2 supports ②.
4. Remove the Jack Plate in the direction of arrow (B).

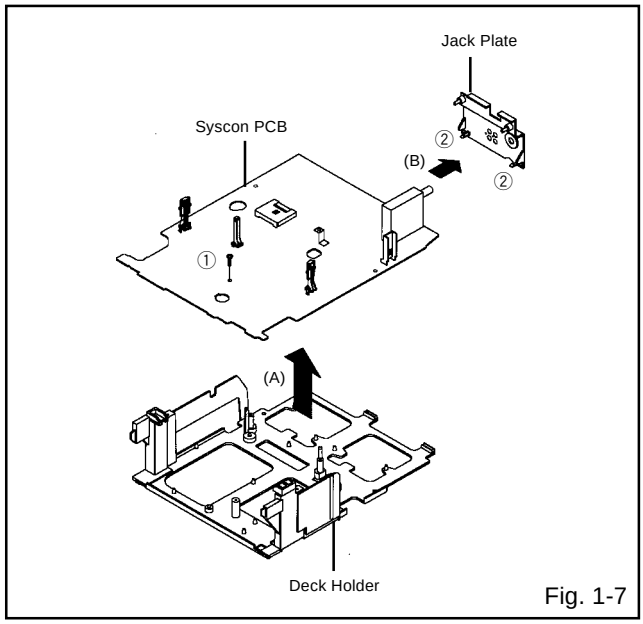

Fig. 1-7

DISASSEMBLY INSTRUCTIONS

2. REMOVAL OF DECK PARTS

2-1: TOP BRACKET (Refer to Fig. 2-1)

1. Extend the 2 supports ①.
2. Slide the 2 supports ② and remove the Top Bracket.

NOTE

1. After the installation of the Top Bracket, bend the support ① so that the Top Bracket is fixed.

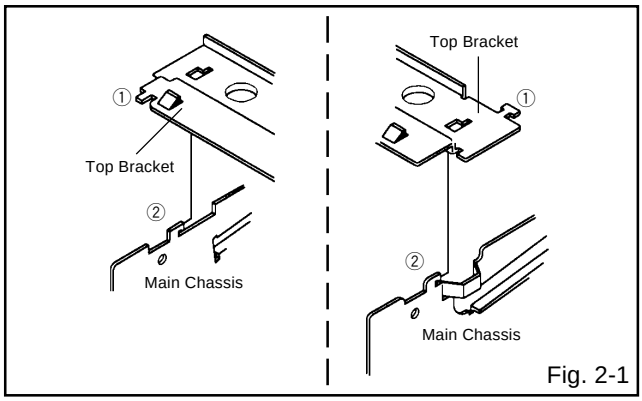

Fig. 2-1

2-2: CASSETTE HOLDER ASS'Y (Refer to Fig. 2-2)

1. Move the Cassette Holder Ass'y to the front side.
2. Push the Locker R to remove the Cassette Side R.
3. Remove the Cassette Side L.

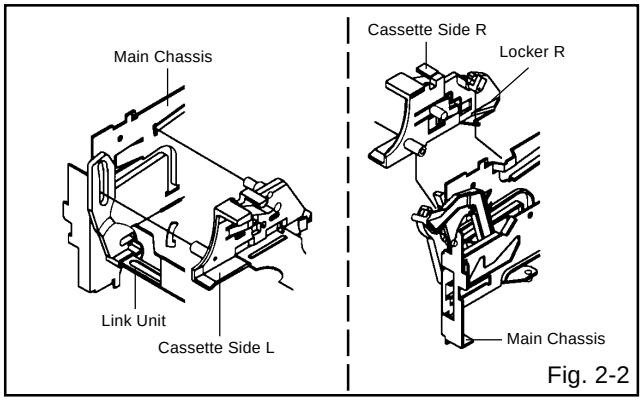

Fig. 2-2

2-3: CASSETTE SIDE L/R (Refer to Fig. 2-3-A)

1. Remove the Locker Spring.
2. Unlock the 4 supports ① and then remove the Cassette Side L/R.
3. Unlock the support ② and then remove the Locker R.

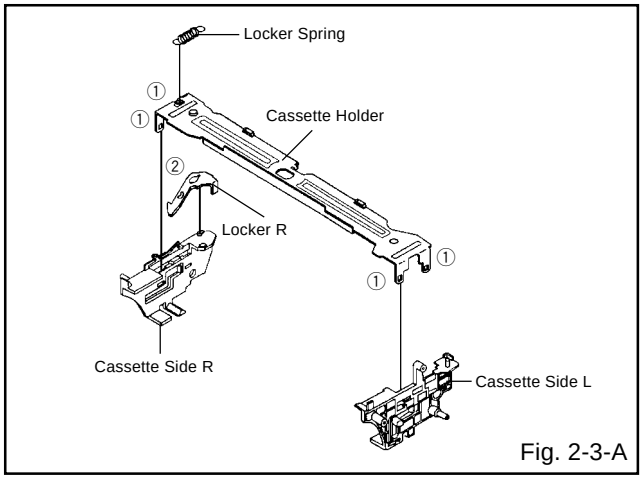

Fig. 2-3-A

NOTE

1. In case of the Locker R installation, check if the two positions of Fig.2-3-B are correctly locked.
2. When you install the Cassette Side R, be sure to move the Locker R after installing.

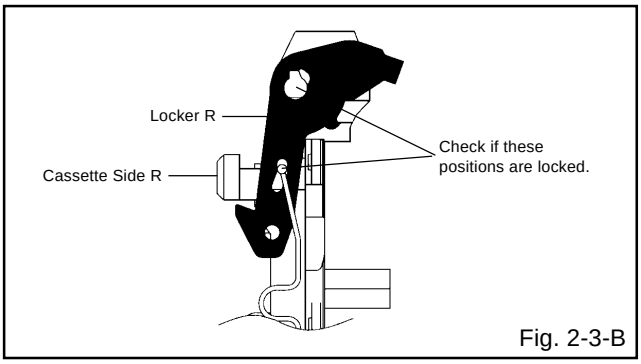

Fig. 2-3-B

2-4: LINK UNIT (Refer to Fig. 2-4)

1. Set the Link Unit to the Eject position.
2. Unlock the support ①.
3. Remove the (A) side of the Link Unit first, then remove the (B) side.

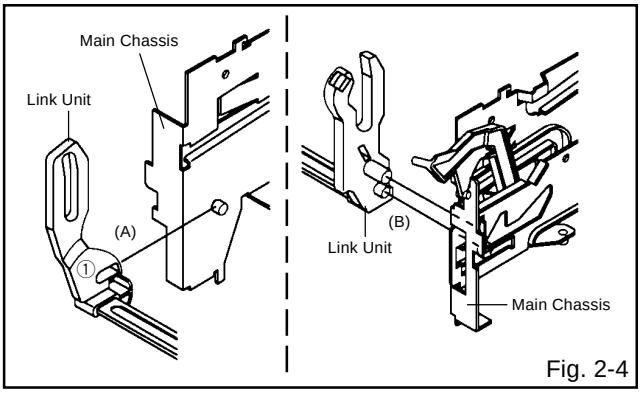

Fig. 2-4

2-5: LINK LEVER/FLAP LEVER (Refer to Fig. 2-5)

1. Extend the support ①.
2. Remove the Link Lever.
3. Remove the Flap Lever.

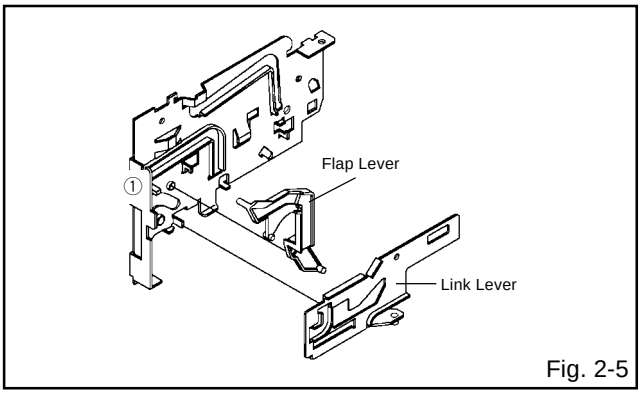

Fig. 2-5

DISASSEMBLY INSTRUCTIONS

2-6: LOADING MOTOR/WORM (Refer to Fig. 2-6-A)

1. Remove the screw ①.
2. Remove the Loading Motor.
3. Remove the Worm.

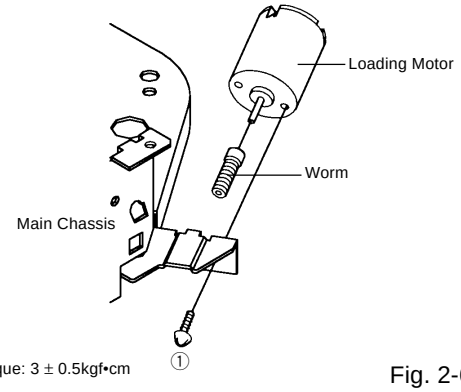

Fig. 2-6-A

NOTE

1. In case of the Worm installation, check if the value of the Fig. 2-6-B is correct.
2. In case of the Loading Motor installation, hook the wire on the Cassette Opener as shown Fig. 2-6-C.
3. When installing the wires between Capstan DD Unit and Loading Motor, connect them correctly as shown Fig. 2-6-D.

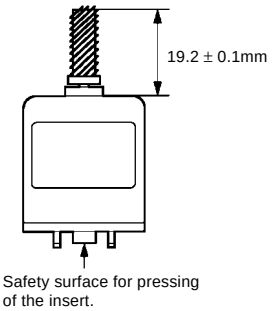

Fig. 2-6-B

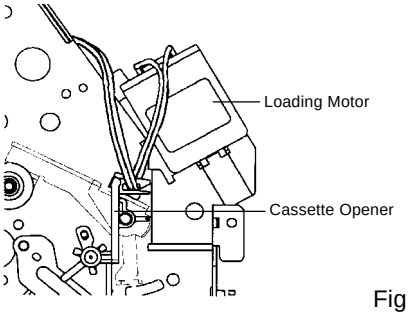

Fig. 2-6-C

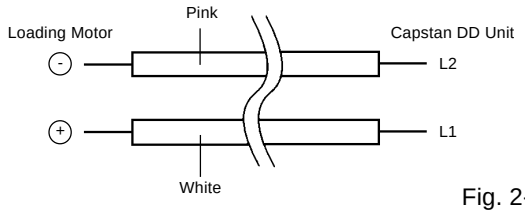

Fig. 2-6-D

2-7: TENSION ASS'Y (Refer to Fig. 2-7-B)

1. Turn the Pinch Roller Cam clockwise so that the Tension Holder hook is set to the position of Fig. 2-7-A to move the Tension Arm Ass'y.
2. Remove the Tension Spring.
3. Unlock the 2 supports ① and remove the Tension Band.
4. Unlock the support ② and remove the Tension Arm Ass'y.
5. Unlock the support ③ and remove the Tension Connect.
6. Float the hook ④ and turn it clockwise then remove the Tension Holder.

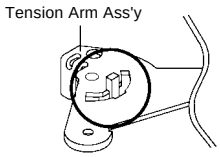

Fig. 2-7-A

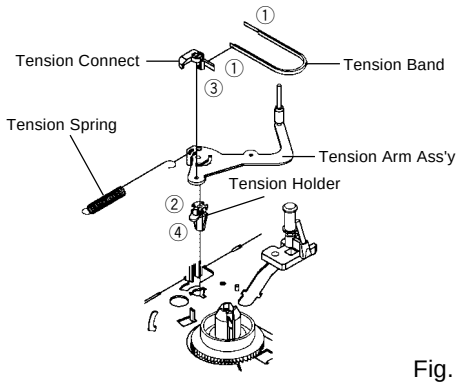

Fig. 2-7-B

NOTE

1. In case of the Tension Band installation, note the direction of the installation. **(Refer to Fig. 2-7-C)**
2. In case of the Tension Band installation, install correctly as Fig. 2-7-D.
3. In case of the Tension Connect installation, install as the circled section of Fig. 2-7-E.

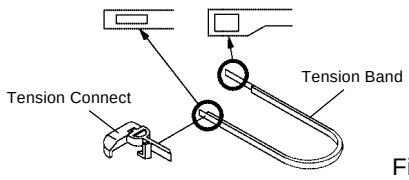

Fig. 2-7-C

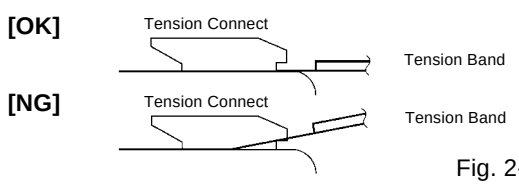

Fig. 2-7-D

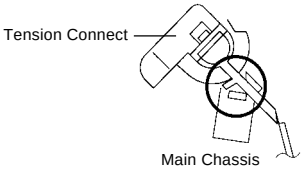

Fig. 2-7-E

DISASSEMBLY INSTRUCTIONS

2-8: T BRAKE ARM/T BRAKE BAND (Refer to Fig. 2-8-A)

1. Remove the T Brake Spring.
2. Turn the T Brake Arm clockwise and bend the hook section to remove it.
3. Unlock the 2 supports ① and remove the T Brake Band.

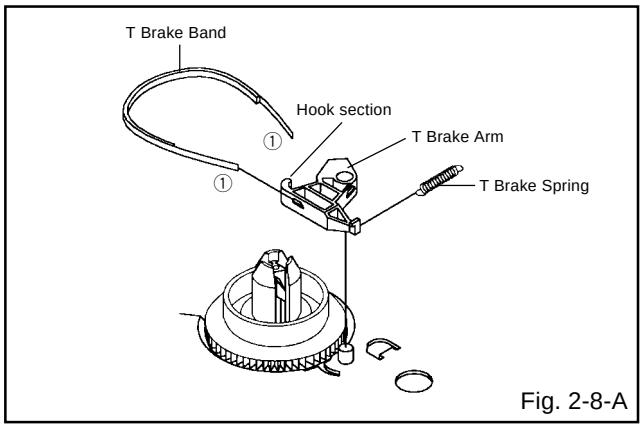

Fig. 2-8-A

NOTE

1. In case of the T Brake Band installation, install correctly as Fig. 2-8-B.

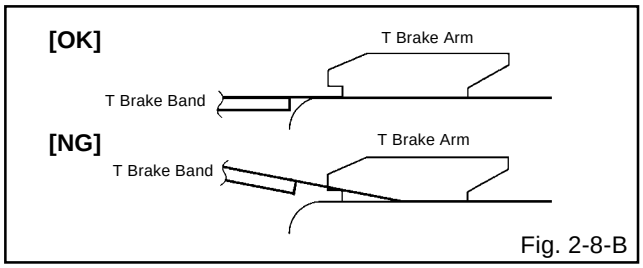

Fig. 2-8-B

2-9: S REEL/T REEL/IDLER ARM ASS'Y/IDLER GEAR (Refer to Fig. 2-9-A)

1. Remove the S Reel and T Reel.
2. Remove the 2 Polyslider Washers ①.
3. Remove the Idler Arm Ass'y and Idler Gear.

NOTE

1. Take care not to damage the gears of the S Reel and T Reel.
2. The Polyslider Washer may be remained on the back of the reel.
3. Take care not to damage the shaft.
4. Do not touch the section "A" of S Reel and T Reel. (Use gloves.) **(Refer to Fig. 2-9-A)** Do not adhere the stains on it.
5. When you install the reel, clean the shaft and grease it. (If you do not grease, noise may be heard in FF/REW mode.)
6. After installing the reel, adjust the height of the reel. **(Refer to MECHANICAL ADJUSTMENT)**

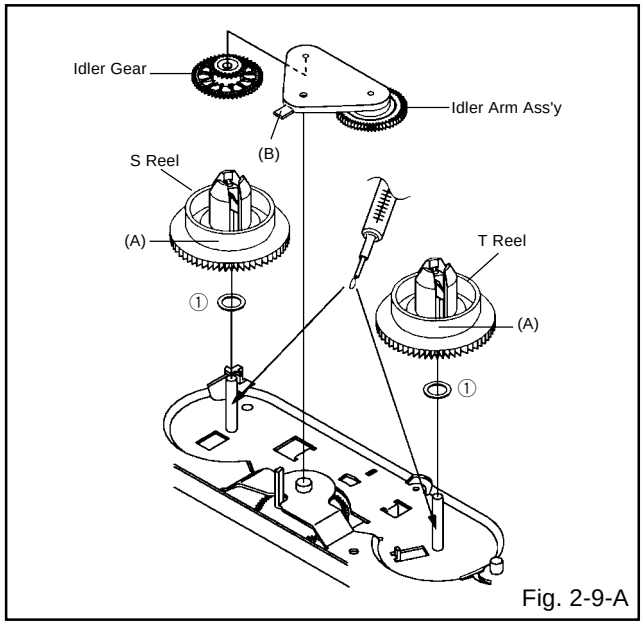

Fig. 2-9-A

NOTE

1. In case of the S Reel and T Reel installation, check if the correct parts are installed. **(Refer to Fig. 2-9-B)**
2. In case of the Idler Arm Ass'y installation, install correctly as Fig. 2-9-C. And also set it so that the section "B" of Fig. 2-9-A is placed under the Main Chassis tab.

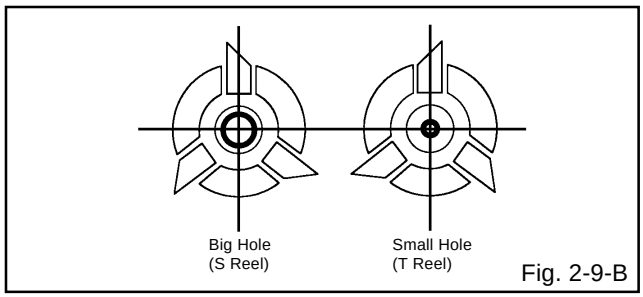

Fig. 2-9-B

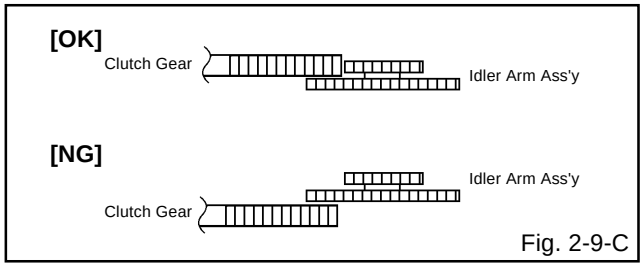

Fig. 2-9-C

DISASSEMBLY INSTRUCTIONS

2-10: CASSETTE OPENER/PINCH ROLLER BLOCK/ P5 ARM ASS'Y (Refer to Fig. 2-10-A)

1. Unlock the support ① and remove the Cassette Opener.
2. Remove the Pinch Roller Block and P5 Arm Ass'y.

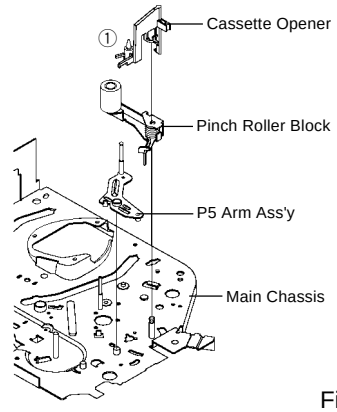

Fig. 2-10-A

NOTE

1. Do not touch the Pinch Roller. (Use gloves.)
2. In case of the Pinch Roller Block and the Pinch Roller Cam installation, install correctly as Fig. 2-10-B.

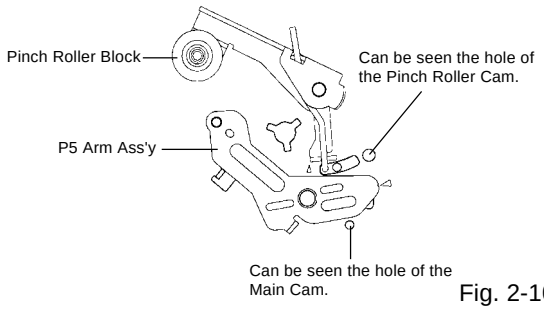

Fig. 2-10-B

2-11: A/C HEAD (Refer to Fig. 2-11-A)

1. Remove the screw ①.
2. Remove the A/C Head Base.
3. Remove the 3 screws ②.
4. Remove the A/C Head and A/C Head Spring.

NOTE

1. Do not touch the A/C Head. (Use gloves.)
2. When you install the A/C Head Spring, install as shown in Fig. 2-11-B.
3. When you install the A/C Head, tighten the screw (1) first, then tighten the screw (2), finally tighten the screw (3).

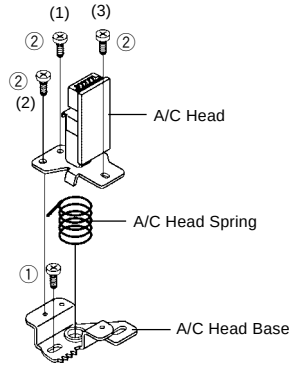

• Screw Torque: 5 ± 0.5kgf•cm (Screw ①)

Fig. 2-11-A

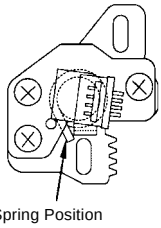

Fig. 2-11-B

2-12: FE HEAD (RECORDER ONLY) (Refer to Fig. 2-12)

1. Remove the screw ①.
2. Remove the FE Head.

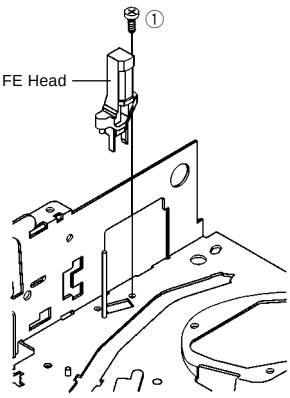

• Screw Torque: 5 ± 0.5kgf•cm
• The FE Head is not installed on the Video Cassette Player.

Fig. 2-12

2-13: CYLINDER UNIT ASS'Y (Refer to Fig. 2-13)

1. Disconnect the following connector: (CD2001)
2. Remove the 3 screws ①.
3. Remove the Cylinder Unit Ass'y.

NOTE

1. When you install the Cylinder Unit Ass'y, tighten the screws from (1) to (3) in order while pulling the Ass'y toward the left front direction.

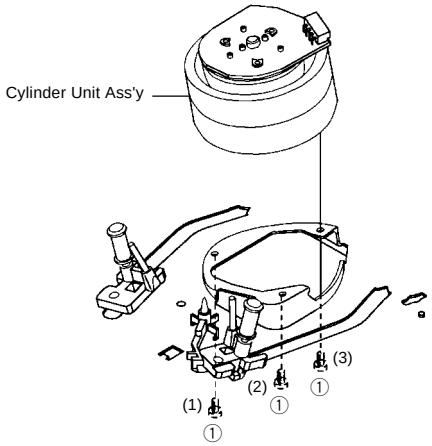

• Screw Torque: 3 ± 0.5kgf•cm

Fig. 2-13

DISASSEMBLY INSTRUCTIONS

2-14: CAPSTAN DD UNIT (Refer to Fig. 2-14-A)

1. Remove the Capstan Belt.
2. Remove the 3 screws ①.
3. Remove the Capstan DD Unit.

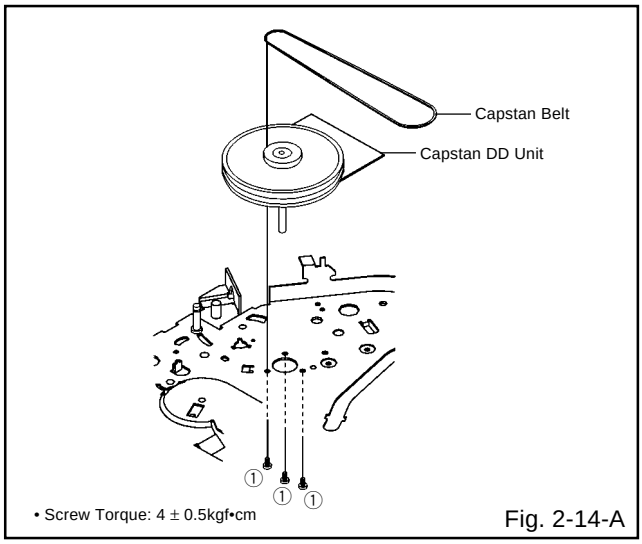

Fig. 2-14-A

NOTE

1. In case of the Capstan DD Unit installation, apply the silicon bond (TSE3843-W) on the position Fig. 2-14-B correctly. (If no silicon bond applied, abnormal noise will be heard on the deck operation.) **(Refer to Fig. 2-14-B, C)**

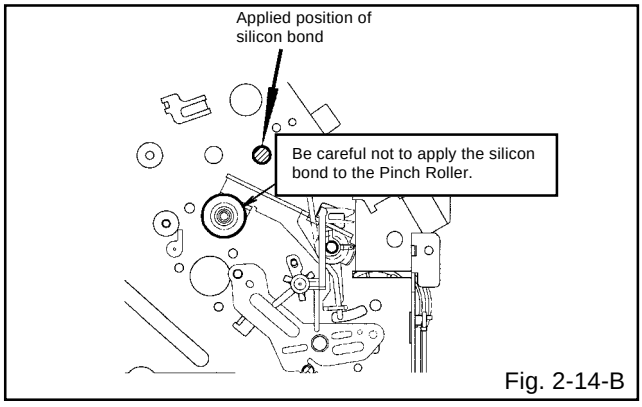

Fig. 2-14-B

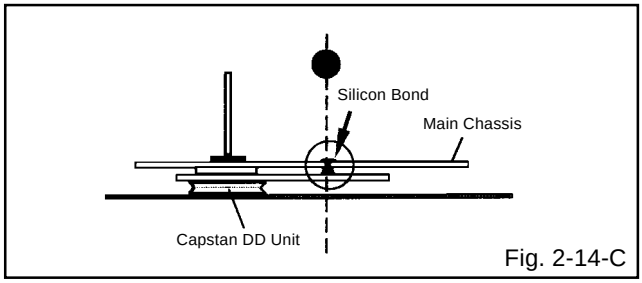

Fig. 2-14-C

2-15: MAIN CAM/PINCH ROLLER CAM/JOINT GEAR (Refer to Fig. 2-15-A)

1. Remove the E-Ring ①, then remove the Main Cam.
2. Remove the E-Ring ②, then remove the Pinch Roller Cam and Joint Gear.

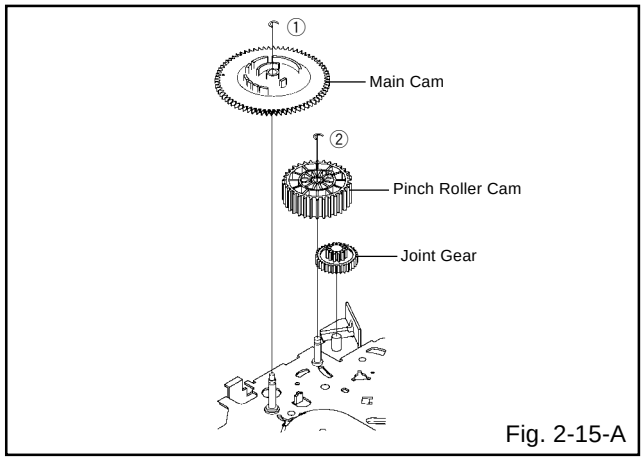

Fig. 2-15-A

NOTE

1. In case of the Pinch Roller Cam and Main Cam installation, install them as the circled section of Fig. 2-15-B so that the each markers are met. **(Refer to Fig. 2-15-B)**

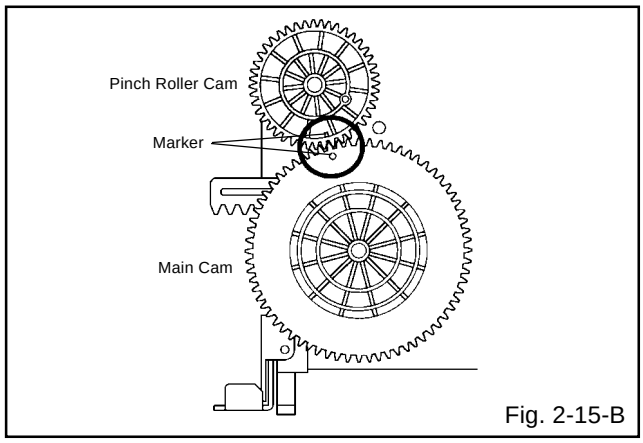

Fig. 2-15-B

2-16: LOADING GEAR S/T UNIT (Refer to Fig. 2-16-A)

1. Remove the E-Ring ① and remove the Main Loading Gear.
2. Remove the Main Rod, Tension Lever, Loading Arm S Unit and Loading Arm T Unit.

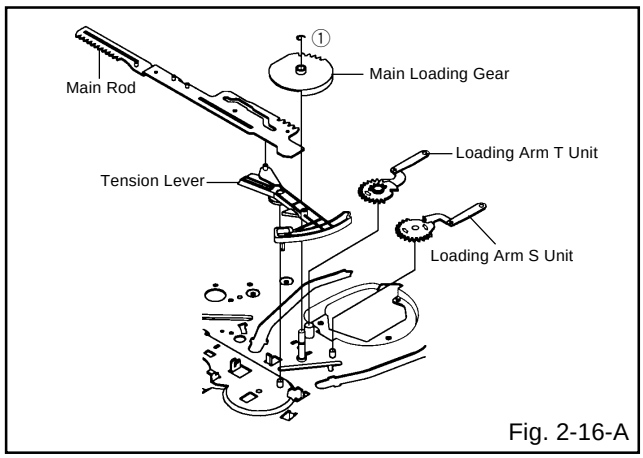

Fig. 2-16-A

DISASSEMBLY INSTRUCTIONS

NOTE

1. When you install the Loading Arm S Unit, Loading Arm T Unit and Main Loading Gear, align each marker. **(Refer to Fig. 2-16-B)**

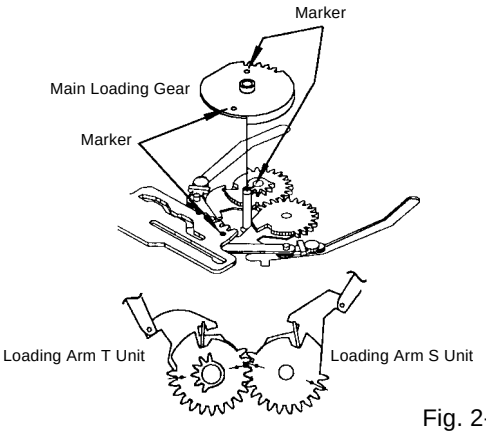

Fig. 2-16-B

2-17: CLUTCH ASS'Y/RING SPRING/CLUTCH LEVER/ CLUTCH GEAR (Refer to Fig. 2-17-A)

1. Remove the Polyslider Washer ①.
2. Remove the Clutch Ass'y and Ring Spring.
3. Remove the Clutch Lever.
4. Remove the Coupling Gear, Coupling Spring and Clutch Gear.

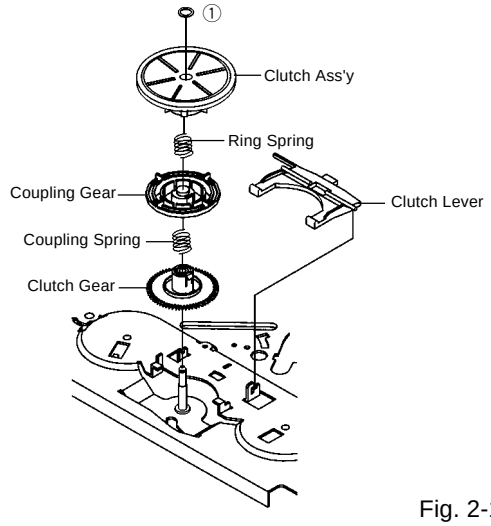

Fig. 2-17-A

NOTE

1. In case of the Clutch Ass'y installation, install it with inserting the spring of the Clutch Ass'y into the dent of the Coupling Gear. **(Refer to Fig. 2-17-B)**

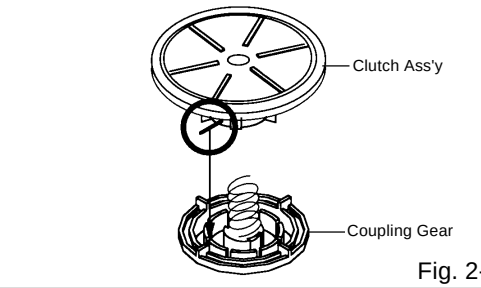

Fig. 2-17-B

2-18: CASSETTE GUIDE POST/INCLINED BASE S/T UNIT/P4 CAP (Refer to Fig. 2-18-A)

1. Remove the P4 Cap.
2. Unlock the support ① and remove the Cassette Guide Post.
3. Remove the Inclined Base S Unit and Inclined Base T Unit.

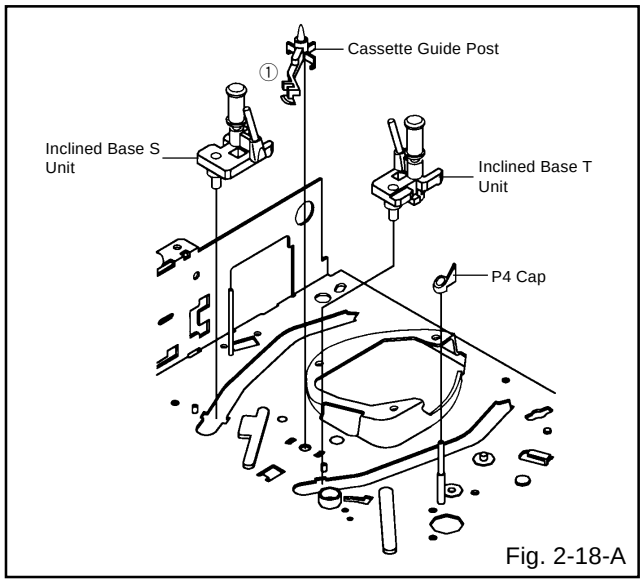

Fig. 2-18-A

NOTE

1. Do not touch the roller of Guide Roller.
2. In case of the P4 Cap installation, install it with parallel for "A" and "B" of Fig. 2-18-B.
3. In case of the Cassette Guide Post installation, install correctly as the circled section of Fig. 2-18-C.

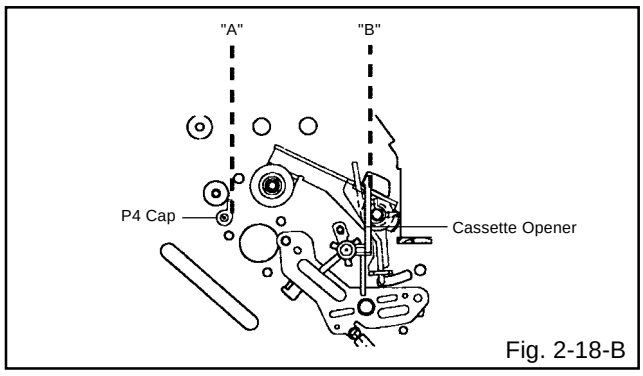

Fig. 2-18-B

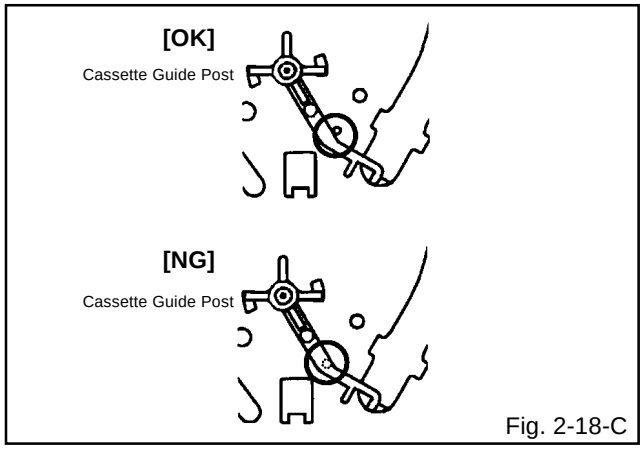

Fig. 2-18-C

DISASSEMBLY INSTRUCTIONS

3. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 3-1.)**
   Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground.
   While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.
   A cracking noise will be heard as the voltage is discharged.

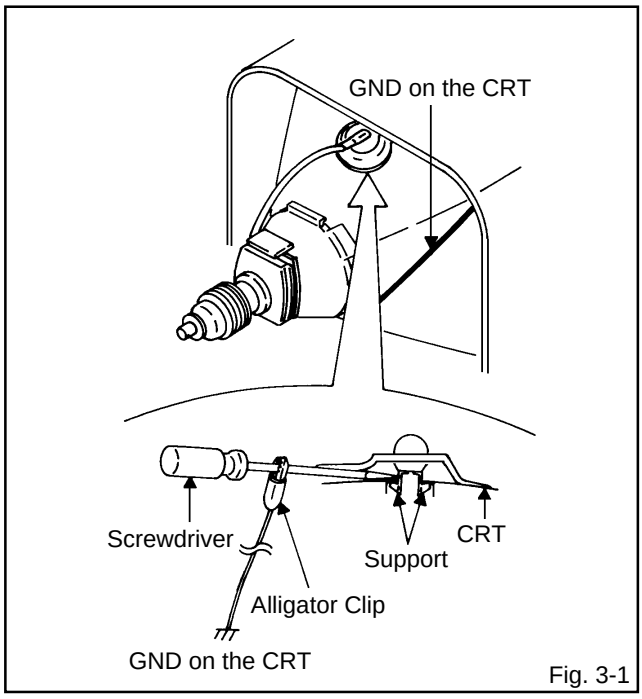

Fig. 3-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 3-2.)**

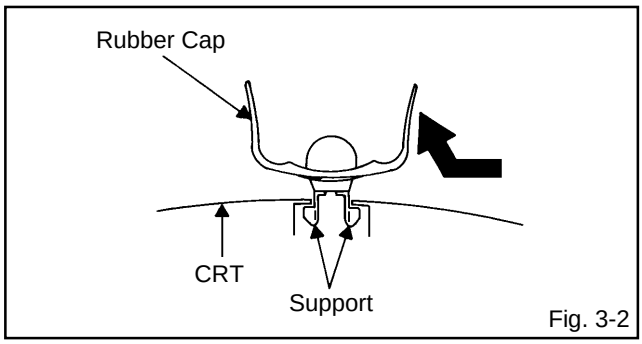

Fig. 3-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 3-3.)**

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

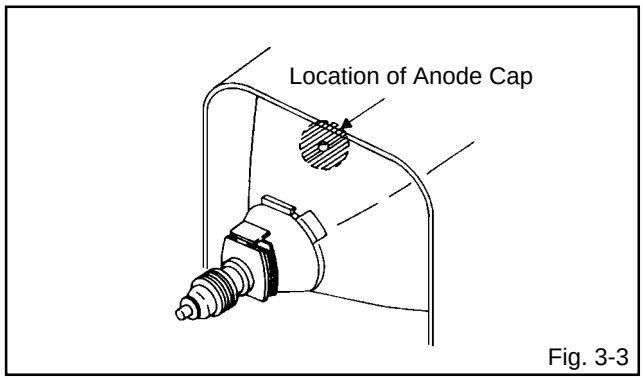

Fig. 3-3

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 3-4.)**

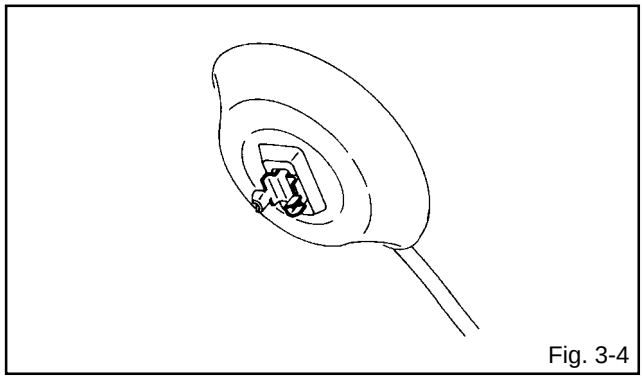
Fig. 3-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 3-5**.

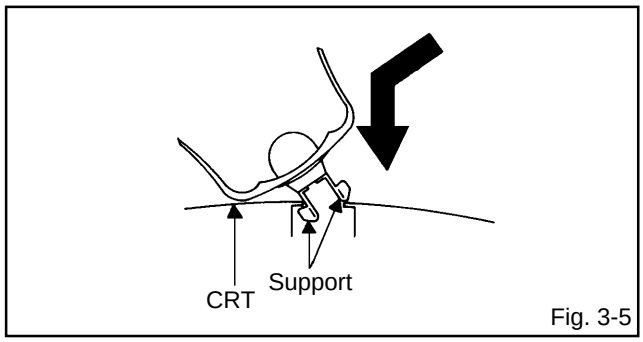

Fig. 3-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS

4. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. **(Refer to Fig. 4-1.)**

   NOTE

   Masking is carried out on all the parts located within 10 mm distance from IC leads.

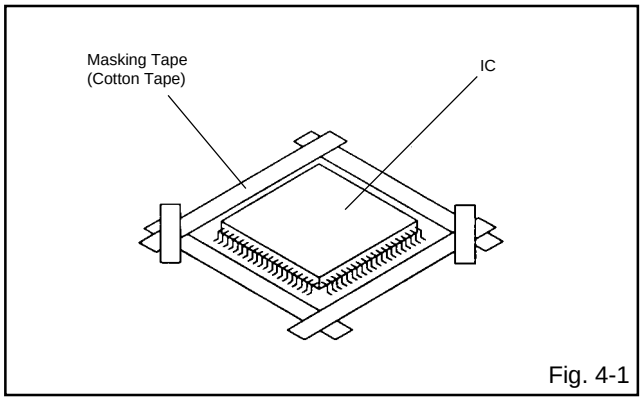

Fig. 4-1

2. Heat the IC leads using a blower type IC desoldering machine. **(Refer to Fig. 4-2.)**

   NOTE

   Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

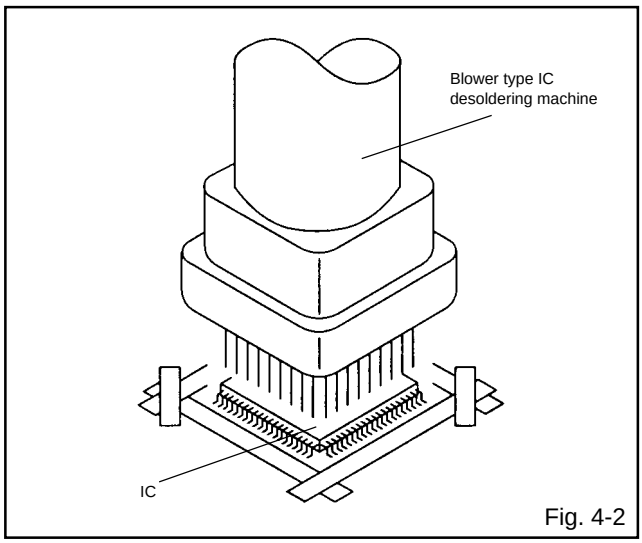

Fig. 4-2

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. **(Refer to Fig. 4-3.)**

   NOTE

   Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

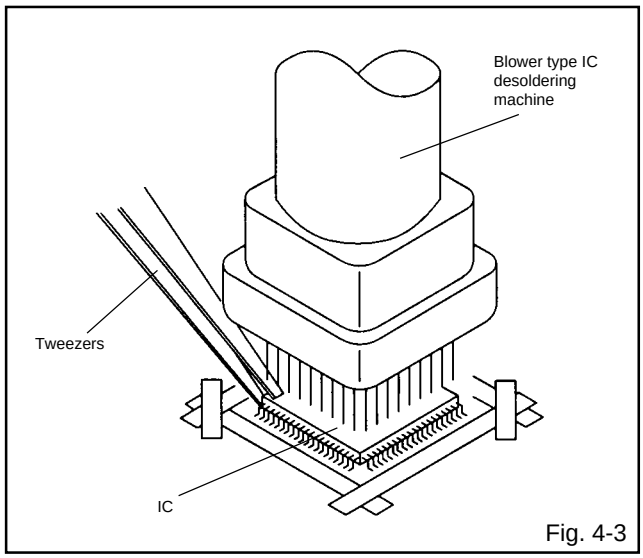

Fig. 4-3

4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. **(Refer to Fig. 4-4.)**

   NOTE

   Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

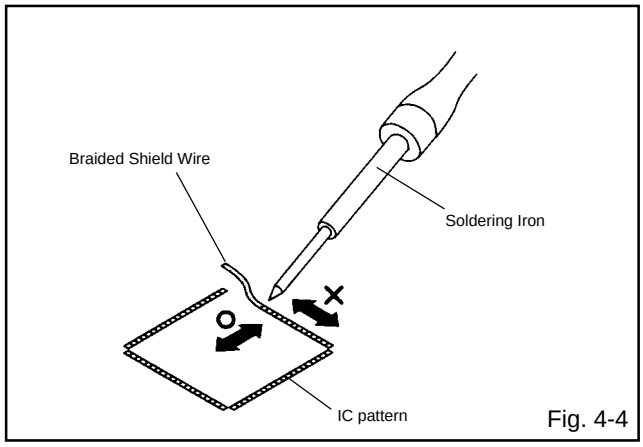

Fig. 4-4

DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. **(Refer to Fig. 4-5.)**

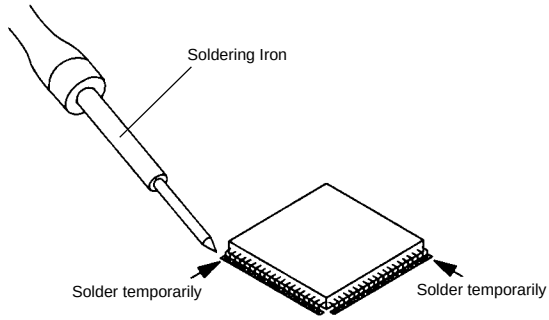

Fig. 4-5

2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. **(Refer to Fig. 4-6.)**

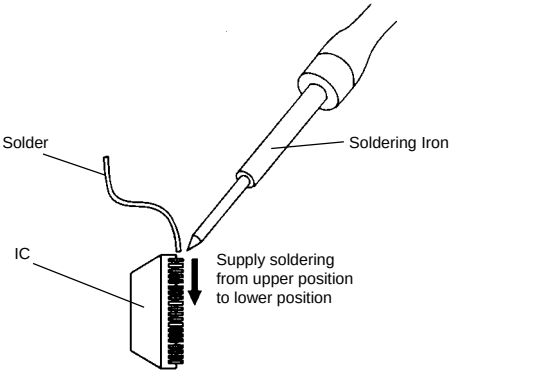

Fig. 4-6

3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 4-7.)**

   NOTE

   Do not absorb the solder to excess.

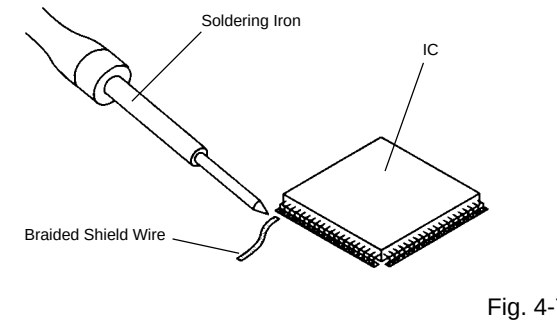

Fig. 4-7

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 4-8.)**

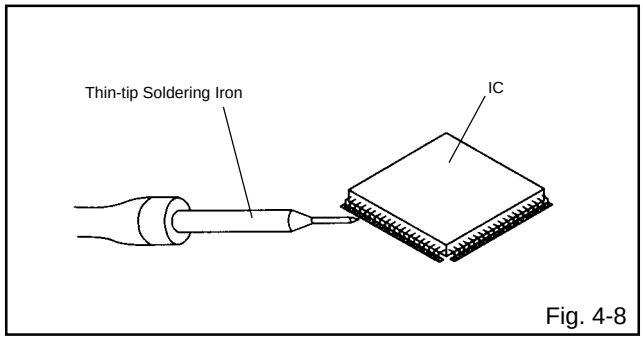

Fig. 4-8

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass.
   Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

   NOTE

   When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

KEY TO ABBREVIATIONS

A	**A/C**	:	Audio/Control
	ACC	:	Automatic Color Control
	AE	:	Audio Erase
	AFC	:	Automatic Frequency Control
	AFT	:	Automatic Fine Tuning
	AFT DET	:	Automatic Fine Tuning Detect
	AGC	:	Automatic Gain Control
	AMP	:	Amplifier
	ANT	:	Antenna
	A.PB	:	Audio Playback
	APC	:	Automatic Phase Control
	ASS'Y	:	Assembly
	AT	:	All Time
	AUTO	:	Automatic
	A/V	:	Audio/Video
B	**BGP**	:	Burst Gate Pulse
	BOT	:	Beginning of Tape
	BPF	:	Bandpass Filter
	BRAKE SOL	:	Brake Solenoid
	BUFF	:	Buffer
	B/W	:	Black and White
C	**C**	:	Capacitance, Collector
	CASE	:	Cassette
	CAP	:	Capstan
	CARR	:	Carrier
	CH	:	Channel
	CLK	:	Clock
	CLOCK (SY-SE)	:	Clock (Syscon to Servo)
	COMB	:	Combination, Comb Filter
	CONV	:	Converter
	CPM	:	Capstan Motor
	CTL	:	Control
	CYL	:	Cylinder
	CYL-M	:	Cylinder-Motor
	CYL SENS	:	Cylinder-Sensor
D	**DATA (SY-CE)**	:	Data (Syscon to Servo)
	dB	:	Decibel
	DC	:	Direct Current
	DD Unit	:	Direct Drive Motor Unit
	DEMOD	:	Demodulator
	DET	:	Detector
	DEV	:	Deviation
E	**E**	:	Emitter
	EF	:	Emitter Follower
	EMPH	:	Emphasis
	ENC	:	Encoder
	ENV	:	Envelope
	EOT	:	End of Tape
	EQ	:	Equalizer
	EXT	:	External
F	**F**	:	Fuse
	FBC	:	Feed Back Clamp
	FE	:	Full Erase
	FF	:	Fast Forward, Flip-flop
	FG	:	Frequency Generator
	FL SW	:	Front Loading Switch
	FM	:	Frequency Modulation
	FSC	:	Frequency Sub Carrier
	FWD	:	Forward
G	**GEN**	:	Generator
	GND	:	Ground
H	**H.P.F**	:	High Pass Filter
	H.SW	:	Head Switch
	Hz	:	Hertz
I	**IC**	:	Integrated Circuit
	IF	:	Intermediate Frequency
	IND	:	Indicator
	INV	:	Inverter
K	**KIL**	:	Killer
L	**L**	:	Left
	LED	:	Light Emitting Diode
	LIMIT AMP	:	Limiter Amplifier
	LM, LDM	:	Loading Motor
	LP	:	Long Play
	L.P.F	:	Low Pass Filter
	LUMI.	:	Luminance
M	**M**	:	Motor
	MAX	:	Maximum
	MINI	:	Minimum
	MIX	:	Mixer, mixing
	MM	:	Monostable Multivibrator
	MOD	:	Modulator, Modulation
	MPX	:	Multiplexer, Multiplex
	MS SW	:	Mecha State Switch
N	**NC**	:	Non Connection
	NR	:	Noise Reduction
O	**OSC**	:	Oscillator
	OPE	:	Operation
P	**PB**	:	Playback
	PB CTL	:	Playback Control
	PB-C	:	Playback-Chrominance
	PB-Y	:	Playback-Luminance
	PCB	:	Printed Circuit Board
	P. CON	:	Power Control
	PD	:	Phase Detector
	PG	:	Pulse Generator
	P-P	:	Peak-to Peak
R	**R**	:	Right
	REC	:	Recording
	REC-C	:	Recording-Chrominance
	REC-Y	:	Recording-Luminance
	REEL BRK	:	Reel Brake
	REEL S	:	Reel Sensor
	REF	:	Reference
	REG	:	Regulated, Regulator
	REW	:	Rewind
	REV, RVS	:	Reverse
	RF	:	Radio Frequency
	RMC	:	Remote Control
	RY	:	Relay
S	**S. CLK**	:	Serial Clock
	S. COM	:	Sensor Common
	S. DATA	:	Serial Data
	SEG	:	Segment
	SEL	:	Select, Selector
	SENS	:	Sensor
	SER	:	Search Mode
	SI	:	Serial Input
	SIF	:	Sound Intermediate Frequency
	SO	:	Serial Output
	SOL	:	Solenoid
	SP	:	Standard Play
	STB	:	Serial Strobe
	SW	:	Switch

KEY TO ABBREVIATIONS

S	**SYNC**	:	Synchronization
	SYNC SEP	:	Sync Separator, Separation
T	**TR**	:	Transistor
	TRAC	:	Tracking
	TRICK PB	:	Trick Playback
	TP	:	Test Point
U	**UNREG**	:	Unregulated
V	**V**	:	Volt
	VCO	:	Voltage Controlled Oscillator
	VIF	:	Video Intermediate Frequency
	VP	:	Vertical Pulse, Voltage Display
	V.PB	:	Video Playback
	VR	:	Variable Resistor
	V.REC	:	Video Recording
	VSF	:	Visual Search Fast Forward
	VSR	:	Visual Search Rewind
	VSS	:	Voltage Super Source
	V-SYNC	:	Vertical-Synchronization
	VT	:	Voltage Tuning
X	**X'TAL**	:	Crystal
Y	**Y/C**	:	Luminance/Chrominance

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

To enter SERVICE MODE, unplug AC cord till lost actual clock time. Then press and hold Vol (-) button of main unit and remocon key simultaneously.

The both pressing of set key and remote control key will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the clock setting, the channel setting, the POWER ON total hours, and PLAY/REC total hours.
VOL. (-) MIN	2	Horizontal position adjustment of OSD. NOTE: Also can be adjusted by using the Adjustment MENU. Refer to the "ELECTRICAL ADJUSTMENT" (OSD HORIZONTAL).
VOL. (-) MIN	3	Adjust the PG SHIFTER automatically. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
VOL. (-) MIN	4	Adjust the PG SHIFTER manually. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
VOL. (-) MIN	5	Adjusting of the Tracking to the center position. NOTE: Also can be adjusted by pressing the ATR button for more than 2 seconds during PLAY.
VOL. (-) MIN	6	POWER ON total hours and PLAY/REC total hours are displayed on the screen. Refer to the "PREVENTIVE CHECKS AND SERVICE INTERVALS" (CONFIRMATION OF HOURS USED). Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

Method	Operations
Make the short circuit between the test point of SERVICE and the GND.	The BOT, EOT, and the Reel Sensor do not work and the deck can be operated without a cassette tape. Refer to the "PREPARATION FOR SERVICING"

PREVENTIVE CHECKS AND SERVICE INTERVALS

The following standard table depends on environmental conditions and usage.
Parts replacing time does not mean the life span for individual parts.
Also, long term storage or misuse may cause transformation and aging of rubber parts.
The following list means standard hours, so the checking hours depends on the conditions.

Time / Parts Name	500 hours	1,000 hours	1,500 hours	2,000 hours	2,500 hours	Notes
Audio Control Head	■	■	■	●	●	Clean those parts in contact with the tape.
Full Erase Head (Recorder only)	■	■	■	●	●	
Capstan Belt		●	●	●	●	Clean the rubber, and parts which the rubber touches.
Pinch Roller	■	●	●	●	●	
Capstan DD Unit		●	●	●	●	
Loading Motor					●	
Tension Band		●	●	●	●	
T Brake Band		●	●	●	●	
Clutch Ass'y		●	●	●	●	
Idler Arm Ass'y		●	●	●	●	
Capstan Shaft	■	■	■	■	■	
Tape Running Guide Post	■	■	■	■	■	Replace when rolling becomes abnormal.
Cylinder Unit	■	●	●	●	●	Clean the Head

■ : Clean
● : Check it and if necessary, replace it.

CONFIRMATION OF HOURS USED

POWER ON total hours and PLAY/REC total hours can be checked on the screen.
Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".
The confirmation of using hours will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and the Channel button **(6)** on the remote control simultaneously.
3. After the confirmation of using hours, turn off the power.

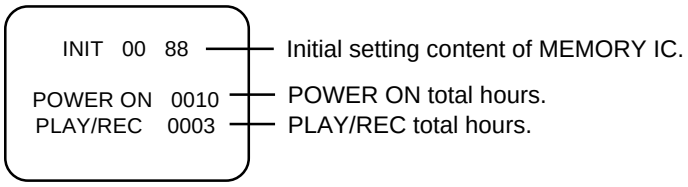

(16 x 16 x 16 x thousands digit value) + (16 x 16 x hundreds digit value) + (16 x tens digit value) + (ones digit value)

PREVENTIVE CHECKS AND SERVICE INTERVALS

CLEANING

NOTE

After cleaning the heads with isopropyl alcohol, do not run a tape until the heads dry completely. If the heads are not completely dry and alcohol gets on the tape, damage may occur.

1. AUDIO CONTROL HEAD

Clean the Audio Control Head with the cotton stick soaked by alcohol. Clean the full erase head in the same manner. **(Refer to the figure below.)**

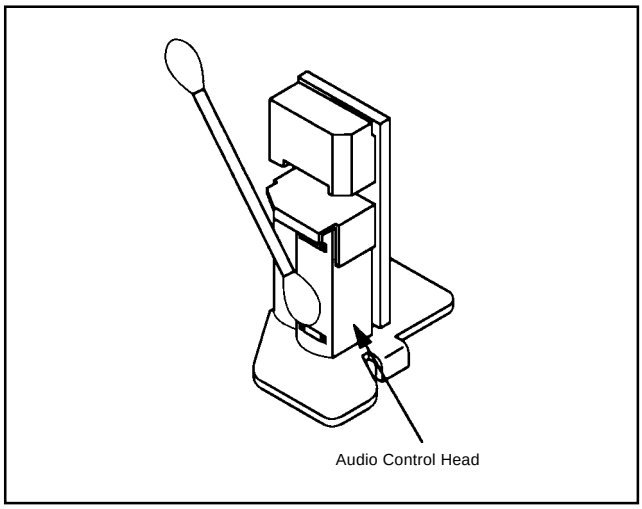

2. TAPE RUNNING SYSTEM

When cleaning the tape transport system, use the gauze moistened with isopropyl alcohol.

3. CYLINDER

Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol. Hold it to the cylinder head softly. Turn the cylinder head counterclockwise to clean it (in the direction of the arrow). **(Refer to the figure below.)**

NOTE

Do not exert force against the cylinder head. Do not move the chamois upward or downward on the head.
Use the chamois one by one.

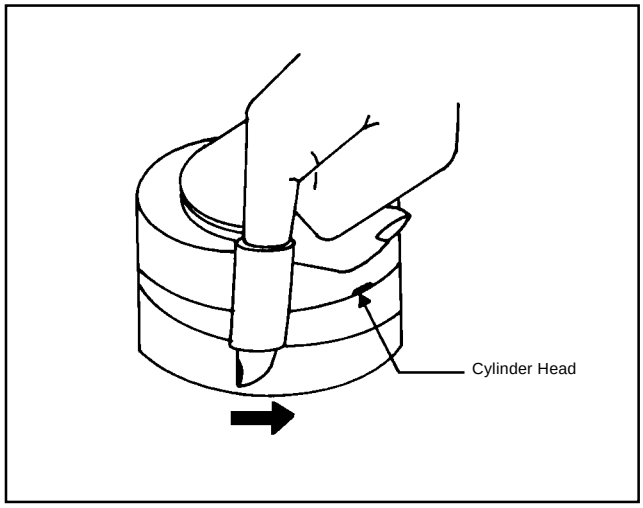

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: Initial Data setting will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	88	1A	F2	63	4B	14	34	89	51	3A	10	66	56	40	00	29
10	AB	9A	91	86	00	00	30	05	08	06	AC	0F	A5	41	06	0C
20	06	29	01	15	0A	60	32	3A	BA	D7	18	1D	28	2D	2E	2F
30	30	31	33	35	37	39	3B	3D	3F	40	41	42	43	44	45	46
40	47	47	49	4A	4B	4C	4D	4E	4F	50	51	52	53	54	55	56
50	57	58	59	5A	5B	5C	5D	5E	5F	60	61	62	63	64	65	66
60	67	67	68	68	69	69	6A	6A	6B	6B	---	---	---	---	---	---

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. While holding down VOLUME button on front cabinet, press key 6 on remote control simultaneously. ADDRESS and DATA should appear as FIG 1.

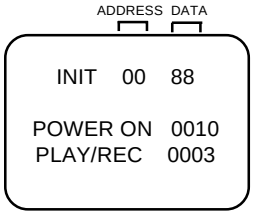

Fig. 1

3. ADDRESS is now selected and should "blink". Using the PLAY or STOP button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using PLAY or STOP until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.

The unit will now have the correct DATA for the new MEMORY IC.

SERVICING FIXTURES AND TOOLS

Alignment Tape 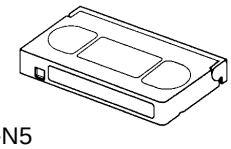 ST-N5 ST-NF	Back tension cassette gauge 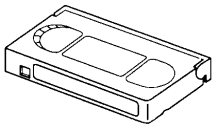 70909103	Torque cassette gauge (KT-300NR) 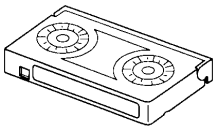 70909199	Taper nut driver 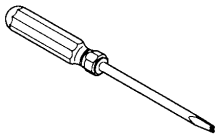 70909228
VTR cleaning kit 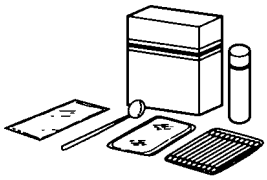	VTR lubrication kit 	Grease 	JG002B Adapter JG002E Dial Torque Gauge (10~90gf•cm) JG002F (60~600gf•cm) 
JG022 Master Plane 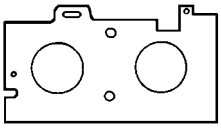	JG024A Reel Disk Height Adjustment Jig 	JG153 X Value Adjustment Screwdriver 	JG154 Cable 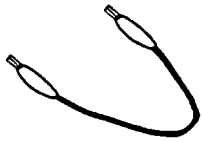
Tentelometer 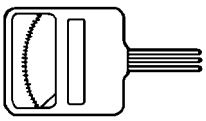			

Ref. No.	Part No.	Parts Name	Remarks
JG002B	APJG002B00	Adapter	VSR Torque, Brake Torque (S Reel/T Reel Ass'y)
JG002E	APJG002E00	Dial Torque Gauge (10~90gf•cm)	Brake Torque (T Reel Ass'y)
JG002F	APJG002F00	Dial Torque Gauge (60~600gf•cm)	VSR Torque, Brake Torque (S Reel)
JG022	APJG022000	Master Plane	Reel Disk Height Adjustment
JG024A	APJG024A00	Reel Disk Height Adjustment Jig	Reel Disk Height Adjustment
JG153	APJG153000	X Value Adjustment Screwdriver	X Value Adjustment
JG154	APJG154000	Cable	Used to connect the test point of SERVICE and GROUND

PREPARATION FOR SERVICING

How to use the Servicing Fixture

1. Remove the Main PCB and Syscon PCB from the set.
   Be sure to place the parts on a paper so that they have no short-circuit each other.
2. Short circuit between **TP1001** and **Ground** with the cable JG154.
   (The BOT, EOT, and the Reel Sensor do not work and the deck can be operated without a cassette tape.)
3. In case of using a cassette tape, press the STOP/EJECT button to insert or eject a cassette tape.
   Turn on the power and re-check the cable before checking the trouble points.

MECHANICAL ADJUSTMENTS

1. CONFIRMATION AND ADJUSTMENT

Read the following NOTES before starting work.

- Place an object which weighs between 450g~500g on the Cassette Tape to keep it steady when you want to make the tape run without the Cassette Holder. (Do not place an object which weighs over 500g.)

1-1: CONFIRMATION AND ADJUSTMENT OF REEL DISK HEIGHT

1. Turn on the power and set to the STOP mode.
2. Set the master plane **(JG022)** and reel disk height adjustment jig **(JG024A)** on the mechanism framework, taking care not to scratch the drum, as shown in **Fig. 1-1-A**.
3. While turning the reel and confirm the following points. Check if the surface "A" of reel disk is lower than the surface "B" of reel disk height adjustment jig **(JG024A)** and is higher than the surface "C". If it is not passed, place the height adjustment washers and adjust to 10(+2, -0)mm.
4. Adjust the other reel in the same way.

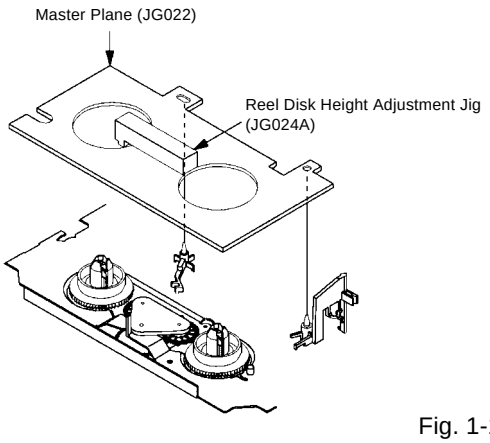

Fig. 1-1-A

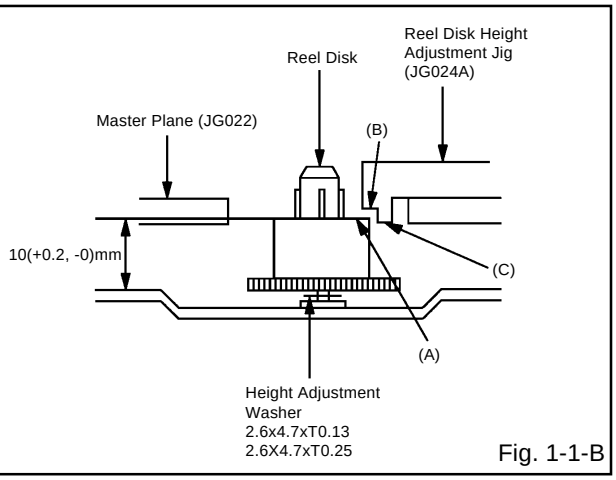

Fig. 1-1-B

1-2: CONFIRMATION AND ADJUSTMENT OF TENSION POST POSITION

1. Set to the PLAY mode.
2. Adjust the adjusting section for the Tension Arm position so that the Tension Arm top is within the standard line of Main Chassis.
3. While turning the S Reel clockwise, confirm that the edge of the Tension Arm is located in the position described above.

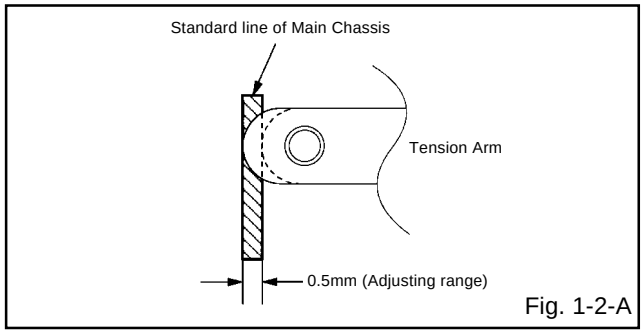

Fig. 1-2-A

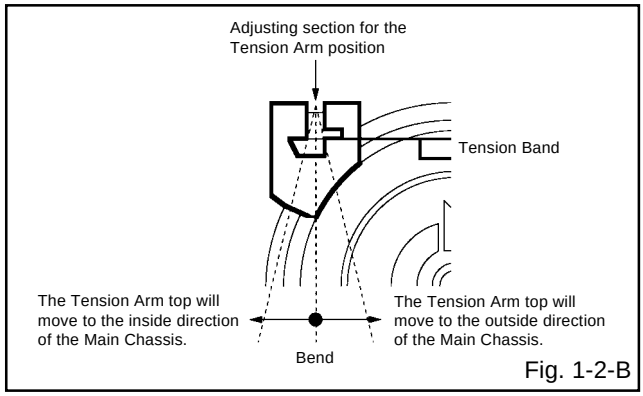

Fig. 1-2-B

1-3: CONFIRMATION OF PLAYBACK TORQUE AND BACK TENSION TORQUE DURING PLAYBACK

1. Load a video tape (T-120) recorded in standard speed mode. Set the unit to the PLAY mode.
2. Install the tentelometer as shown in **Fig. 1-3**. Confirm that the meter indicates 20 ± 2gf in the beginning of playback.

• USING A CASSETTE TYPE TORQUE TAPE **(KT-300NR)**

1. After confirmation and adjustment of Tension Post position **(Refer to item 1-2)**, load the cassette type torque tape **(KT-300NR)** and set to the PLAY mode.
2. Confirm that the right meter of the torque tape indicates 50~90gf•cm during playback in SP mode.
3. Confirm that the left meter of the torque tape indicates 25~40gf•cm during playback in SP mode.

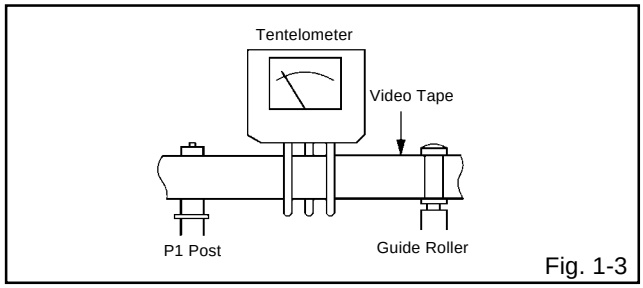

Fig. 1-3

MECHANICAL ADJUSTMENTS

1-4: CONFIRMATION OF VSR TORQUE

1. Install the Torque Gauge **(JG002F)** and Adapter **(JG002B)** on the S Reel. Set to the Picture Search (Rewind) mode. **(Refer to Fig.1-4-B)**
2. Then, confirm that it indicates 120~180gf•cm.

NOTE

Install the Torque Gauge on the reel disk firmly. Press the REW button to turn the reel disk.

1-5: CONFIRMATION OF REEL BRAKE TORQUE

(S Reel Brake) **(Refer to Fig. 1-4-B)**

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of **Fig. 1-4-A**.
2. Move the Idler Ass'y from the S Reel.
3. Install the Torque Gauge **(JG002F)** and Adapter **(JG002B)** on the S Reel. Turn the Torque Gauge **(JG002F)** clockwise.
4. Then, confirm that it indicates 60~100gf•cm.

(T Reel Brake) **(Refer to Fig. 1-4-B)**

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of **Fig. 1-4-A**.
2. Move the Idler Ass'y from the T Reel.
3. Install the Torque Gauge **(JG002E)** and Adapter **(JG002B)** on the T reel. Turn the Torque Gauge **(JG002E)** counterclockwise.
4. Then, confirm that it indicates 30~50gf•cm.

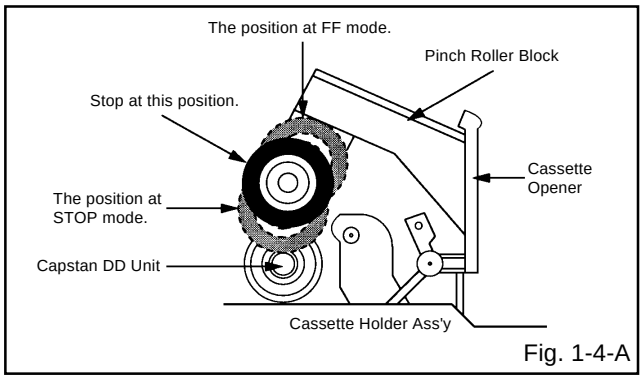

Fig. 1-4-A

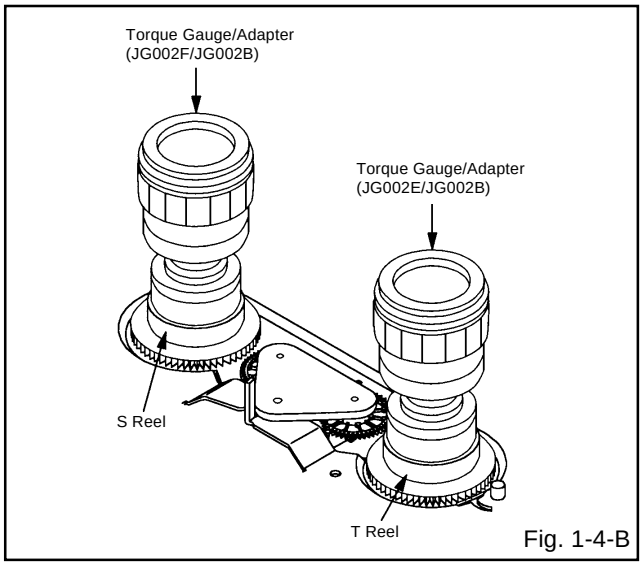

Fig. 1-4-B

NOTE

If the torque is out of the range, replace the following parts.

Check item	Replacement Part
1-4	Idler Ass'y/Clutch Ass'y
1-5	S Reel side: S Reel/Tension Band/Tension Connect/Tension Arm Ass'y T Reel side: T Reel/T Brake Band//T Brake Spring/T Brake Arm

2. CONFIRMATION AND ADJUSTMENT OF TAPE RUNNING MECHANISM

Tape Running Mechanism is adjusted precisely at the factory. Adjustment is not necessary as usual. When you replace the parts of the tape running mechanism because of long term usage or failure, the confirmation and adjustment are necessary.

2-1: GUIDE ROLLER

1. Playback the VHS Alignment Tape.
2. Connect CH-1 of the oscilloscope to **TP4001 (Envelope)** and CH-2 to **TP1002 (SW Pulse)**.
3. Press both VOL. DOWN button on the set and the Channel button **(5)** on the remote control simultaneously to set tracking to center.
4. Trigger with SW Pulse and observe the envelope. **(Refer to Fig. 2-1-A)**
5. When observing the envelope, adjust the Taper Nut Driver slightly until the envelope will be flat. Even if you press the Tracking Button, adjust so that flatness is not moved so much.
6. Adjust so that the A : B ratio is better than 3 : 2 as shown in **Fig. 2-1-B**, even if you press the Tracking Button to move the envelope (The envelope waveform will begin to decrease when you press the Tracking Button).
7. Adjust the PG shifter during playback. **(Refer to the ELECTRICAL ADJUSTMENTS)**

NOTE

After adjustment, confirm and adjust A/C head. **(Refer to item 2-2)**

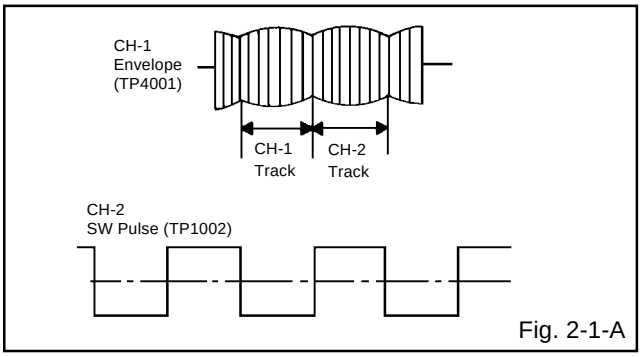

Fig. 2-1-A

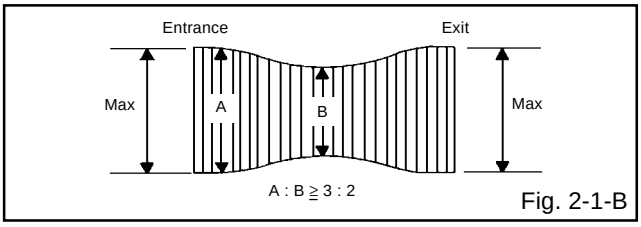

Fig. 2-1-B

MECHANICAL ADJUSTMENTS

2-2: CONFIRMATION AND ADJUSTMENT OF AUDIO/ CONTROL HEAD

When the Tape Running Mechanism does not work well, adjust the following items.

1. Playback the VHS Alignment Tape.
2. Confirm that the reflected picture of stamp mark is appeared on the tape prior to P4 Cap as shown in **Fig. 2-2-A**.
   a) When the reflected picture is distorted, turn the screw ① clockwise until the distortion is disappeared.
   b) When the reflected picture is not distorted, turn the screw ① counterclockwise until little distortion is appeared, then adjust the a).
3. Turn the screw ② to set the audio level to maximum.
4. Confirm that the bottom of the Audio/ Control Head and the bottom of the tape is shown in **Fig. 2-2-C**.
   c) When the height is not correct, turn the screw ③ to adjust the height. Then, adjust the 1~3 again.

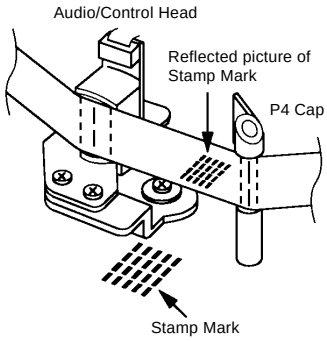

Fig. 2-2-A

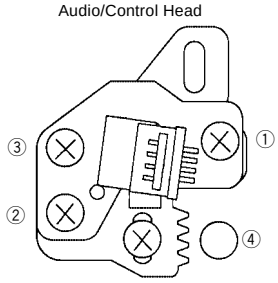

Fig. 2-2-B

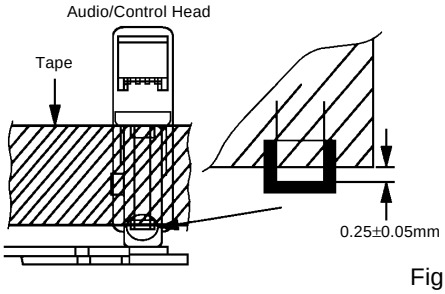

Fig. 2-2-C

2-3: TAPE RUNNING ADJUSTMENT (X VALUE ADJUSTMENT)

1. Confirm and adjust the height of the Reel Disk. **(Refer to item 1-1)**
2. Confirm and adjust the position of the Tension Post. **(Refer to item 1-2)**
3. Adjust the Guide Roller. **(Refer to item 2-1)**
4. Confirm and adjust the Audio/Control Head. **(Refer to item 2-2)**
5. Connect CH-1 of the oscilloscope to **TP1002**, CH-2 to **TP4001** and CH-3 to **HOT side of Audio Out Jack**.
6. Playback the VHS Alignment Tape.
7. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
8. Set the X Value adjustment driver **(JG153)** to the ④ of **Fig. 2-2-B**. Adjust X value so that the envelope waveform output becomes maximum. Check if the relation between Audio and Envelope waveform becomes (1) or (2) of **Fig. 2-3**.

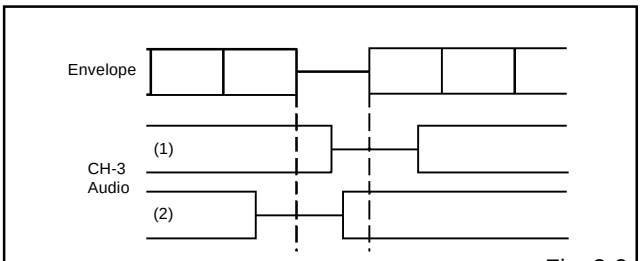

Fig. 2-3

MECHANICAL ADJUSTMENTS

3. MECHANISM ADJUSTMENT PARTS LOCATION GUIDE

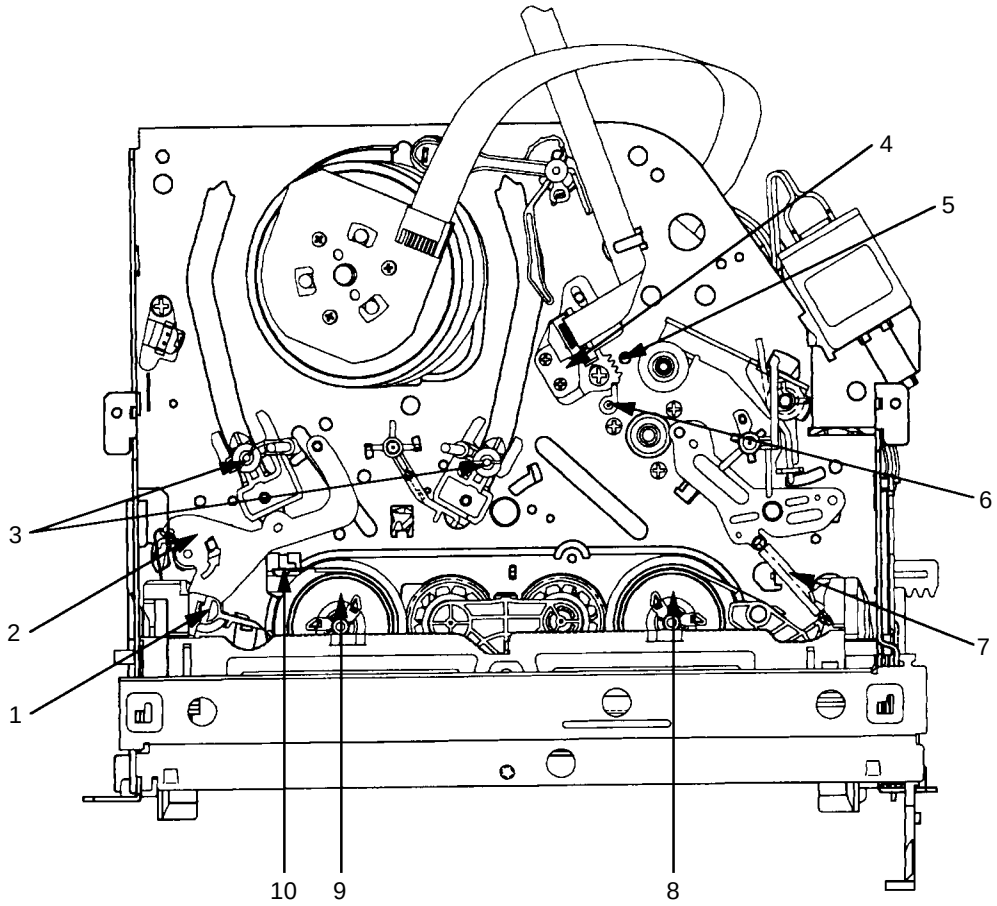

1. Tension Connect
2. Tension Arm
3. Guide Roller
4. Audio/Control Head
5. X value adjustment driver hole
6. P4 Post
7. T Brake Spring
8. T Reel
9. S Reel
10. Adjusting section for the Tension Arm position

ELECTRICAL ADJUSTMENTS

1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

On-Screen Display Adjustment

1. Unplug the AC plug for more than 5 seconds to set the clock to the non-setting state. Then, set the volume level to minimum.
2. Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control simultaneously to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

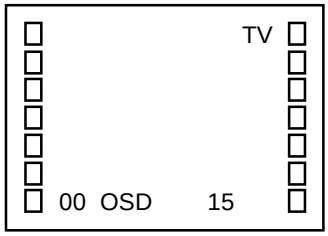

Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button **(0-9)** on the remote control to select the options shown in **Fig. 1-2**.
4. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	13	BRIGHTNESS
01	CUT OFF	14	CONTRAST
02	RF AGC	15	COLOR
03	VIF VCO	16	TINT
04	H VCO	17	SHARPNESS
05	H PHASE	18	FM LEVEL
06	V SIZE	19	LEVEL
07	V SHIFT	20	SEPARATION 1
08	R DRIVE	21	SEPARATION 2
09	B DRIVE	22	TEST MONO
10	R CUT OFF	23	TEST STEREO
11	G CUT OFF	24	X-RAY TEST
12	B CUT OFF		

Fig. 1-2

2. BASIC ADJUSTMENTS (VCR SECTION)

2-1: PG SHIFTER

1. Connect CH-1 on the oscilloscope to **TP1002** and CH-2 to **pin 6 of CP602**.
2. Playback the alignment tape.
3. Press both VOL. DOWN button on the set and the Channel button **(5)** on the remote control simultaneously to set tracking to center.
4. Press the VOL. DOWN button on the set and the channel button **(3)** on the remote control simultaneously until the indicator REC disappears. If the indicator REC disappears, adjustment is completed.

(If the above adjustments doesn't work well:)

5. Press the VOL. DOWN button on the set and the channel button **(3)** on the remote control simultaneously until the indicator REC disappears.
6. When the REC indicator is blinking, press both VOL. DOWN button on the set and the channel button **(4)** on the remote control simultaneously and adjust the Tracking +/- button until the arising to the down of Head Switching Pulse becomes 6.5 ± 0.5H.
   (Refer to Fig. 2-1-A, B)
7. Press the Tracking Auto button.

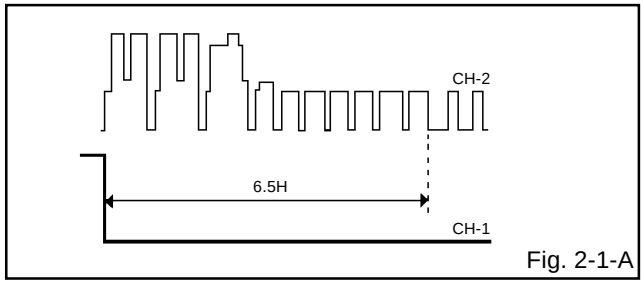

Fig. 2-1-A

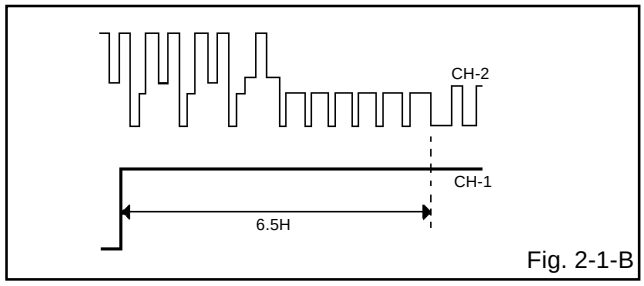

Fig. 2-1-B

2-2: VCO FREERUN

1. Receive the VHF HIGH (63dB).
2. Place the set with Aging Test for more than 10 minutes.
3. Connect the digital voltmeter between the **pin 7 of CP602** and the **pin 1 (GND) of CP602**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(03)** on the remote control to select "VIF VCO".
5. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is 2.5V.
6. After the 2.5V adjustment, countdown the VIF VCO step No. by 1 step with the VOL. DOWN button.

ELECTRICAL ADJUSTMENTS

2-3: RF AGC

1. Receive the VHF HIGH (63dB).
2. Connect the digital voltmeter between the **pin 5 of CP602** and the **pin 1 (GND) of CP602**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(02)** on the remote control to select "RF AGC".
4. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is 2.5 ± 0.05V.

(TV SECTION)

2-4: CONSTANT VOLTAGE

1. Input DC12V to DC Jack and turn the Power ON.
2. Connect the digital voltmeter to **R544**.
3. Set condition is AV MODE without signal.
4. Adjust the **VR501** until the DC voltage is 134 ± 0.5V.
5. Input AC120V to AC cord and remove the DC Jack cord. Check if the Power is ON before doing the above procedure.
6. Adjust the **VR502** until the DC voltage is 135 ± 0.5V.

2-5: CUT OFF

1. Adjust the unit to the following settings.
   R CUT OFF=128, G CUT OFF=128, B CUT OFF=128, R DRIVE=64, B DRIVE=64, BRIGHTNESS=128, CONTRAST=100
2. Place the set with Aging Test for more than 15 minutes.
3. Set condition is AV MODE without signal.
4. Using the remote control, set the brightness and contrast to normal position.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(01)** on the remote control to select "CUT OFF".
6. Adjust the **Screen Volume** until a dim raster is obtained.

2-6: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(10)** on the remote control to select "R CUT OFF".
5. Press the CH. UP/DOWN button on the remote control to select the "R CUT OFF", "G CUT OFF", "B CUT OFF", "R DRIVE" or "G DRIVE".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R CUT OFF, G CUT OFF, B CUT OFF, R DRIVE, and G DRIVE at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-7: FOCUS

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Turn the Focus Volume fully counterclockwise once.
4. Adjust the **Focus Volume** until picture is distinct.

2-8: HORIZONTAL PHASE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(05)** on the remote control to select "H PHASE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

2-9: VERTICAL SHIFT

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select "V SHIFT".
4. Check if the step No. V. SHIFT is "0".
5. Adjust the **VR402** until the horizontal line becomes fit to the notch of the shadow mask.

2-10: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select "V SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes 10 ± 2%.

2-11: VERTICAL LINEARITY

NOTE: Adjust after performing adjustments in section 2-10. After the adjustment of Vertical Linearity, reconfirm the Vertical Shift and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the **VR401** until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-12: SUB BRIGHTNESS

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(13)** on the remote control to select "BRIGHTNESS".
4. Press the VOL. UP/DOWN button on the remote control until the white 10% is starting to be visible.
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.

ELECTRICAL ADJUSTMENTS

2-13: SUB CONTRAST

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(14)** on the remote control to select "CONTRAST".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "100".
3. Receive a broadcast and check if the picture is normal.
4. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 1~3.

2-14: SUB TINT

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP803**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "TINT".
5. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes a straight line. **(Refer to Fig. 2-2)**
6. Receive the color bar pattern. (Audio Video Input)
7. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~5.

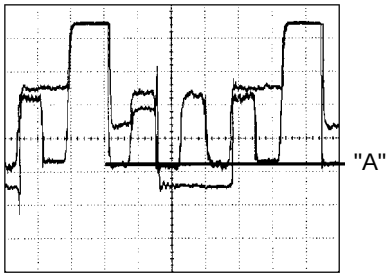

Fig. 2-2

2-15: SUB COLOR

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP801**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(15)** on the remote control to select "COLOR".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
6. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 110 ± 10% of the white level. **(Refer to Fig. 2-3)**
7. Receive the color bar pattern. (Audio Video Input)
8. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~6.

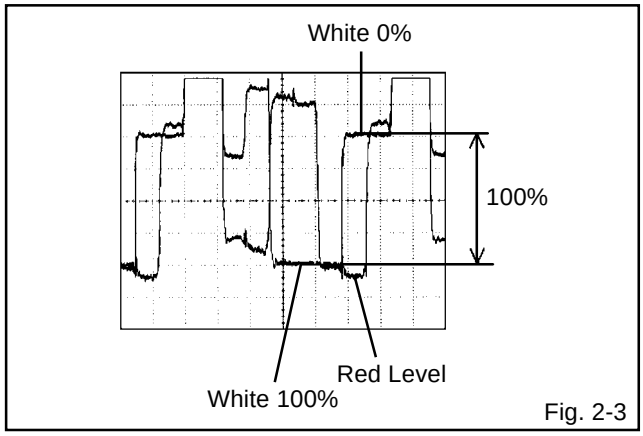

Fig. 2-3

2-16: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. **(Refer to Fig. 2-4)**

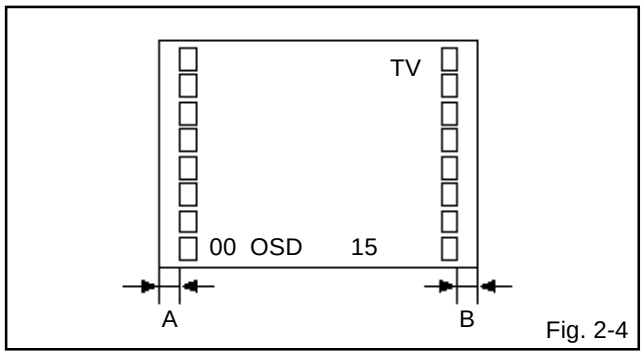

Fig. 2-4

2-17: SUB SHARPNESS

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(17)** on the remote control to select "SHARPNESS".
2. Check if the step No. of SHARPNESS is "40".
3. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustment 1~2.

2-18: H. VCO

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(04)** on the remote control to select "H VCO".
2. Check if the step No. of H VCO is "4".

ELECTRICAL ADJUSTMENTS

2-19: COLOR LEVEL

1. Receive the color bar pattern. (RF Input)
2. Connect the oscilloscope to **pin 6 of CP602**.
3. When setting to the Y-LEVEL 100%, check if the MAGENTA is 45 ± 10%. **(Refer to Fig. 2-5)**

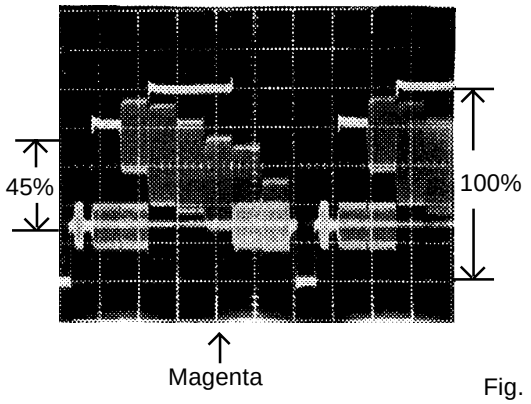

Fig. 2-5

2-20: E-E LEVEL

1. Receive the color bar pattern. (Audio Video Input)
2. Connect the oscilloscope to **pin 6 of CP602**.
3. Check if the VIDEO OUTPUT LEVEL is 1 ± 0.2Vp-p. **(Refer to Fig. 2-6)**

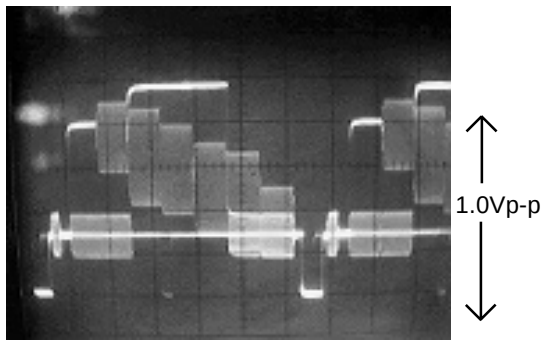

Fig. 2-6

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
   If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
   Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue color.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

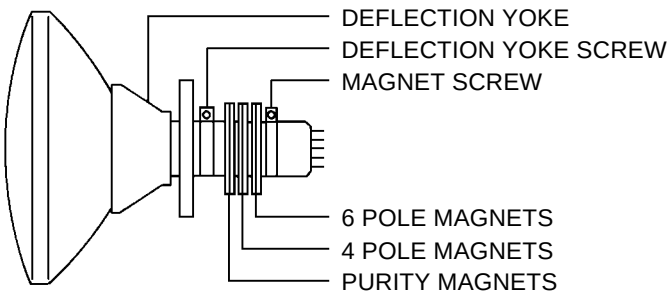

Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

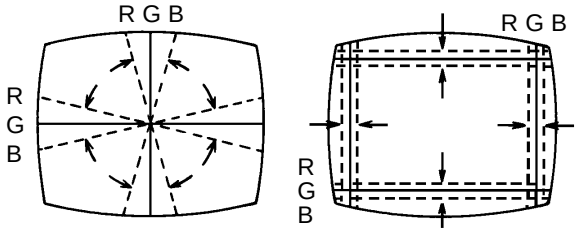

UPWARD/DOWNWARD SLANT RIGHT/LEFT SLANT

Fig. 3-2-a

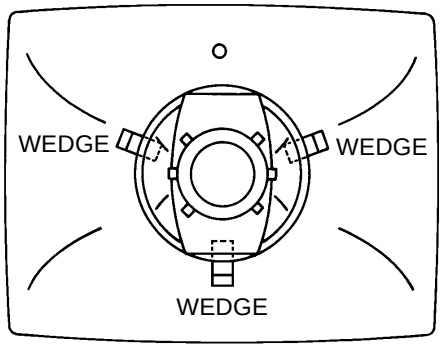

WEDGE POSITION

Fig. 3-2-b

ELECTRICAL ADJUSTMENTS

4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

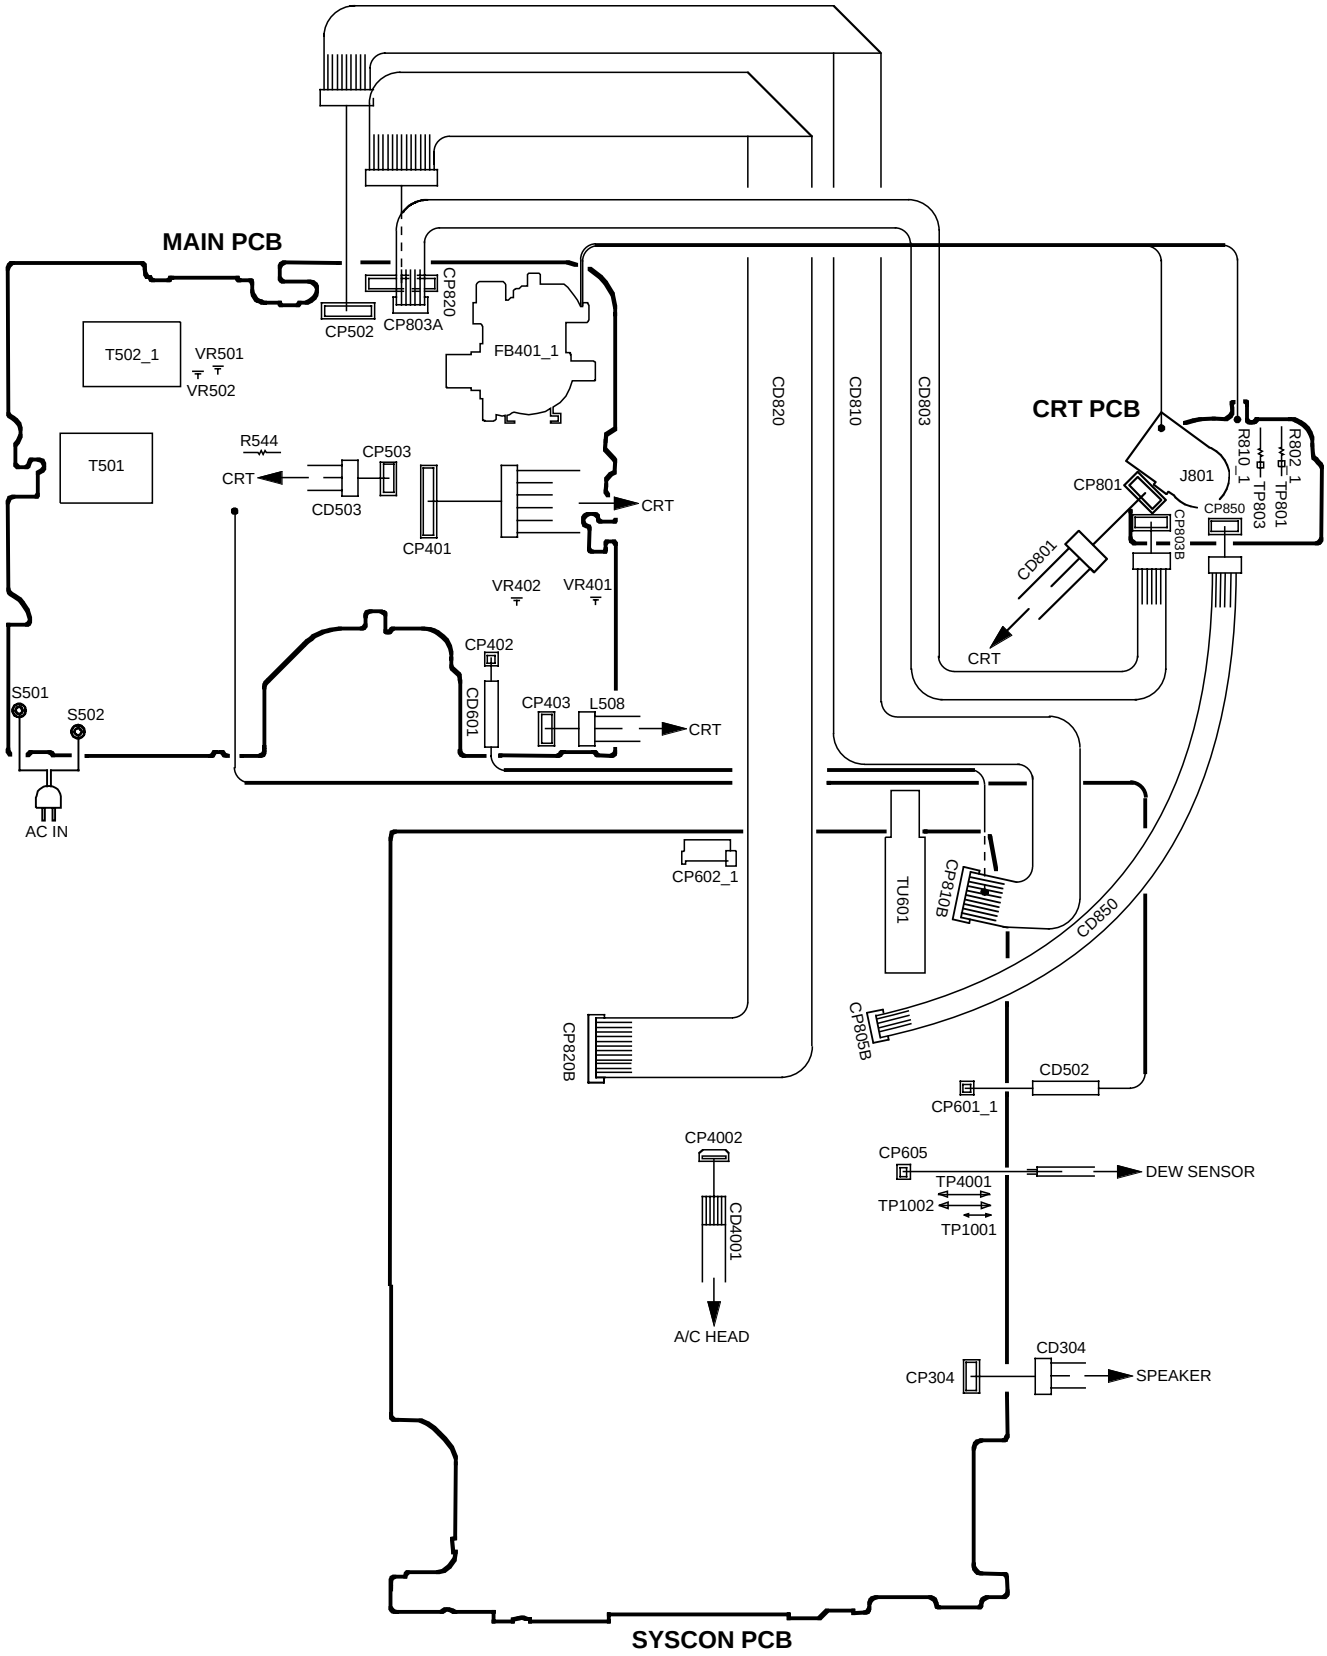

MECHANICAL EXPLODED VIEW

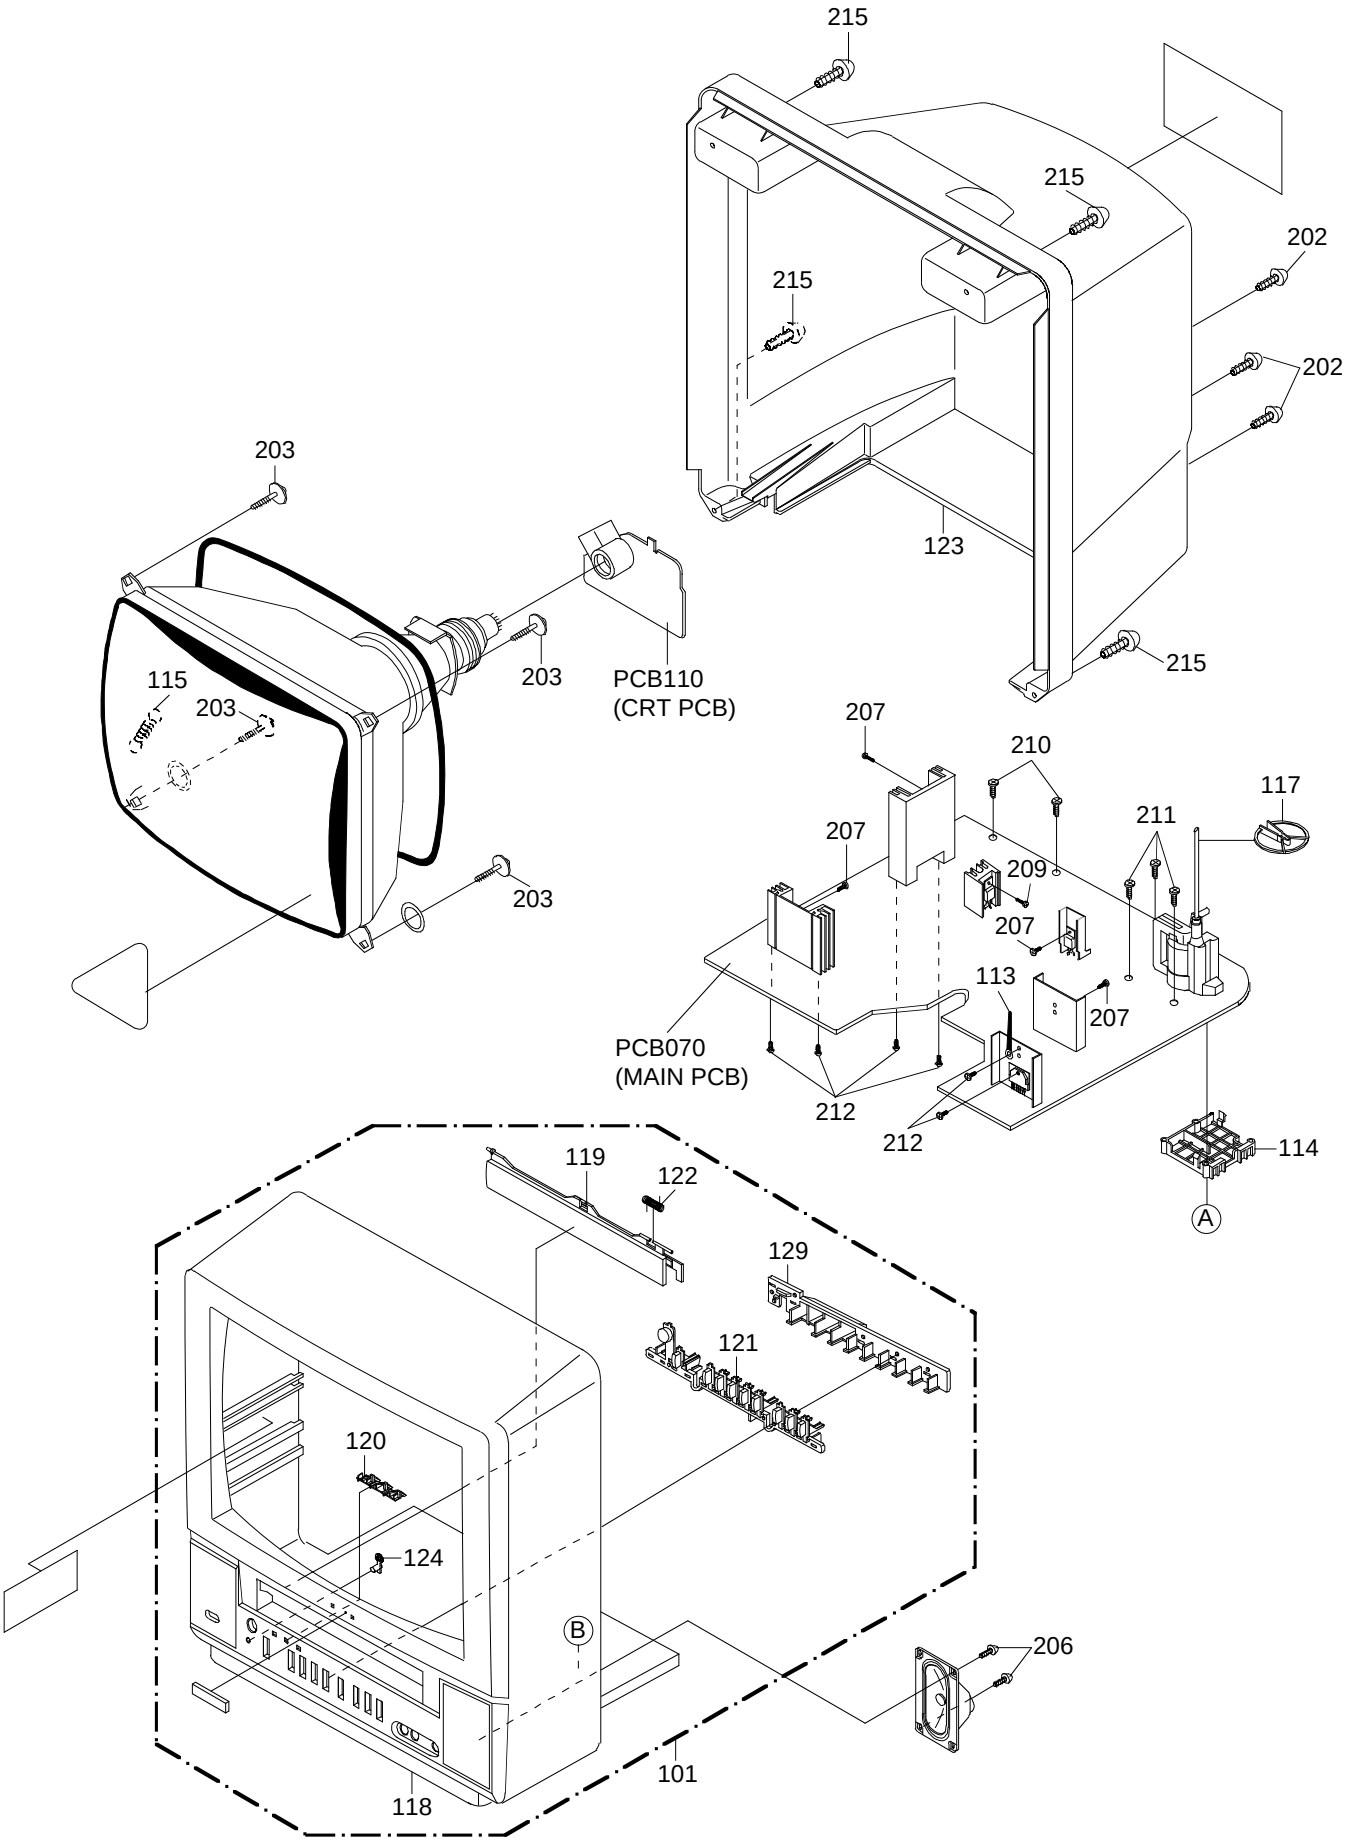

MECHANICAL EXPLODED VIEW

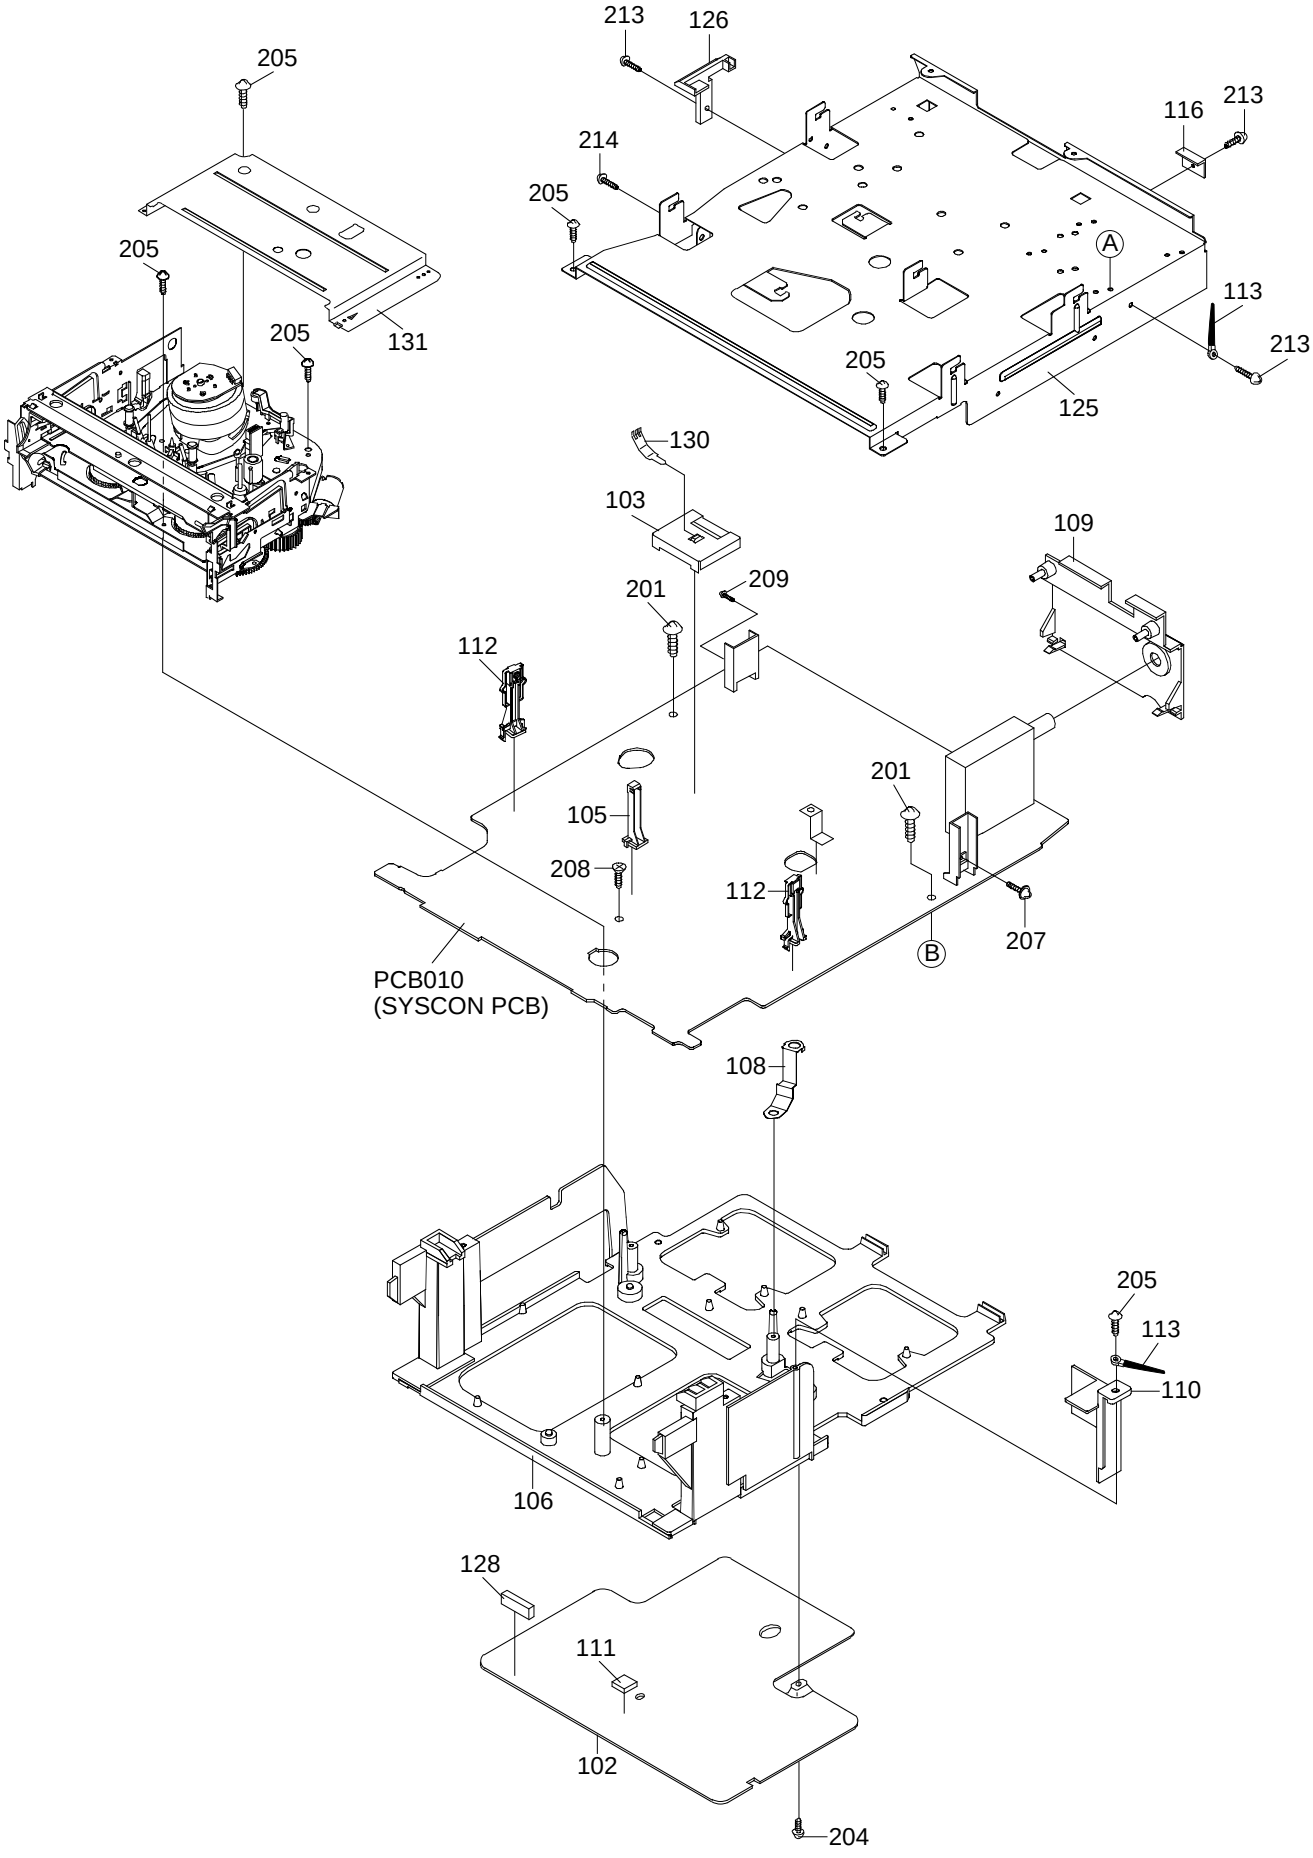

CHASSIS EXPLODED VIEW (TOP VIEW)

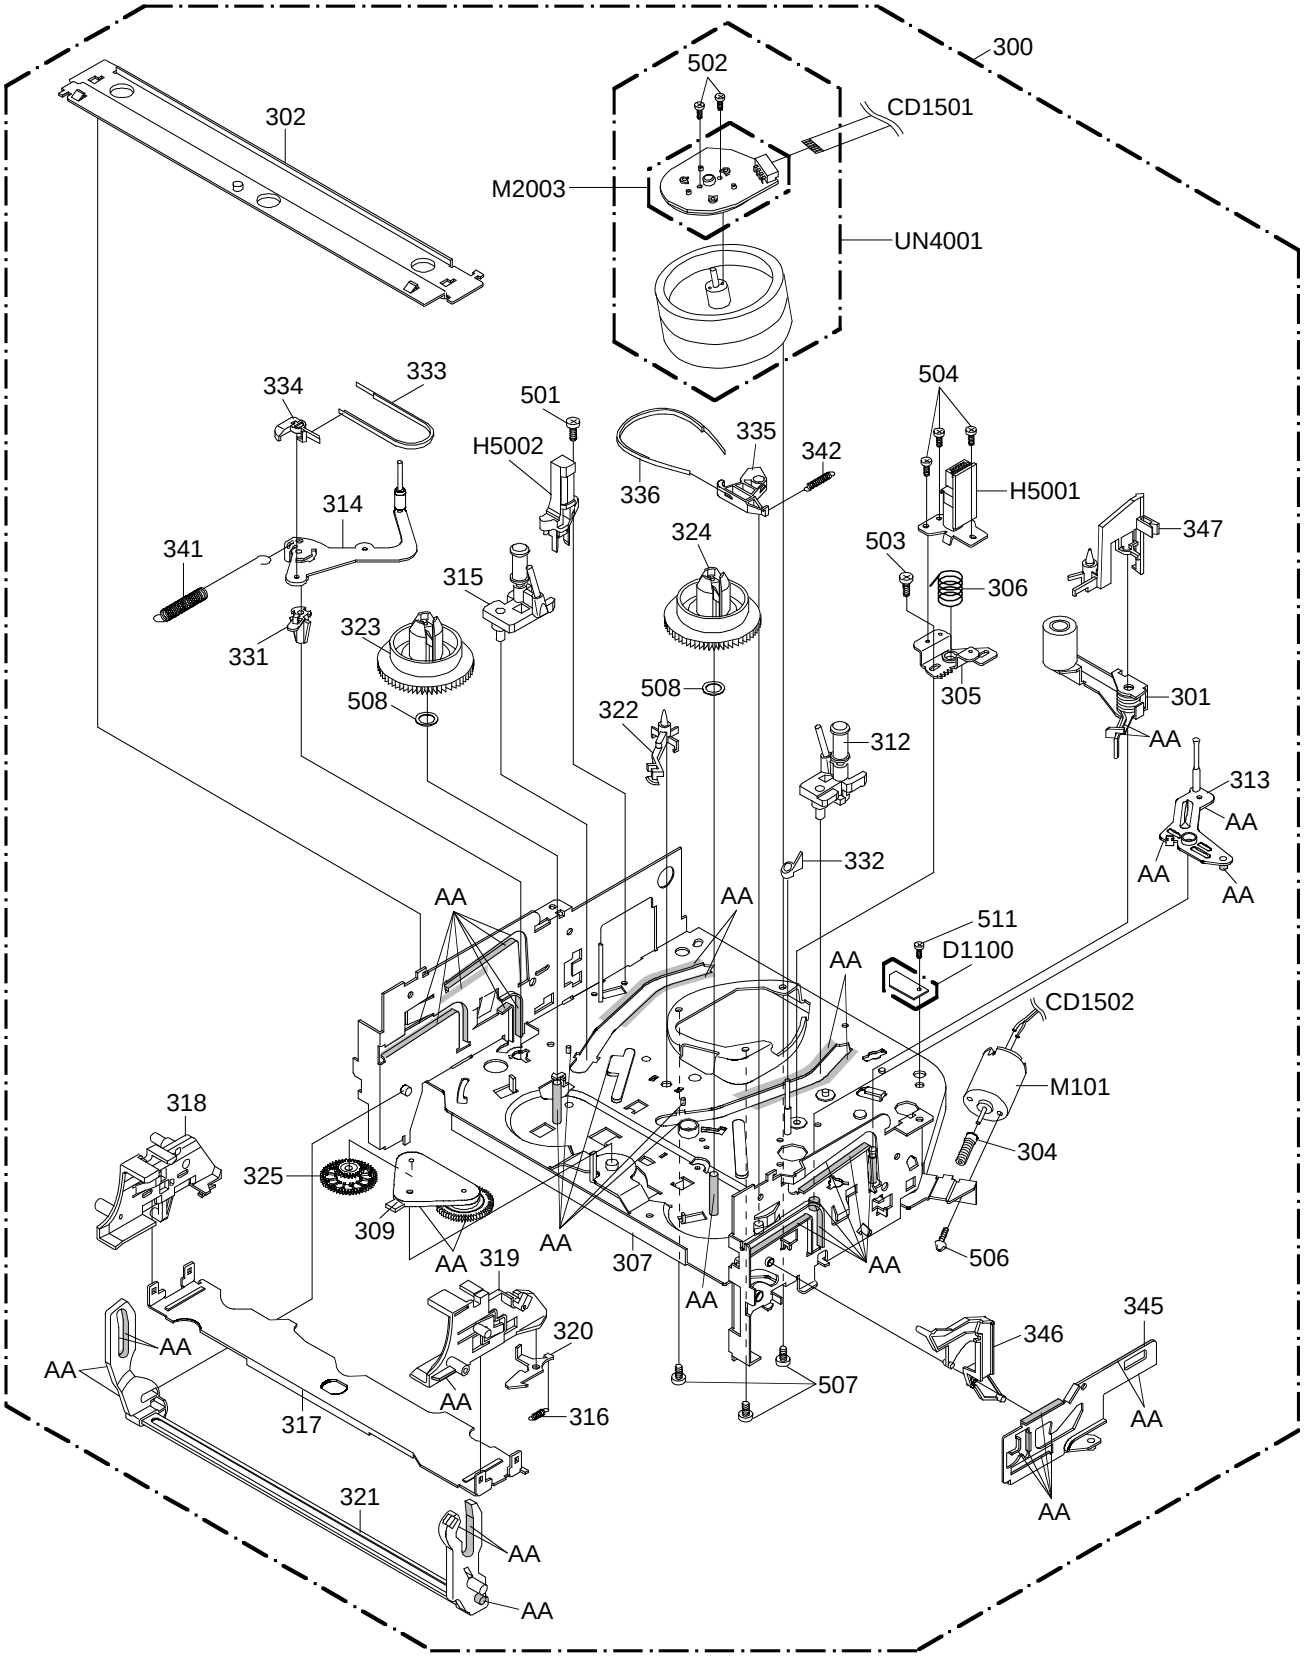

CLASS	MARK
GREASE	AA

NOTE: Applying positions AA for the grease are displayed for this section.
Check if the correct grease is applied for each position.

CHASSIS EXPLODED VIEW (BOTTOM VIEW)

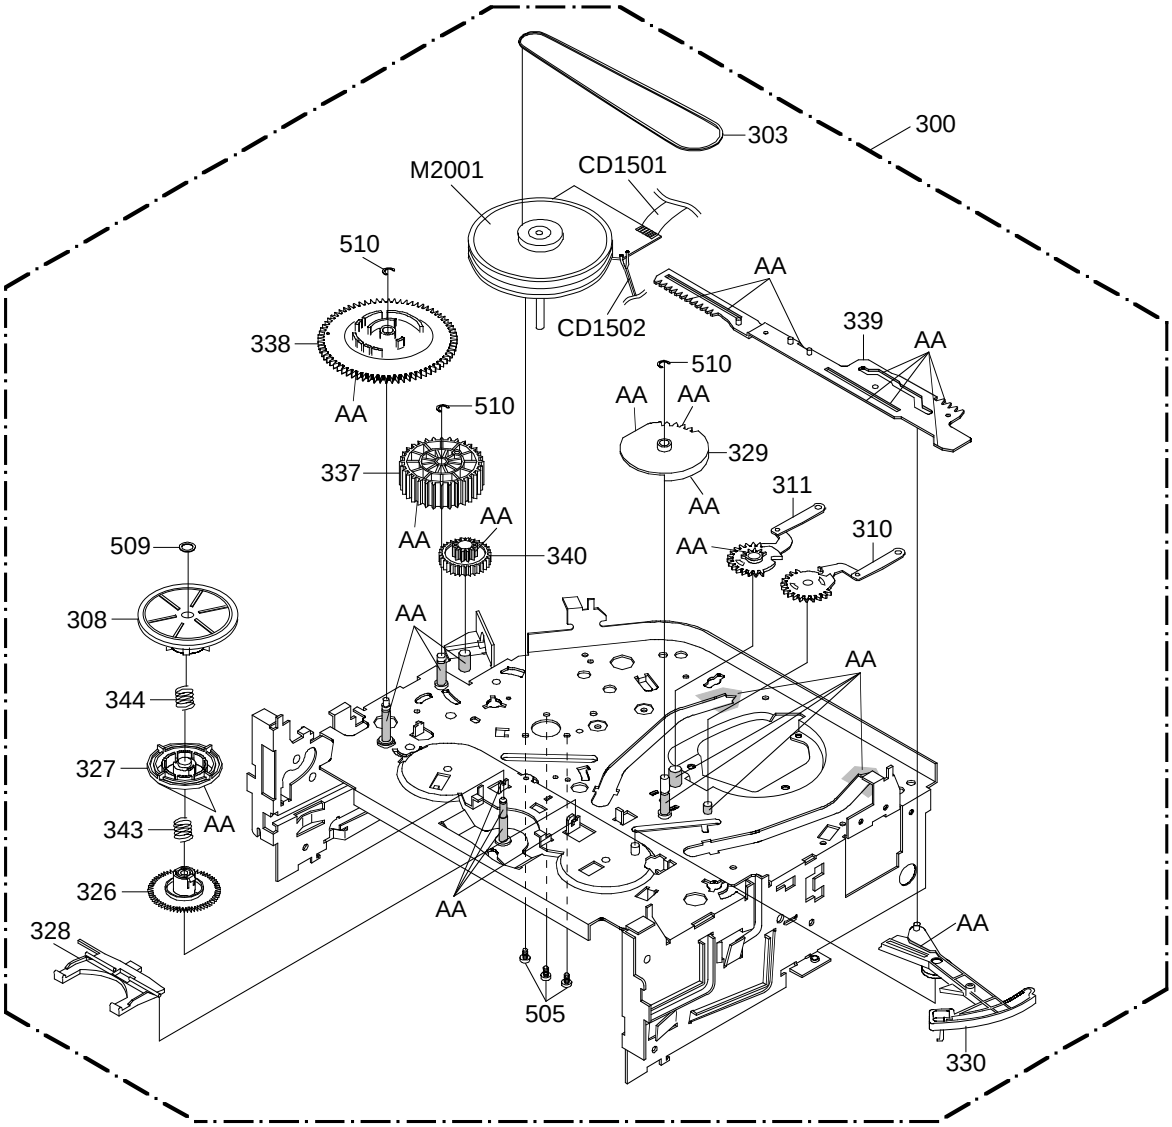

CLASS	MARK
GREASE	AA

NOTE: Applying positions AA for the grease are displayed for this section.
Check if the correct grease is applied for each position.

MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
101	BZ310357	A5A3A2C720	CABINET,FRONT ASSY	
102	BZ710248	752WSAA028	SHIELD,BOTTOM	
103	BZ710466	752WSA0230	SHIELD,CASE HEAD AMP	
105	BZ710497	85OP700037	HOLDER,LED	
106	BZ710631	761WPAA055	HOLDER,DECK	
108	BZ710610	753WSA0144	PLATE,BOTTOM-EARTH	
109	BZ710651	771WPA0273	PLATE,JACK	
110	BZ710508	755WPA0026	PLATE,COVER LIGHT	
111	BZ710252	800WFA0038	CUSHION	10x10xT=2
112	BZ710498	85OP700038	HOLDER,END SENSOR	
113	BZ710039	8995034000	CORD CLIP UL CO.	
114	BZ710459	761WPA0223	HOLDER,FBT	
115	BZ710009	741WUA0019	SPRING,EARTH	
116	BZ710634	761WPA0240	HOLDER,TV-PCB	
117	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
118	BZ710644	701WPJB621	CABINET,FRONT	
119	BZ710645	712WPJB348	FLAP	
120	BZ710503	713WPAA059	GLASS,LED	
121	BZ710646	735WPBA378	BUTTON,FRAME	
122	BZ710010	743WKA0032	SPRING,FLAP	
123	BZ710647	702WPAA201	CABINET,BACK	
124	BZ710502	713WPAA058	GUIDE,REMOCON	
125	BZ710648	752WSAA046	PLATE,DECK SHIELD ASS'Y	
126	BZ710012	761WPA0151	HOLDER,M/PCB	
128	BZ710251	800WFA0037	CUSHION	15x5xT=6
129	BZ710504	735WPAA419	BUTTON,BASE	
130	BZ710331	753WUAA006	SPRING,EARTH HEAD AMP	
131	BZ710612	752WSA0263	SHIELD,COVER DECK	
201	BZ710036	8117540B04	SCREW,TAPPING(B0) TRUSS	4x20
202	BZ710031	8110630A04	SCREW,TAP TITE(P) BRAZIER	3x10
203	BZ710321	8121F50B84	SCREW,TAPPING(B0) FAI20 FLAT	5x28
204	BZ710158	8110630604	SCREW,TAP TITE(P) BRAZIER	3x6
205	BZ710032	8110630A24	SCREW,TAP TITE(P) BRAZIER	3x12
206	BZ710030	8110630804	SCREW,TAP TITE(P) BRAZIER	3x8
207	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10
208	BZ710028	8110330804	SCREW,TAP TITE(P) FLAT	3x8
209	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8
210	BZ710337	8107930604	SCREW,CUP(S)	3x6
211	BZ710409	8107630B04	SCREW,TAP TITE(S) BRAZIER	3x20
212	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
213	BZ710147	8107630604	SCREW,TAP TITE(S) BRAZIER	3x6
214	BZ710408	8109630604	SCREW,TAP TITE(B) BRAZIER	3x6
215	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16
---	BZ710510	792WHA0339	PACKAGE,TOP	
---	BZ710511	792WHA0340	PACKAGE,BOTTOM	
---	BZ710649	793WCDB197	GIFT BOX	
---	BZ614393	J5A3A201	INSTRUCTION BOOK	

CHASSIS REPLACEMENT PARTS LIST

	Location No.	TSB P/N	Reference No.	Description	
	300	BZ310358	A5A319C420K	DECK ASSY	A5A319C420K
	301	BZ710564	85OA400234	PINCH ROLLER BLOCK	
	302	BZ710514	85OP900746	BRACKET,TOP 3V	
	303	BZ710193	85OP200290	BELT,CAPSTAN (S)	
	304	BZ710515	85OP600581	WORM	
	305	BZ710094	85OP500083	BASE,AC HEAD	
	306	BZ710112	85OP800324	SPRING,AC HEAD	
	307	BZ710516	85OA000459	MAIN CHASSIS ASS'Y	
	308	BZ710517	85OA200089	CLUTCH ASS'Y	
	309	BZ710518	85OA200090	ARM IDLER ASS'Y	
	310	BZ710519	85OA300065	LOADING ARM S UNIT	
	311	BZ710520	85OA300066	LOADING ARM T UNIT	
	312	BZ710521	85OA400223	INCLINED BASE T UINT 3S	
	313	BZ710522	85OA400232	P5 ARM ASS'Y 2	
	314	BZ710650	85OA400235	TENSION ARM ASS'Y 2	
	315	BZ710524	85OA400231	INCLINED BASE S UNIT	
	316	BZ710525	85OP800358	SPRING,LOCKER	
	317	BZ710526	85OP900736	CASS,HOLDER	
	318	BZ710527	85OP900748	CASS,SIDE L	
	319	BZ710528	85OP900749	CASS,SIDE R	
	320	BZ710529	85OP900739	LOCKER,R	
	321	BZ710530	85OA900228	LINK UNIT	
	322	BZ710531	85OP000496	POST,CASS GUIDE	
	323	BZ710532	85OP200316	REEL,S (S)	
	324	BZ710533	85OP200317	REEL,T (S)	
	325	BZ710534	85OP200308	GEAR,IDLER	
	326	BZ710535	85OP200311	GEAR,CLUTCH	
	327	BZ710536	85OP200312	GEAR,COUPLING	
	328	BZ710537	85OP200313	LEVER,CLUTCH	
	329	BZ710538	85OP300194	GEAR,MAIN LOADING	
	330	BZ710092	85OP400490	LEVER,TENSION	
	331	BZ710093	85OP400492	HOLDER,TENSION	
	332	BZ710366	85OP400520	CAP.P4	
	333	BZ710539	85OP400539	BAND,TENSION	
	334	BZ710540	85OP400533	CONNECT,TENSION	
	335	BZ710541	85OP600573	ARM,BRAKE T	
	336	BZ710542	85OP600583	BAND,BRAKE T	
	337	BZ710543	85OP600577	CAM,PINCH ROLLER	
	338	BZ710544	85OP600578	CAM,MAIN	
	339	BZ710545	85OP600579	ROD,MAIN	
	340	BZ710546	85OP600582	GEAR,JOINT	
	341	BZ710110	85OP800322	SPRING,TENSION	
	342	BZ710547	85OP800360	SPRING,BRAKE T	
	343	BZ710548	85OP800355	SPRING,COUPLING	
	344	BZ710549	85OP800356	SPRING,RING	
	345	BZ710565	85OP900750	LEVER,LINK 2	
	346	BZ710551	85OP900744	LEVER,FLAP	
	347	BZ710552	85OP900745	CASS,OPENER	
	501	BZ710049	8107226804	SCREW,TAP TITE(S) BIND	2.6x8
	502	BZ710051	810A123504	SEMS A	M2.3x5.0
	503	BZ710371	8107226404	SCREW,TAP TITE(S) BIND	2.6x4
	504	BZ710046	8102120604	SCREW,PAN	M2x6
	505	BZ710050	8109126604	SCREW,TAP TITE(B) PAN	2.6x6
	506	BZ710553	810A130404	SCREW/WASHER(A)	M3x4
	507	BZ710219	810A126504	SCREW/WASHER(A)	M2.6x5
	508	BZ710056	82Q264713N	POLYSLIDER WASHER	2.6x4.7xT0.13
	509	BZ710054	82P184505N	POLYSLIDER WASHER(CUT)	1.8x4.5xT0.5
	510	BZ710058	83ETW30000	E-RING	3.0
	511	BZ710017	8107226604	SCREW,TAP TITE(S) BIND	2.6x6
	CD1501	BZ614338	122H071603	CORD JUMPER	SMCD-7X151
	CD1502	BZ614339	122Y021902	CORD JUMPER	2Y021902
	D1100	BZ410060	DAK0000170	DEW SENSORCW/AL,PLATE	HDP-05-26
	H5001	BZ710040	1523D91034	HEAD (AUDIO CONTROL)	HVMXA1072A
	H5002	BZ710041	1543D02013	HEAD (FULL ERASE)	HVFHP0032A
⚠	M101	BZ710566	1596P98001	MOTOR (LOADING)	MXN13FB12K3
⚠	M2001	BZ710555	1510S98036	CAPSTAN DD UNIT	F2QVB08
⚠	M2003	BZ710373	1589S11014	MICRO MOTOR	I2OAL03
⚠	UN4001	BZ610290	A5A305A500	CYLINDER UNIT ASS'Y	A5A305A500

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description	
			RESISTORS		
⚠R404	BZ210112	R4X5T6152F	R,METAL	1.5K OHM 1/6W	
⚠R409	BZ210240	R3X181221J	R,METAL OXIDE	220 OHM 1W	
⚠R432	BZ210241	R655U2010J	R,FUSE	1 OHM 1/2W	
⚠R442	BZ210114	R4X5T6123F	R,METAL	12K OHM 1/6W	
⚠R443	BZ210233	R4X5T6272F	R,METAL	2.7K OHM 1/6W	
⚠R447	BZ210021	R65582680J	R,FUSE	68 OHM 1/2W	
⚠R450	BZ210242	R635813R9J	R,FUSE	3.9 OHM 1W	
⚠R500	BZ210080	R0G3K2275K	RC	2.7M OHM 1/2W	
⚠R501	BZ210188	R5Y2CD010J	R,CEMENT	1 OHM 5W	
⚠R502	BZ210215	R3X28B100J	R,METAL OXIDE	10 OHM 3W	
⚠R505	BZ210158	R002T2563J	RC	56K OHM 1/2W	
⚠R511	BZ210226	R002T4105J	RC	1M OHM 1/4W	
⚠R513	BZ210119	R002T4102J	RC	1K OHM 1/4W	
⚠R520	BZ210119	R002T4102J	RC	1K OHM 1/4W	
⚠R528	BZ210190	R63581R22J	R,FUSE	0.22 OHM 1W	
⚠R529	BZ210121	R002T4182J	RC	1.8K OHM 1/4W	
R530	BZ210243	R3X181R18J	R,METAL OXIDE	0.18 OHM 1W	
R544	BZ210009	R3X28AR82J	R,METAL OXIDE	0.82 OHM 2W	
⚠R545	BZ210217	R3X181331J	R,METAL OXIDE	330 OHM 1W	
⚠R547	BZ210071	R3X28B4R7J	R,METAL OXIDE	4.7 OHM 3W	
R695	BZ210235	R00204103J	RC	10K OHM 1/4W	
⚠R802	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W	
⚠R805	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W	
⚠R810	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W	
			CAPACITORS		
C321	BZ110104	E0EL02332M	CE	3300 UF 16V	
⚠C402	BZ110212	E5EZTD2R2M	CE	2.2 UF 250V	
⚠C406	BZ110194	E5EZU4101M	CE	100 UF 35V	
⚠C407	BZ110053	E02LF3102M	CE	1000 UF 25V	
C413	BZ110085	P21503475K	CMP	4.7 UF 250V ECQ-E	
C414	BZ110085	P21503475K	CMP	4.7 UF 250V ECQ-E	
C421	BZ110014	E5EZ04102M	CE	1000 UF 35V	
⚠C422	BZ110121	E5EZTD010M	CE	1 UF 250V	
⚠C423	BZ110136	P4J7F3394J	CMPP	0.39 UF 250V PMS	
⚠C424	BZ110087	P414F9682H	CMPP	0.0068UF 1.6KV ECWH	or
	BZ210161	P4N8FJ682H	CMPP	0.0068UF 1.25KV	
C425	BZ110182	C03L0R713K	CC	0.001 UF 2KV R	
C426	BZ110182	C03L0R713K	CC	0.001 UF 2KV R	
C430	BZ110182	C03L0R713K	CC	0.001 UF 2KV R	
⚠C433	BZ110195	E02LU8220M	CE	22 UF 100V	
⚠C502	BZ110088	C0JBB05H3K	CC	0.0022UF 500V B	
⚠C503	BZ110088	C0JBB05H3K	CC	0.0022UF 500V B	
⚠C505	BZ110138	P2472B224M	CMP	0.22UF 275V PHE840	
⚠C507	BZ110012	E51CGC471M	CE	470 UF 200V	
C513	BZ110202	C0PLRR713K	CC	0.001 UF 2KV RR	or
	BZ110182	C03L0R713K	CC	0.001 UF 2KV R	
C515	BZ110091	E62FF3152M	CE	1500 UF 25V	
C518	BZ110213	C03L0R7K3K	CC	0.0027UF 2KV R	
C519	BZ110051	CB3930M13M	CC	0.001 UF 250V	
C520	BZ110051	CB3930M13M	CC	0.001 UF 250V	
C523	BZ110051	CB3930MH3M	CC	0.0022UF 250V	
C525	BZ110176	C03L0R7Q2K	CC	470 PF 2KV R	
⚠C534	BZ110214	E62NFC101M	CE	100 UF 200V	
C535	BZ110129	E5EZF2222M	CE	2200 UF 16V	
⚠C536	BZ110032	E5EZF3102M	CE	1000 UF 25V	
⚠C537	BZ110032	E5EZF3102M	CE	1000 UF 25V	
⚠C538	BZ110197	E02LU5470M	CE	47 UF 50V	
⚠C540	BZ110198	E02LU50R1M	CE	0.1 UF 50V	
C544	BZ110032	E5EZF3102M	CE	1000 UF 25V	
C551	BZ110091	E62FF3152M	CE	1500 UF 25V	
C641	BZ110245	E02L03471M	CE	470 UF 25V	or
	BZ110041	E02LT3471M	CE	470 UF 25V	
C801	BZ110182	C03L0R713K	CC	0.001 UF 2KV R	
C4224	BZ110216	E52H053R3M	CE	3.3 UF 50V	or
	BZ110217	E50HU53R3M	CE	3.3 UF 50V	
C4225	BZ110216	E52H053R3M	CE	3.3 UF 50V	or
	BZ110217	E50HU53R3M	CE	3.3 UF 50V	
			DIODES		
D401	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC	
D402	BZ410014	D2LTPG06J0	DIODE,SILICON	RMPG06J-G3	
D403	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77	
D404	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D405	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D406	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77	
D407	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77	
⚠D409	BZ410017	D94TA11B13	DIODE,ZENER	HZ11B3L TD	
⚠D411	BZ410014	D2LTPG06J0	DIODE,SILICON	RMPG06J-G3	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
			DIODES	
⚠D412	BZ410014	D2LTPG06J0	DIODE,SILICON	RMPG06J-G3
⚠D413	BZ410014	D2LTPG06J0	DIODE,SILICON	RMPG06J-G3
D501	BZ410061	D97U01001B	DIODE,ZENER	MTZJ10B T-77
D502	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D503	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D504	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D505	BZ410018	D94TA27011	DIODE,ZENER	HZ27-1L TD
D506	BZ410091	D230PF6DT0	DIODE,SILICON	FEPF6DT
⚠D507	BZ410100	D97U01801B	DIODE,ZENER	MTZJ18B T-77
D508	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D509	BZ410080	D2WXRU2AM0	DIODE,SILICON	RU2AM-EIC
⚠D510	BZ410080	D2WXRU2AM0	DIODE,SILICON	RU2AM-EIC
D511	BZ410101	D28TELS6N6	DIODE,RECTIFER	10ELS6N-TA1B2
D512	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D513	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D514	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D515	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77
D516	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D517	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D518	BZ410014	D2LTPG06J0	DIODE,SILICON	RMPG06J-G3
D519	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D520	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D521	BZ410076	D2WXB290S0	DIODE,SILICON	SB290S
D522	BZ410065	D97U01601B	DIODE,ZENER	MTZJ16B T-77
D523	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D524	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D526	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D528	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D530	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D531	BZ410076	D2WXB290S0	DIODE,SILICON	SB290S
D533	BZ410092	D2WXN49370	DIODE,SILICON	1N4937
D534	BZ410109	D97U02001B	DIODE,ZENER	MTZJ20B T-77
⚠D535	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D536	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D537	BZ410076	D2WXB290S0	DIODE,SILICON	SB290S
⚠D539	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
⚠D540	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
⚠D541	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
⚠D542	BZ410110	D28XELS2N2	DIODE,RECTIFIER	10ELS2N-TA2B5
⚠D545	BZ410076	D2WXB290S0	DIODE,SILICON	SB290S
D546	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D547	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D548	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D550	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D551	BZ410067	D97U02R21B	DIODE,ZENER	MTZJ2.2B T-77
D601	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D602	BZ410053	D97U08R21C	DIODE,ZENER	MTZJ8.2C T-77
D603	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D605	BZ410059	D2WT11ES10	DIODE,SILICON	11ES1-EIC
D606	BZ410084	D97U01101B	DIODE,ZENER	MTZJ11B T-77
D607	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D608	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D609	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D610	BZ410077	D2WXSB1400	DIODE,SCHOTTKY	SB140-EIC
D611	BZ410077	D2WXSB1400	DIODE,SCHOTTKY	SB140-EIC
D612	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D616	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D617	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D618	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D619	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D620	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D621	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1002	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1003	BZ410095	0010100320	INFRARED LED	LNA2702L010R
D1004	BZ410064	D97U03R91B	DIODE,ZENER	MTZJ3.9B T-77
D1014	BZ410020	D97U05R11B	DIODE,ZENER	MTZJ5.1B T-77
D2205	BZ410054	0021721150	LED	SLR-342VCT32
D2206	BZ410054	0021721150	LED	SLR-342VCT32
D4004	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
			ICS	
⚠IC351	BZ611013	I0FSP75230	IC	AN7523
⚠IC401	BZ611053	I01TD55220	IC	AN5522
⚠IC501	BZ611015	I1KA97805A	IC	KIA7805API
⚠IC504	BZ611096	I0QD023680	IC	NJM2368D
⚠IC506	BZ410088	0002E00610	PHOTO COUPLER	LTV-817M-VB
IC601	BZ611055	I06FC61206	IC	M61206FP
⚠IC603	BZ611054	I1KA98R050	IC	KIA78R05PI

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
		ICS		
IC1001	BZ611093	I56F57071A	IC	OEC7071A
IC1002	BZ611057	IC7J0311A0	IC	R3111N311A/C-TR
IC1099	BZ310353	A5A3A2C015	IC	S-24C04BDP-LA
IC4001	BZ611095	I03F3205M0	IC	LA71205M-MPB
		TRANSISTORS		
Q350	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q401	BZ510086	TPATB03003	COMPOUND TRANSISTOR	KRA102MAT
Q402	BZ510052	TF2002P4M0	THYRISTOR	2P4M
Q404	BZ510078	TNATJ03003	COMPOUND TRANSISTOR	KRC111MAT
⚠Q405	BZ510089	TC5T01627Y	TRANSISTOR,SILICON	2SC1627_Y(TPE2)
⚠Q406	BZ510036	TD30026270	TRANSISTOR,SILICON	2SD2627LS-CBC11
Q407	BZ510086	TPATB03003	COMPOUND TRANSISTOR	KRA102MAT
Q408	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q501	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
⚠Q502	BZ510044	TC5T021204	TRANSISTOR,SILICON	2SC2120Y(TPE2)
Q503	BZ510078	TNATJ03003	COMPOUND TRANSISTOR	KRC111MAT
Q504	BZ510096	TNATB03005	COMPOUND TRANSISTOR	KRC102MAT
⚠Q505	BZ510099	T410032730	FET	2SK3273-01MR
Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q508	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
Q509	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q510	BZ510093	TJXG5NC500	FET	STP5NC50FP
Q511	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q512	BZ510077	TAAT012714	TRANSISTOR, SILICON	KTA1271_Y-AT
Q514	BZ510096	TNATB03005	COMPOUND TRANSISTOR	KRC102MAT
Q515	BZ510096	TNATB03005	COMPOUND TRANSISTOR	KRC102MAT
Q516	BZ510078	TNATJ03003	COMPOUND TRANSISTOR	KRC111MAT
Q518	BZ510096	TNATB03005	COMPOUND TRANSISTOR	KRC102MAT
Q601	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q604	BZ510090	TPAAB05001	COMPOUND TRANSISTOR	KRA102SRTK
⚠Q605	BZ510043	TC10013840	TRANSISTOR,SILICON	2SC13840W
⚠Q606	BZ510043	TC10013840	TRANSISTOR,SILICON	2SC13840W
Q607	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
⚠Q608	BZ510043	TC10013840	TRANSISTOR,SILICON	2SC13840W
Q609	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q610	BZ510060	TB3T011310	TRANSISTOR,SILICON	2SB1131(S,T)-AE
Q611	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q651	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
⚠Q804	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q805	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q806	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
Q1002	BZ410097	0000M00390	PHOTO TRANSISTOR	ST-304L
Q1003	BZ410106	0002700680	PHOTO COUPLER	RPI-352C40N
Q1004	BZ510067	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
Q1005	BZ410107	0002700690	PHOTO COUPLER	RPI-303
Q1006	BZ510067	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
Q1008	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q1009	BZ410106	0002700680	PHOTO COUPLER	RPI-352C40N
Q1013	BZ410097	0000M00390	PHOTO TRANSISTOR	ST-304L
Q4001	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q4002	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q4003	BZ510072	TPAAC05002	COMPOUND TRANSISTOR	KRA103SRTK
Q4005	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q4006	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q4007	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4009	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q4010	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q4012	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4013	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4205	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q4206	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
		COILS &TRANSFORMERS		
L401	BZ310004	021679472K	COIL	4.7 MH
⚠L501	BZ310099	029T000092	COIL,LINE FILTER	1R0A103F24
L503	BZ310083	021767100K	COIL	A 10 UH
⚠L508	BZ310100	028R140024	COIL,DEGAUSS	8R140024
L604	BZ310041	02167F101J	COIL	100 UH
L607	BZ310067	021LA6180K	COIL	18 UH
L608	BZ310041	02167F101J	COIL	100 UH
L614	BZ310068	021LA66R8K	COIL	6.8 UH
L615	BZ310156	021375101K	COIL	100 UH
L801	BZ310002	021673101K	COIL	100 UH
L1001	BZ310009	021LA62R2K	COIL	2.2 UH
L4001	BZ310039	02167F220J	COIL	22 UH
L4003	BZ310041	02167F101J	COIL	100 UH
L4005	BZ310040	02167F470J	COIL	47 UH
L4006	BZ310040	02167F470J	COIL	47 UH

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
		COILS &TRANSFORMERS		
L4007	BZ310171	032623004T	COIL,TRAP	STP-01064
L4008	BZ310041	02167F101J	COIL	100 UH
L4009	BZ310039	02167F220J	COIL	22 UH
T401	BZ310157	045009003J	TRANS,HORIZONTAL DRIVE	ETH09K14BZ
T501	BZ310160	0481290804	TRANSFORMER,SWITCHING	81290804
T502	BZ310177	048133020S	TRANSFORMER,SWITCHING	8133020S
T4001	BZ310114	031626009R	COIL,BIAS OSC	1626009
		JACKS		
⚠J503	BZ614145	0602602006	JACK DC	HEC0824-010010
⚠J801	BZ614004	066X120014	SOCKET,CATHODE RAY TUBE	HPS3200-010501
J2201	BZ614361	060J131015	HEADPHONE JACK	MSJ-2000
J2202	BZ614322	060Q401077	RCA JACK	AV1-09D-3
J2203	BZ614321	060Q401076	RCA JACK	AV1-09D-4
		SWITCHES		
SW1001	BZ612014	0508A11002	SWITCH(LEAF)	MXS01380MPP0
SW2213	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2214	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2215	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2216	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2217	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2218	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2219	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2220	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2221	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2223	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
		VARIABLE RESISTORS		
VR401	BZ210237	V1K63Q4BTE	VOLUME,SEMI FIXED	NVG6TLTAB473
VR402	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED	NVG6TLTAB222
VR501	BZ210128	V1163H3BTC	VOLUME,SEMI FIXED	EVNCYAA03BE3
VR502	BZ210068	V1163Q3BTC	VOLUME,SEMI FIXED	EVNCYAA03BQ3
		P.C.BOARD ASSEMBLIES		
PCB010	BZ310354	A5A3A2C010	PCB ASS'Y	VMA245B
PCB070	BZ310355	A5A3A2C070	PCB ASS'Y	TMA527A
PCB110	BZ310356	A5A3A2C110	PCB ASS'Y	TCA386A
		MISCELLANEOUS		
B301	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B501	BZ310130	024HT03564	CORE,BEADS	W4BRH3.5X6X1
B502	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B503	BZ310130	024HT03564	CORE,BEADS	W4BRH3.5X6X1
B505	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B507	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
BL001	BZ310014	023C00022A	COIL,BALUN	HPN-01
CD304	BZ614324	06CU12414A	CORD,CONNECTOR	CU12414A
⚠CD501	BZ614341	120R414903	CORD,AC BUSH	0R414903
CD502	BZ614282	06CH01423A	CORD,CONNECTOR	CH01423A
CD503	BZ614133	069X620040	CONNECTOR	JM-2BK-61
⚠CD504	BZ614196	121B164101	CORD,CAR BATTERY	SI-PC107-67
CD601	BZ614059	06CH01006A	CORD,CONNECTOR	CH01006A
CD801	BZ614175	06CU82039A	CORD,CONNECTOR	SM1098-009-1A
CD803	BZ614391	WDL6026038	FLAT CABLE AWM2468 A	WG26 6C BLACK 260MM
CD810	BZ614392	WJL6830038	FLAT CABLE AWM2468 A	WG26 11C GRAY 300 MM
CD820	BZ614391	WKL6026038	FLAT CABLE AWM2468 A	WG26 12C BLACK 260MM
CD850	BZ614392	WCL6830038	FLAT CABLE AWM2468 A	WG26 5C GRAY 300MM
CF601	BZ613031	1029045R7G	FILTER,SAW	TSF5229P3
CF603	BZ613015	1011T4R504	FILTER,CERAMIC	EFCT4R5YS5A
CF604	BZ613016	1011T4R517	FILTER,CERAMIC	EFCT4R5MW5
CP304	BZ614365	069S120419	CONNECTOR PCB SIDE	A2502WV2-2P
CP401	BZ614303	069S450089	CONNECTOR PCB SIDE	A1561WV2-A5P
CP402	BZ614016	069W01001A	CONNECTOR PCB SIDE	003P-2100
⚠CP403	BZ614283	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P
CP502	BZ614250	069R2B0589	CONNECTOR PCB SIDE	52147-1110
CP503	BZ614137	069X620030	CONNECTOR PCB SIDE	RE-H022TD-1130
CP601	BZ614016	069W01001A	CONNECTOR PCB SIDE	003P-2100
CP602	BZ614380	069X170379	CONNECTOR PCB SIDE	07JQ-ST
CP605	BZ614156	069R220021	CONNECTOR PCB SIDE	52287-0211
CP801	BZ614269	069S320010	CONNECTOR PCB SIDE	A2361WV2-2P
CP820	BZ614251	069R2C0589	CONNECTOR PCB SIDE	52147-1210
CP850	BZ614212	069R250589	CONNECTOR PCB SIDE	52147-0510
CD4001	BZ614373	122F061502	CORD,JUMPER	2F061502
CP1001	BZ614289	06972C0010	CONNECTOR PCB SIDE	TMC-J12P-B2
CP4001	BZ614054	0697240600	CONNECTOR PCB SIDE	TOC-C04X-B1
CP4002	BZ614050	069J760029	CONNECTOR PCB SIDE	IMSA-9604S-06Z14
CP4003	BZ614009	0697120320	CONNECTOR PCB SIDE	TMC-T02X-E1
CP803A	BZ614333	067U006049	WIRE HOLDER	B2013H02-6P
CP803B	BZ614366	069R260589	CONNECTOR PCB SIDE	52147-0610
CP805B	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P
CP810B	BZ614332	067U011029	WIRE HOLDER	B2013H02-11P

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description
		MISCELLANEOUS		
CP820B	BZ614304	067U013029	WIRE HOLDER	B2013H02-13P
CUS012	BZ710148	800WFAA007	CUSHION B	
CUS013	BZ710149	800WFAA008	CUSHION C	
EL001	BZ614043	124116281A	EYE LET	XRY16X28BD
EL002	BZ614044	124120301A	EYE LET	XRY20X30BD
⚠F501	BZ614177	081PC05004	FUSE	51MS050LCC
⚠FB401	BZ310176	043214034F	TRANSFORMER,FLYBACK	3214034F
FH501	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
FH502	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
⚠ICP502	BZ614277	0835C10003	MICRO FUSE	20N_10KFS
OS2202	BZ614199	077Q004017	REMOTE RECEIVER	PIC-37243SR
⚠RY503	BZ612011	0560V10118	RELAY	ALKS325
SP351	BZ614200	070C533019	SPEAKER	SG04D11BNA
TM101	BZ614319	076D0DQ050	TRANSMITTER	TOT201N06010
TU601	BZ310341	0145K00056	TUNER,VHF-UHF	TECC1040PG32E
⚠V801	BZ614342	098Y1404B9	CRT W/DY	A34JXV70X53N45
X602	BZ613004	100CT3R505	CRYSTAL	HC-49/C
X1001	BZ613002	100CT01207	CRYSTAL	HC-49/U-S
X1002	BZ613006	100DA32R01	CRYSTAL	DT-26
X4001	BZ613017	100CT3R502	CRYSTAL	HC-49/U

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
CE..... ALUMI ELECTROLYTIC CAPACITOR
CP..... POLYESTER CAPACITOR
CPP..... POLYPROPYLENE CAPACITOR
CPL..... PLASTIC CAPACITOR
CMP..... METAL POLYESTER CAPACITOR
CMPL..... METAL PLASTIC CAPACITOR
CMPP..... METAL POLYPROPYLENE CAPACITOR

TV BLOCK DIAGRAM

MICON/IN/OUT
SCL
SDA
AT+13V
Y/C/AUDIO/CCD/
HEAD AMP
TU_AUDIO
TU_VIDEO
MINITOR_A
Q601
BUFFER
8.7VREF
5.7VREF(P.C0N)
CHROMA/IF IC
IC601 M61206FP
52 EXT AUDIO IN
56 VIF APC FILTER
57 VIF VIDEO OUT
55 VREG VCC
33 7.8V REG OUT
39 5V REG
13 POWER ON CONT
53 FM DIRECT OUT
TU601
SAW FILTER
CF601
62 RF AGC OUT
1 VIF IN
64 VIF IN
60 AFT OUT
SOUND AMP IC
IC351 AN7523
SP351
SPEAKER
J351
HEAD PHONE
31 ACL/ABCL
MICON/IN/OUT
TV_POWER-H
J503
DC JACK
Q501
DC POWER
SW.
11.3V REG. OPE AMP IC
IC504 NJM2368D
Q509, Q512
REG DRIVE
Q505
SW.
T502
F501
L501
AC IN
D503, D504, D535, D536
RECTIFIER
T501
RY503
RELAY
Q518
PROTECTOR
Q507
FEED BACK
SW.
Q510
SWITCHING
Q502
SWITCHING
IC506
LTV-817M-VB
FEED BACK
AC+B ADJ
VR502
VR501
DC+B ADJ
Q511
DC POWER
SW.
Q514
PROTECTOR/
AC, DC SW.
XTAL
H.PLUSE OUT
FBP IN
H OUT
32
12
6
7
X602
3.579545MHz
AUDIO OUT 50
SDA 10
SCL 5
FAST BLK 27
R OUT 14
G OUT 15
B OUT 16
V OUT 17
V PULSE OUT 29
V RAMP FEEDBACK 21
B IN 20
G IN 28
R IN 30
V. POSI ADJ
VR402
V. OUTPUT IC
IC401 AN5522
THERMAL
PROTECTION
PUMP
UP
5 1 7 2 3
Q405
H-DRIVE
Q406
H. OUTPUT
DY
FB401
HV
F
S
J801
V801
CRT
Q804
RED AMP
Q805
GREEN AMP
Q806
BLUE AMP
Q609
SW
PROTECT
MICON/
IN/OUT
Q604
SW
P. CON + 8V
VD
AFT_M
OSD_BLK
OSD_B
OSD_G
OSD_R
HD
VCR_POWER-H
X-RAY_TEST
X-RAY-STOP
MICON/
/IN/OUT
Q407, Q404
SW
Q408
X-RAY-SW
L508
DEGAUSS COIL
Q402
DEGAUSS
DRIVER
Q401
DEGAUSS
SW.
VD
Y/C/AUDIO/CCD/
HEAD AMP
Q610, Q611
REG
P.CON+13V
Q608
REG
P.CON+8V
REG
P.CON+5V
Q605, Q606
5V REG IC
IC603
KIA78R05PI
P.CON+5V

Y/C/AUDIO/HEAD AMP BLOCK DIAGRAM

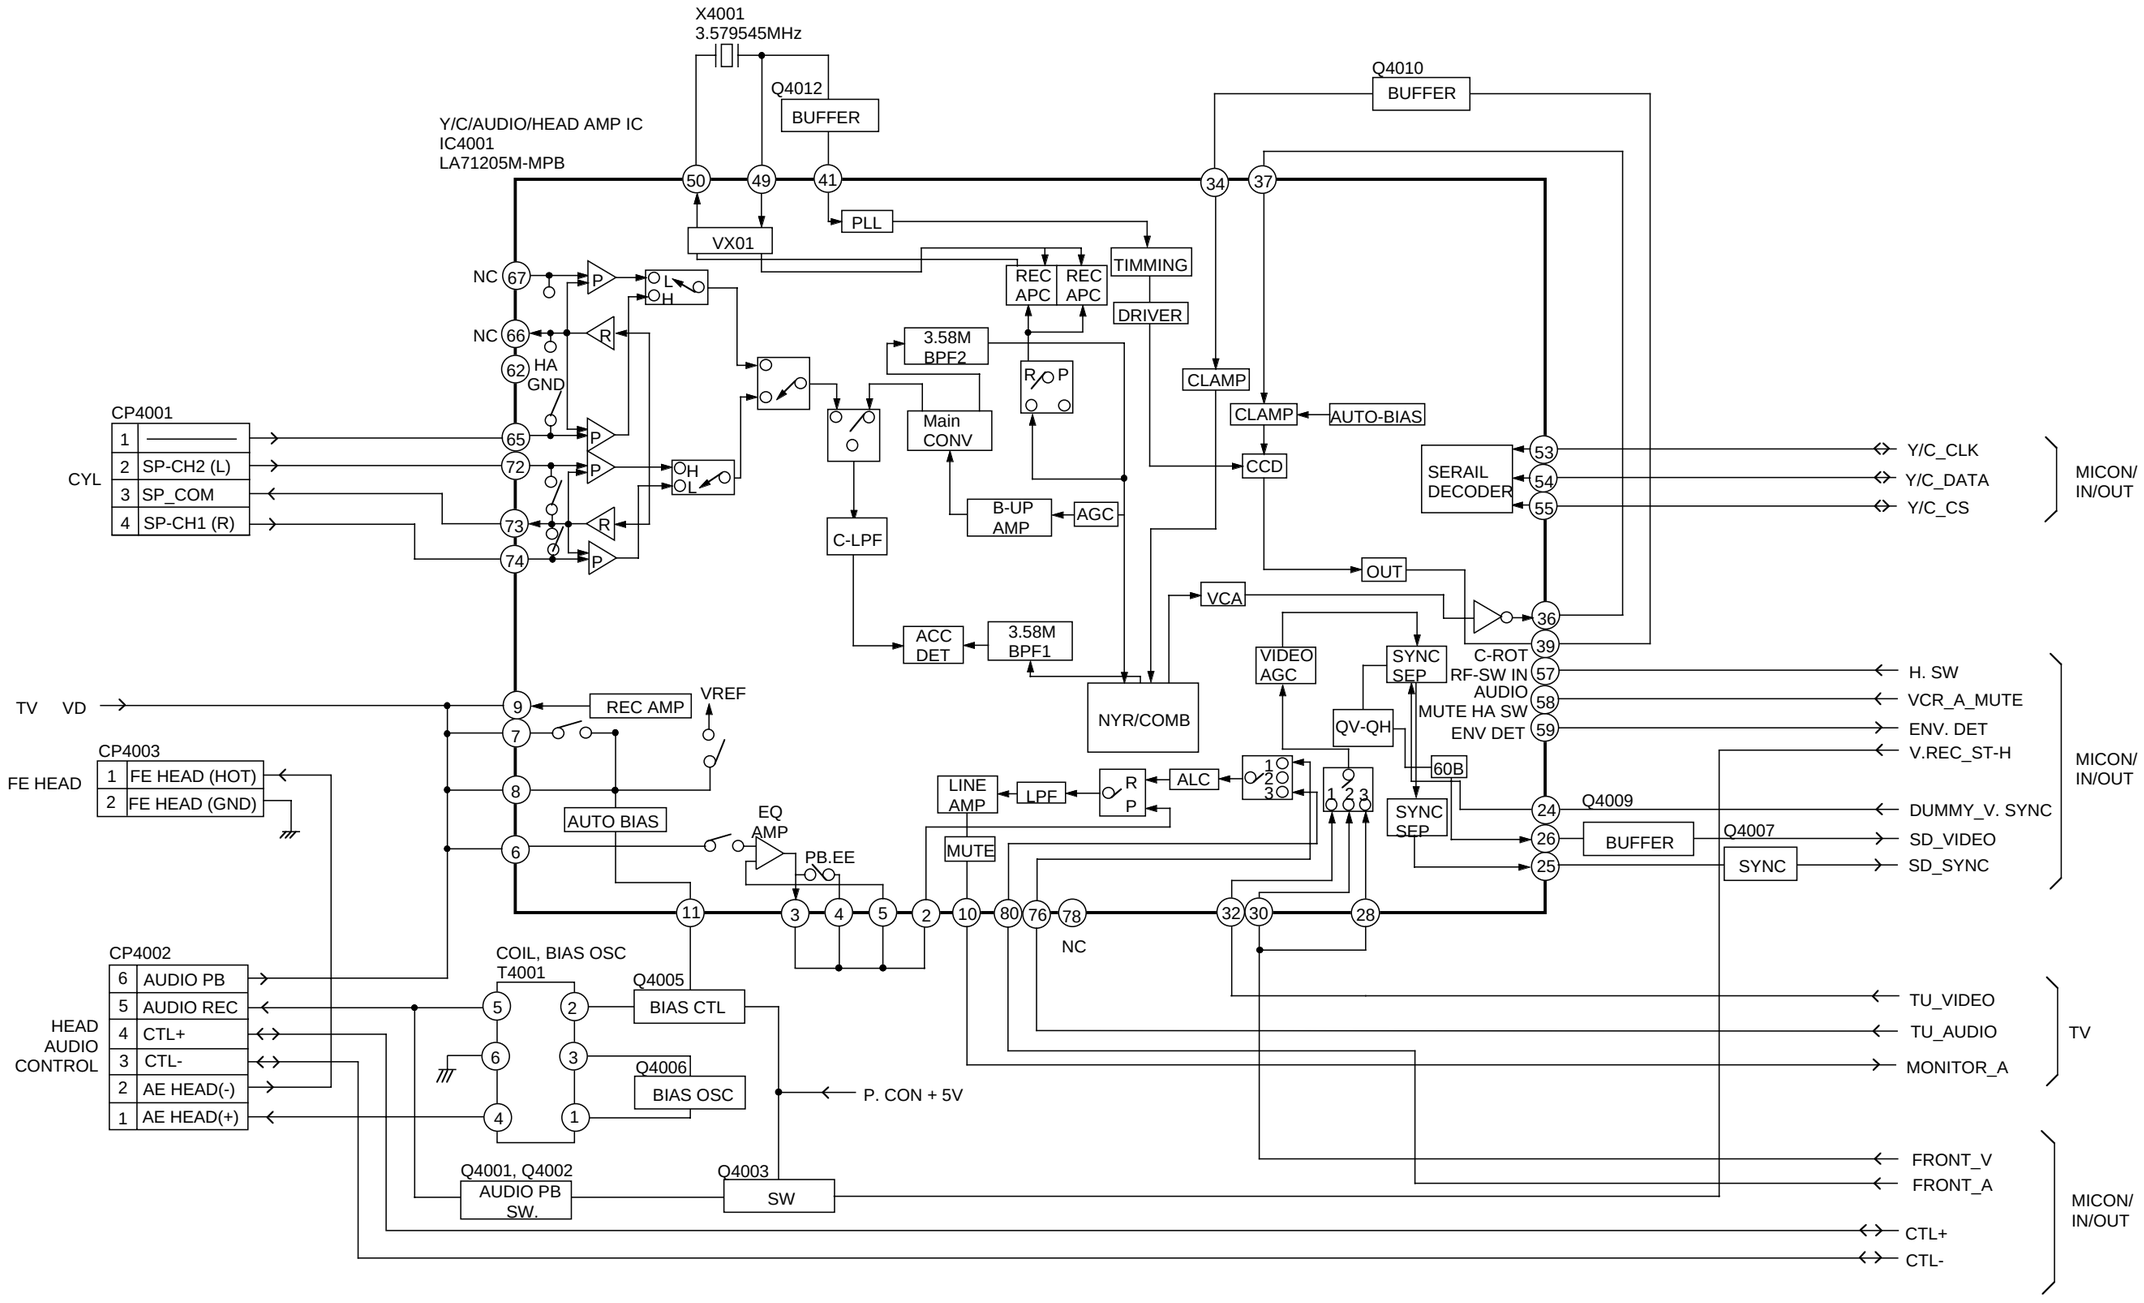

MICON/IN/OUT BLOCK DIAGRAM

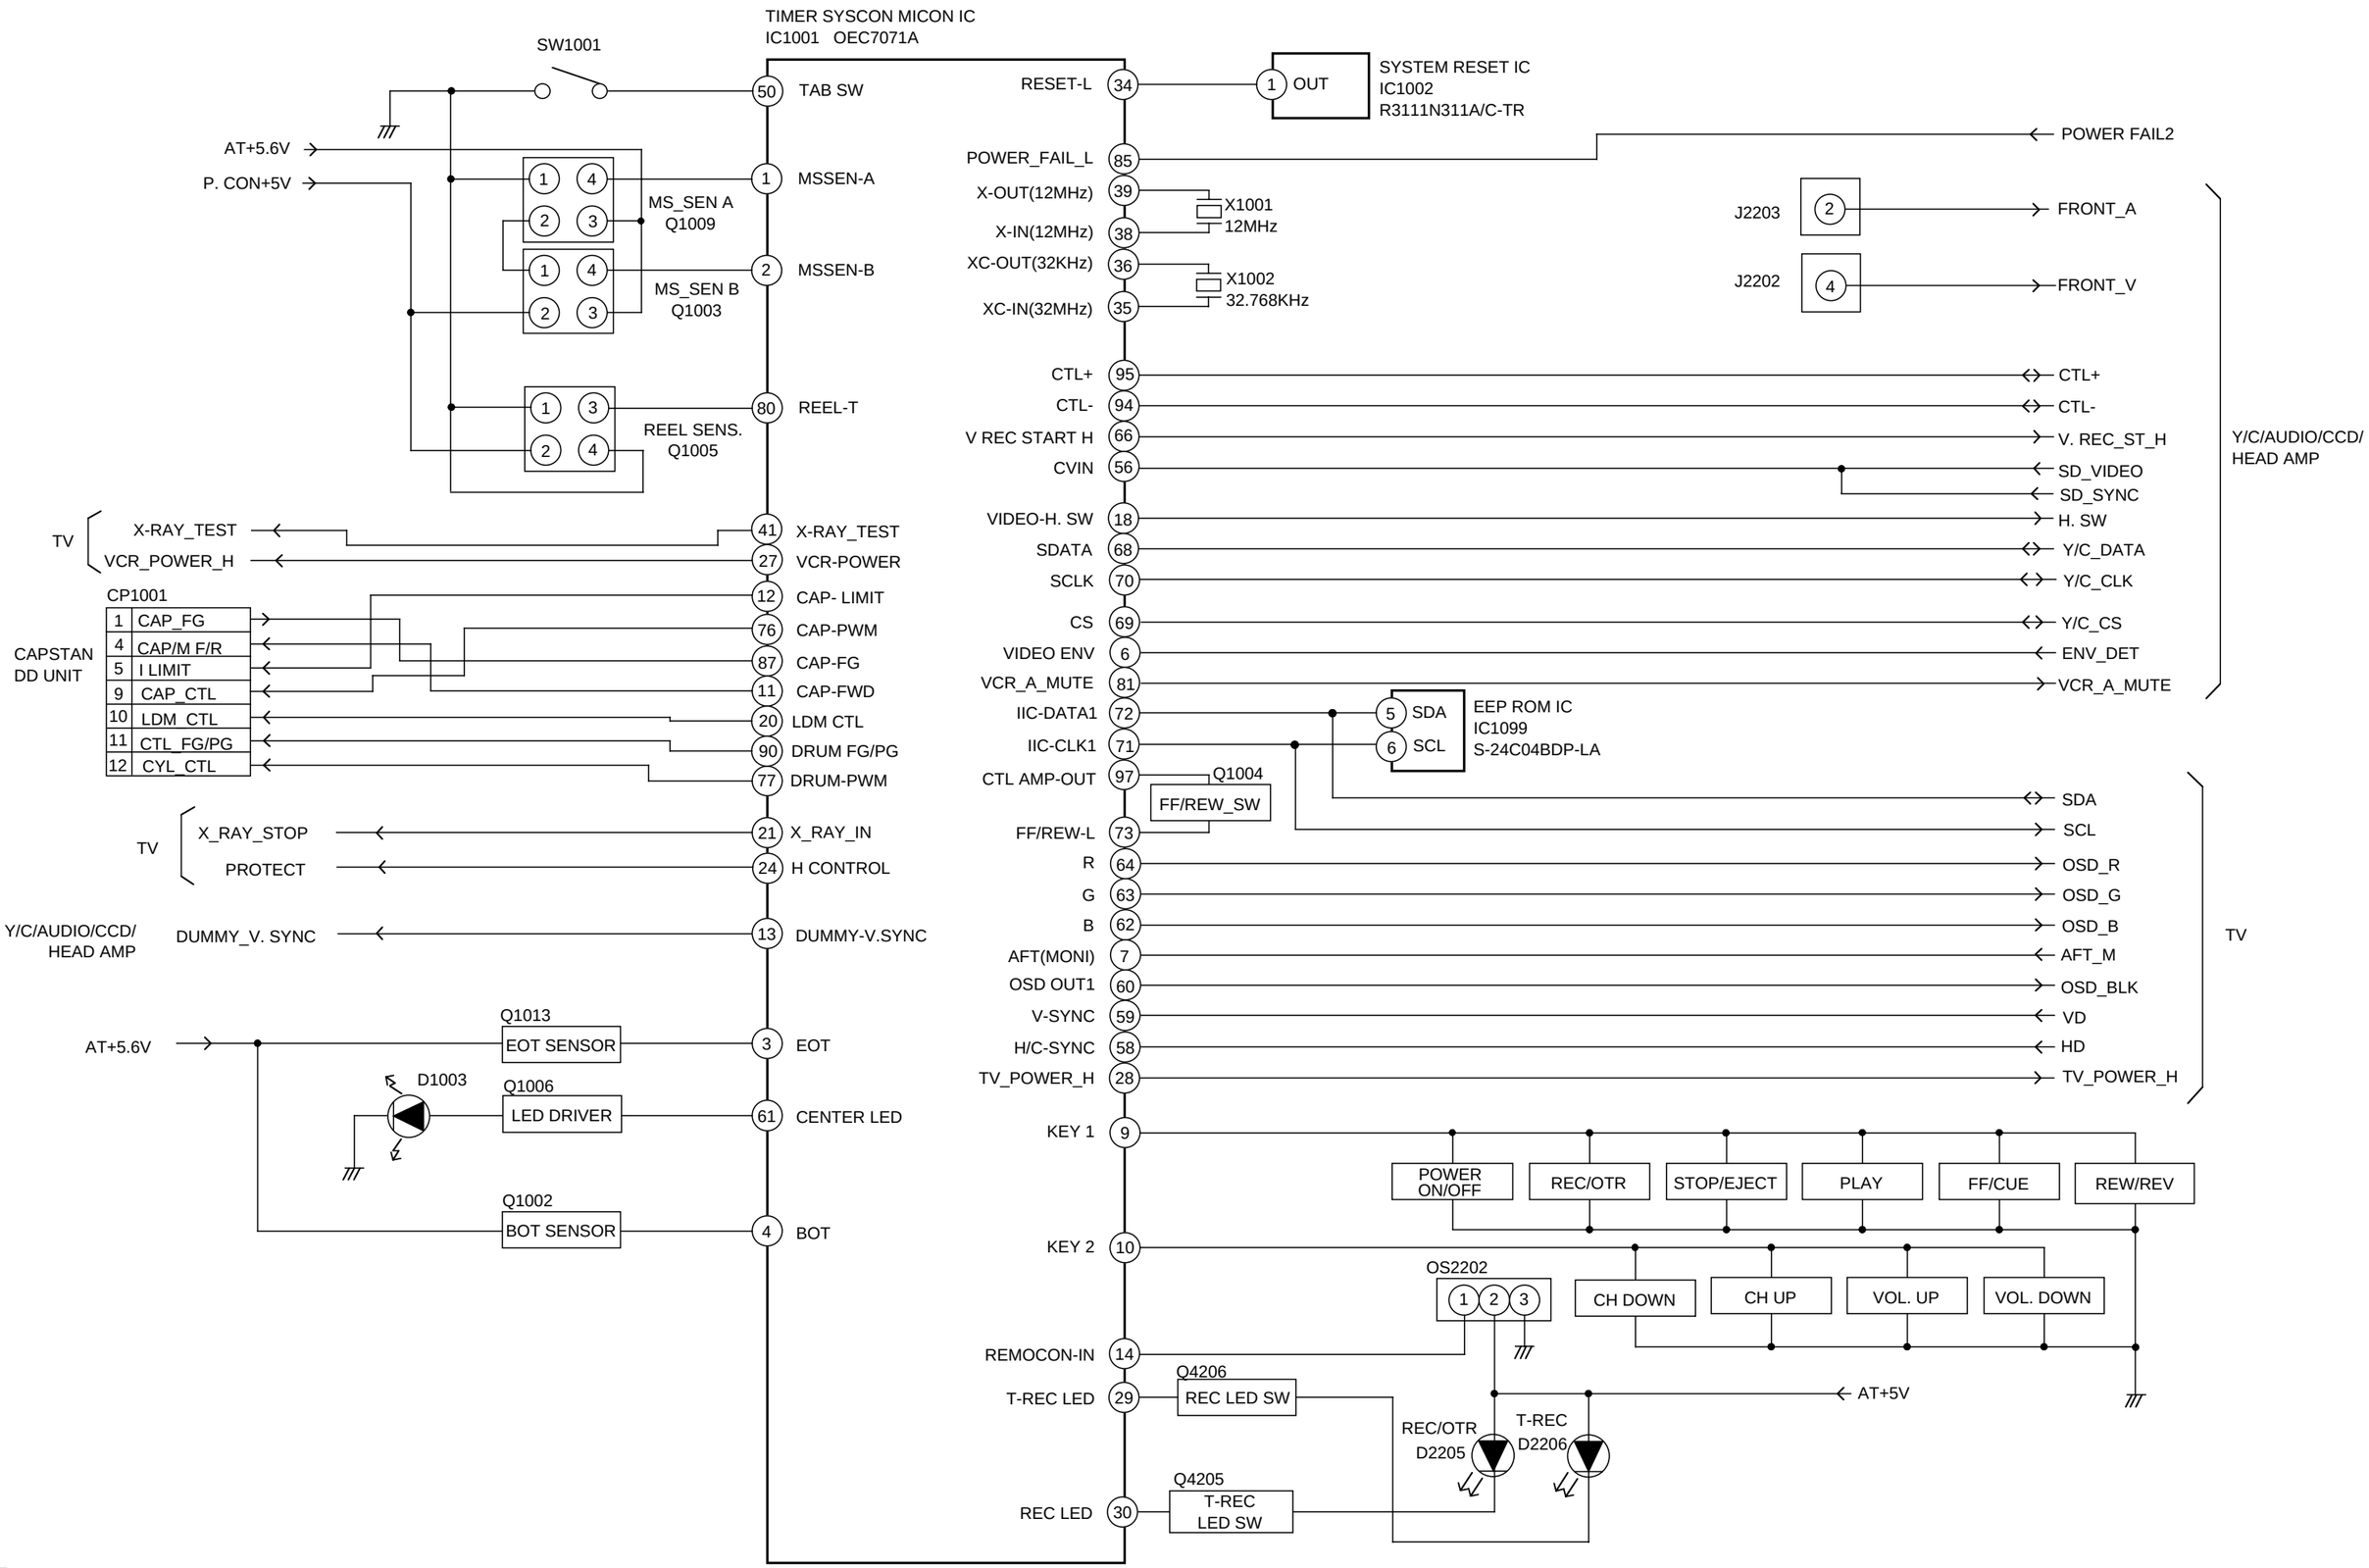

PRINTED CIRCUIT BOARDS
MAIN/CRT
SOLDER SIDE

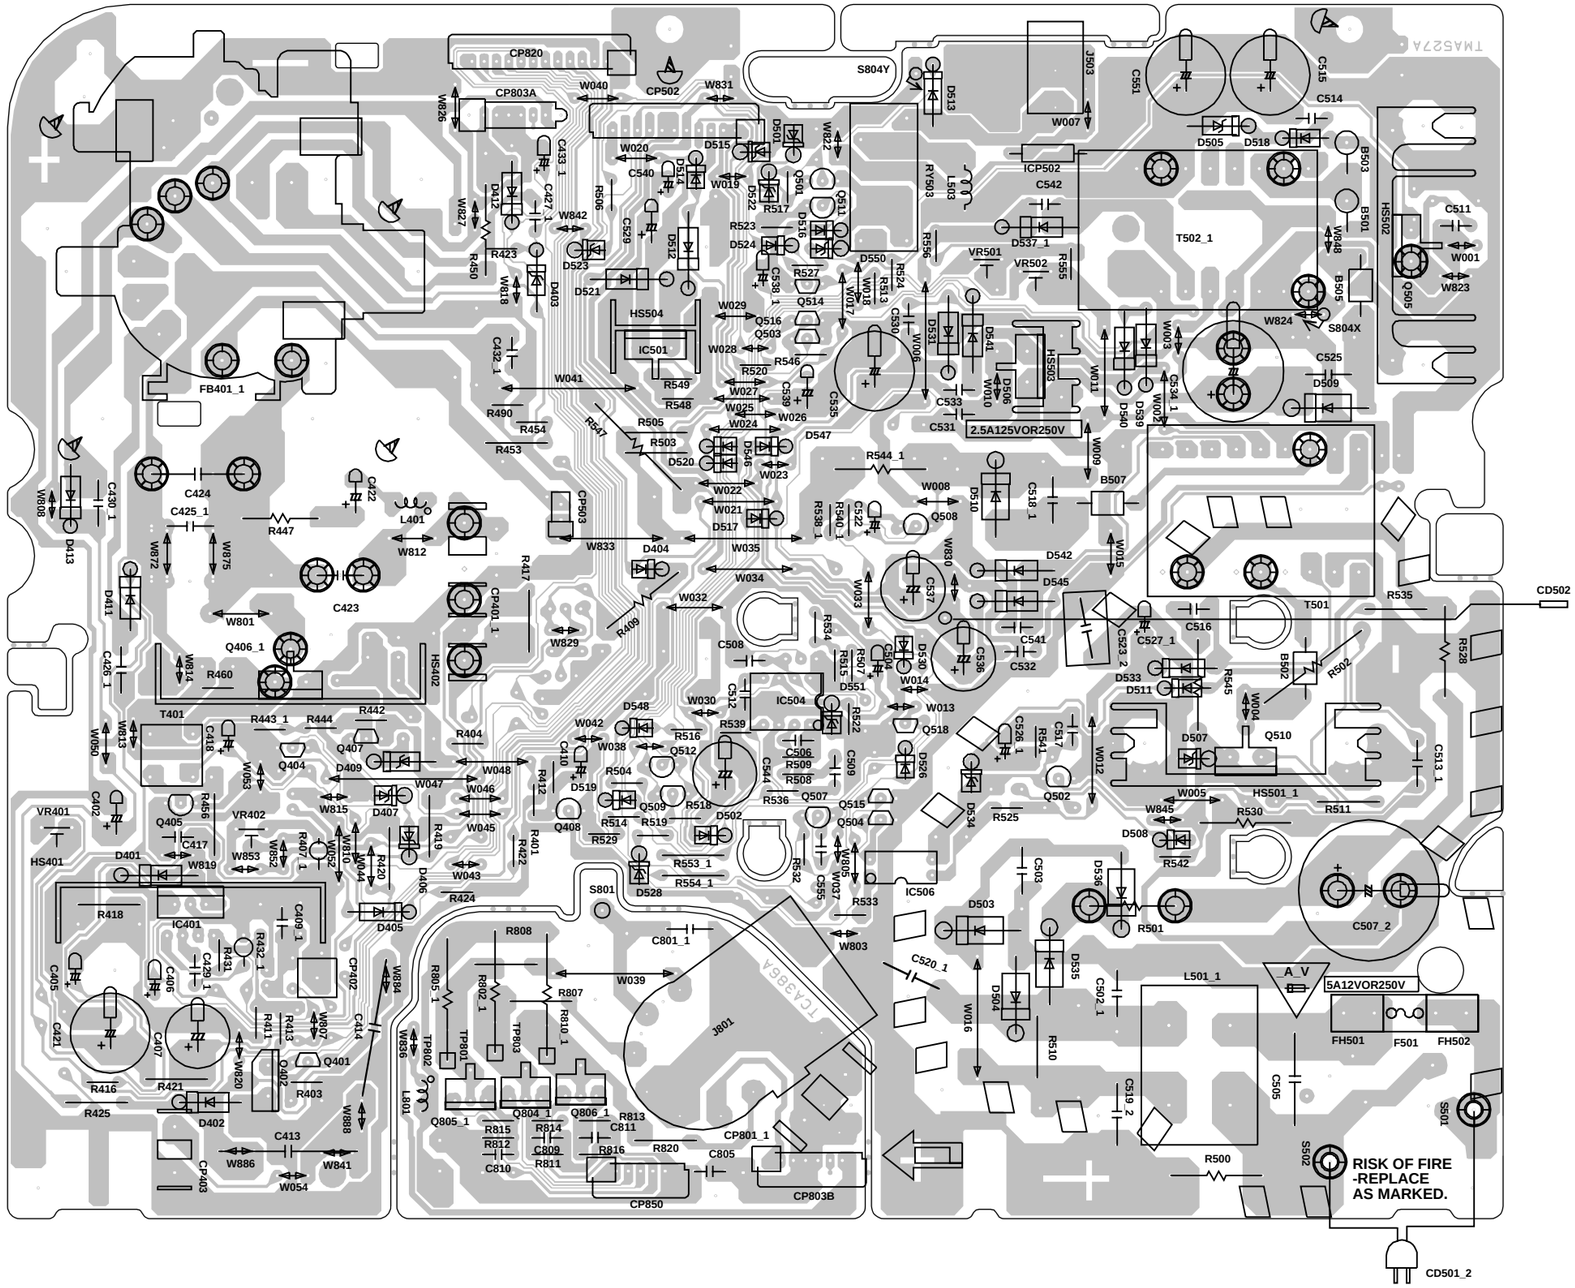
TMA527A
TCA386A
CP820
CP803A
CP502
S804Y
J503
C551
C515
C514
D505
D518
B503
B501
HS502
C511
W001
W823
Q505
S804X
W824
C525
D509
W007
ICP502
C542
T502_1
D537_1
VR501
VR502
R555
R556
L503
RY503
D513
W822
W831
W040
W826
C433_1
D515
D520
W020
C540
D514
W019
Q501
Q511
D522
R517
D516
R523
D524
R527
C538_1
Q514
D550
R524
R513
W018
W017
C530
D533
D541
W006
HS503
D506
W010
C533
C531
2.5A125VOR250V
W009
W011
D539
D540
W003
W004
C534_1
B507
D510
C518_1
W008
Q508
R544_1
D542
D545
W015
W030
C537
C536
C541
C532
C523_2
C527_1
C516
T501
R535
CD502
R526
B502
R502
R545
D533
D511
W014
W013
Q518
D530
D551
R507
R515
C540
C512
IC504
R522
R539
W042
D548
W038
R516
Q512
C506
R509
R508
C509
C544
R536
Q507
Q515
Q504
D526
C528_1
R541
C517
W012
Q502
D534
R525
D507
Q510
W005
W845
D508
R542
HS501_1
R530
R511
C513_1
W001
W823
C507_2
D536
R501
C503
IC506
R533
W803
D503
C520_1
D504
D535
C502_1
L501_1
A V
5A12VOR250V
FH501
F501
FH502
C505
S501
S502
R500
RISK OF FIRE
-REPLACE
AS MARKED.
CD501_2
W033
W034
W035
W032
W829
R409
R417
CP401_1
C423
W801
Q406_1
W814
R460
T401
HS402
C426_1
W050
W813
R443_1
R444
R442
C418
W083
Q404
Q407
D409
R404
W048
W047
W046
W045
W043
R424
D407
D406
D405
R419
R420
W044
W052
W810
W815
W853
W852
R407_1
C417
W819
D401
R418
IC401
C409_1
R432_1
R431
C429_1
C406
C405
C407
C421
R416
R425
R421
W820
Q402
R403
Q401
W807
C414
CP402
W804
W836
D402
C413
W886
W888
W841
W054
CP403
VR401
HS401
VR402
R456
Q405
C402
C417
R412
D519
R504
Q509
R518
R514
R519
Q408
R529
R401
R422
D502
D528
R553_1
R554_1
S801
C410
W042
W038
W048
W046
W045
W043
R424
R808
R805_1
R802_1
TP801
TP802
TP803
R810_1
R807
W039
C801_1
J801
Q805_1
Q804_1
Q806_1
R813
R814
C811
R815
R812
C809
R811
C810
R816
R820
C805
CP801_1
CP803B
CP850
W803
W016
R510
C519_2
W829
R409
W032
C508
W030
W042
W038
W048
W047
W046
W045
W043
R424
W033
W034
W035
W801
W829
W032
W030
W803
W016
W039
W054
W841
W886
W888
W836
W807
W820
W810
W815
W819
W853
W852
W813
W814
W812
W833
W822
W831
W040
W826
W827
W842
W818
W829
W803
W016
W039
W054
W841
W886
W888
W836
W807
W820
W810
W815
W819
W853
W852
W813
W814
W812
W833
W822
W831
W040
W826
W827
W842
W818
W823
W824
W845
W848
W001
W823
W824
W845
W848
W823
W824
W845
W848
W001
W823
W824
W845
W848
W001
W823
W824
W845
W848
W001

PRINTED CIRCUIT BOARDS
SYSCON (INSERTED PARTS)
SOLDER SIDE

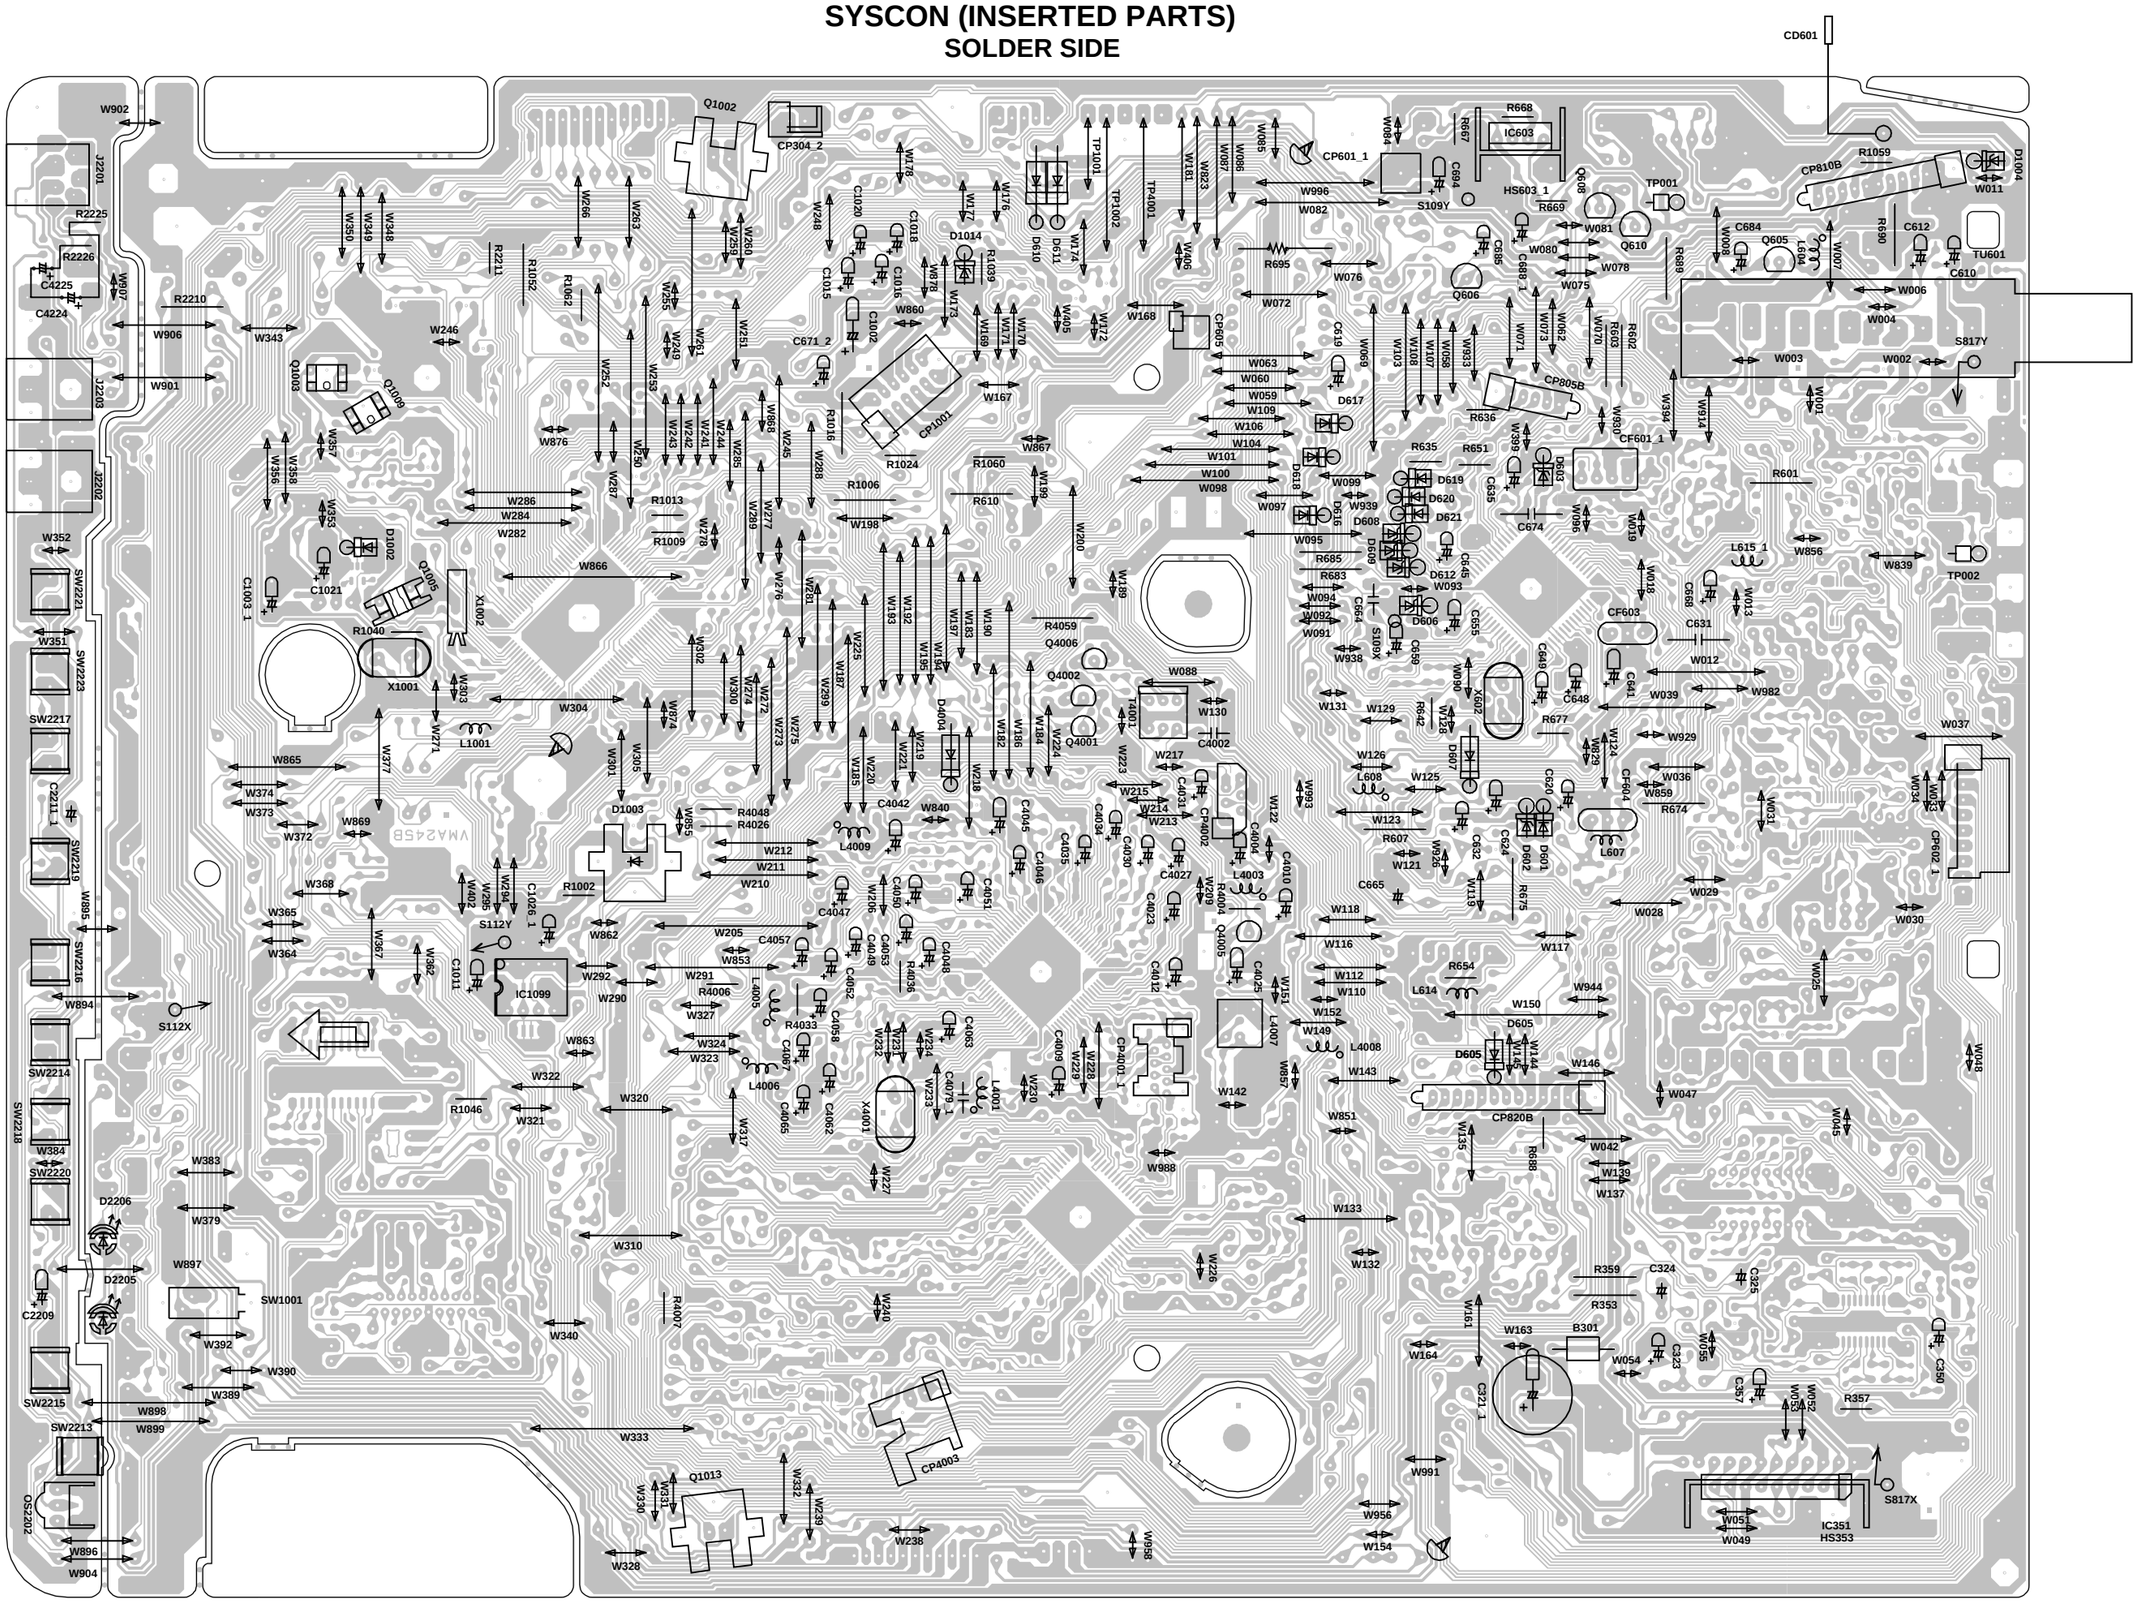
CD601
W902
J2201
R2225
R2226
C4225
C4224
W907
R2210
W906
W901
J2203
J2202
W343
W246
Q1003
Q1009
W357
W356
W358
W355
D1002
C1021
C1003_1
W352
SW2221
W351
SW2223
SW2217
C2211_1
SW2219
W885
SW2216
W894
S112X
SW2214
SW2218
W384
SW2220
D2206
D2205
C2209
SW2215
SW2213
OS2202
W896
W904
W383
W379
W897
SW1001
W392
W390
W389
W898
W899
W865
W374
W373
W372
W869
W368
W365
W364
W367
W362
S112Y
C1011
C1026_1
W402
W285
W295
R2211
R1052
W266
W253
W350
W349
W348
R1062
W255
W249
W261
W251
W252
W259
W260
W248
Q1002
CP304_2
W178
C1020
C1018
C1016
C1015
C1002
W860
W173
W169
W171
W170
C671_2
CP1001
W167
W876
W286
W284
W282
W866
W287
W230
W243
W242
W241
W244
W285
W245
W868
W288
R1016
R1024
R1013
W278
R1009
W289
W277
W276
W281
R1006
W198
W867
R1060
R610
W199
W200
W189
W193
W192
W157
W183
W190
W196
W194
W225
W187
W299
W220
W219
W221
W218
W217
W215
W214
W213
W223
W224
W184
W186
W182
W181
W180
W179
W174
W175
W176
W177
D1014
R1039
D610
D611
TP1001
TP1002
TP4001
W823
W087
W086
W085
W405
W406
W168
W172
CP601_1
W996
W082
W084
R667
C694
S109Y
R668
IC603
HS603_1
R669
Q608
W081
Q610
TP001
W080
C685
C689_1
Q606
W078
W075
W062
W071
W073
W070
R603
R602
R695
W076
W072
CP805
C619
W069
W103
W108
W107
W058
W933
CP805B
R636
W930
W914
W394
CF601_1
W063
W060
W059
W109
W106
W104
W101
W100
W098
D617
D618
W099
W939
D616
D608
D609
W095
R685
R683
W094
W092
W091
W938
S109X
R635
R651
W399
D603
C635
D619
D620
D621
C674
C645
D612
W093
D606
C659
C664
C655
W090
X602
W131
W129
R642
W128
D607
W126
L608
W125
W123
R607
W121
W926
W122
C4004
C4010
C4025
L4007
W151
W857
W142
W851
W135
R688
W988
W133
W132
W163
W164
W165
C321_1
W991
W956
W154
W993
W118
W116
W112
W110
W152
W149
L4008
W143
W150
W944
L614
R654
D605
W146
W147
W148
W145
W144
W042
W139
W137
W047
W048
W045
W025
W030
W029
W028
W117
W031
W032
W033
W034
CP602_1
W036
W859
R674
W039
W982
W929
W037
W124
W128
CF604
C620
D602
D601
L607
C632
C624
R675
C665
W119
W926
W012
C641
C648
R677
C649
W130
W131
W129
R642
W128
W127
W126
W125
W123
W121

PRINTED CIRCUIT BOARDS
SYSCON (CHIP MOUNTED PARTS)
SOLDER SIDE

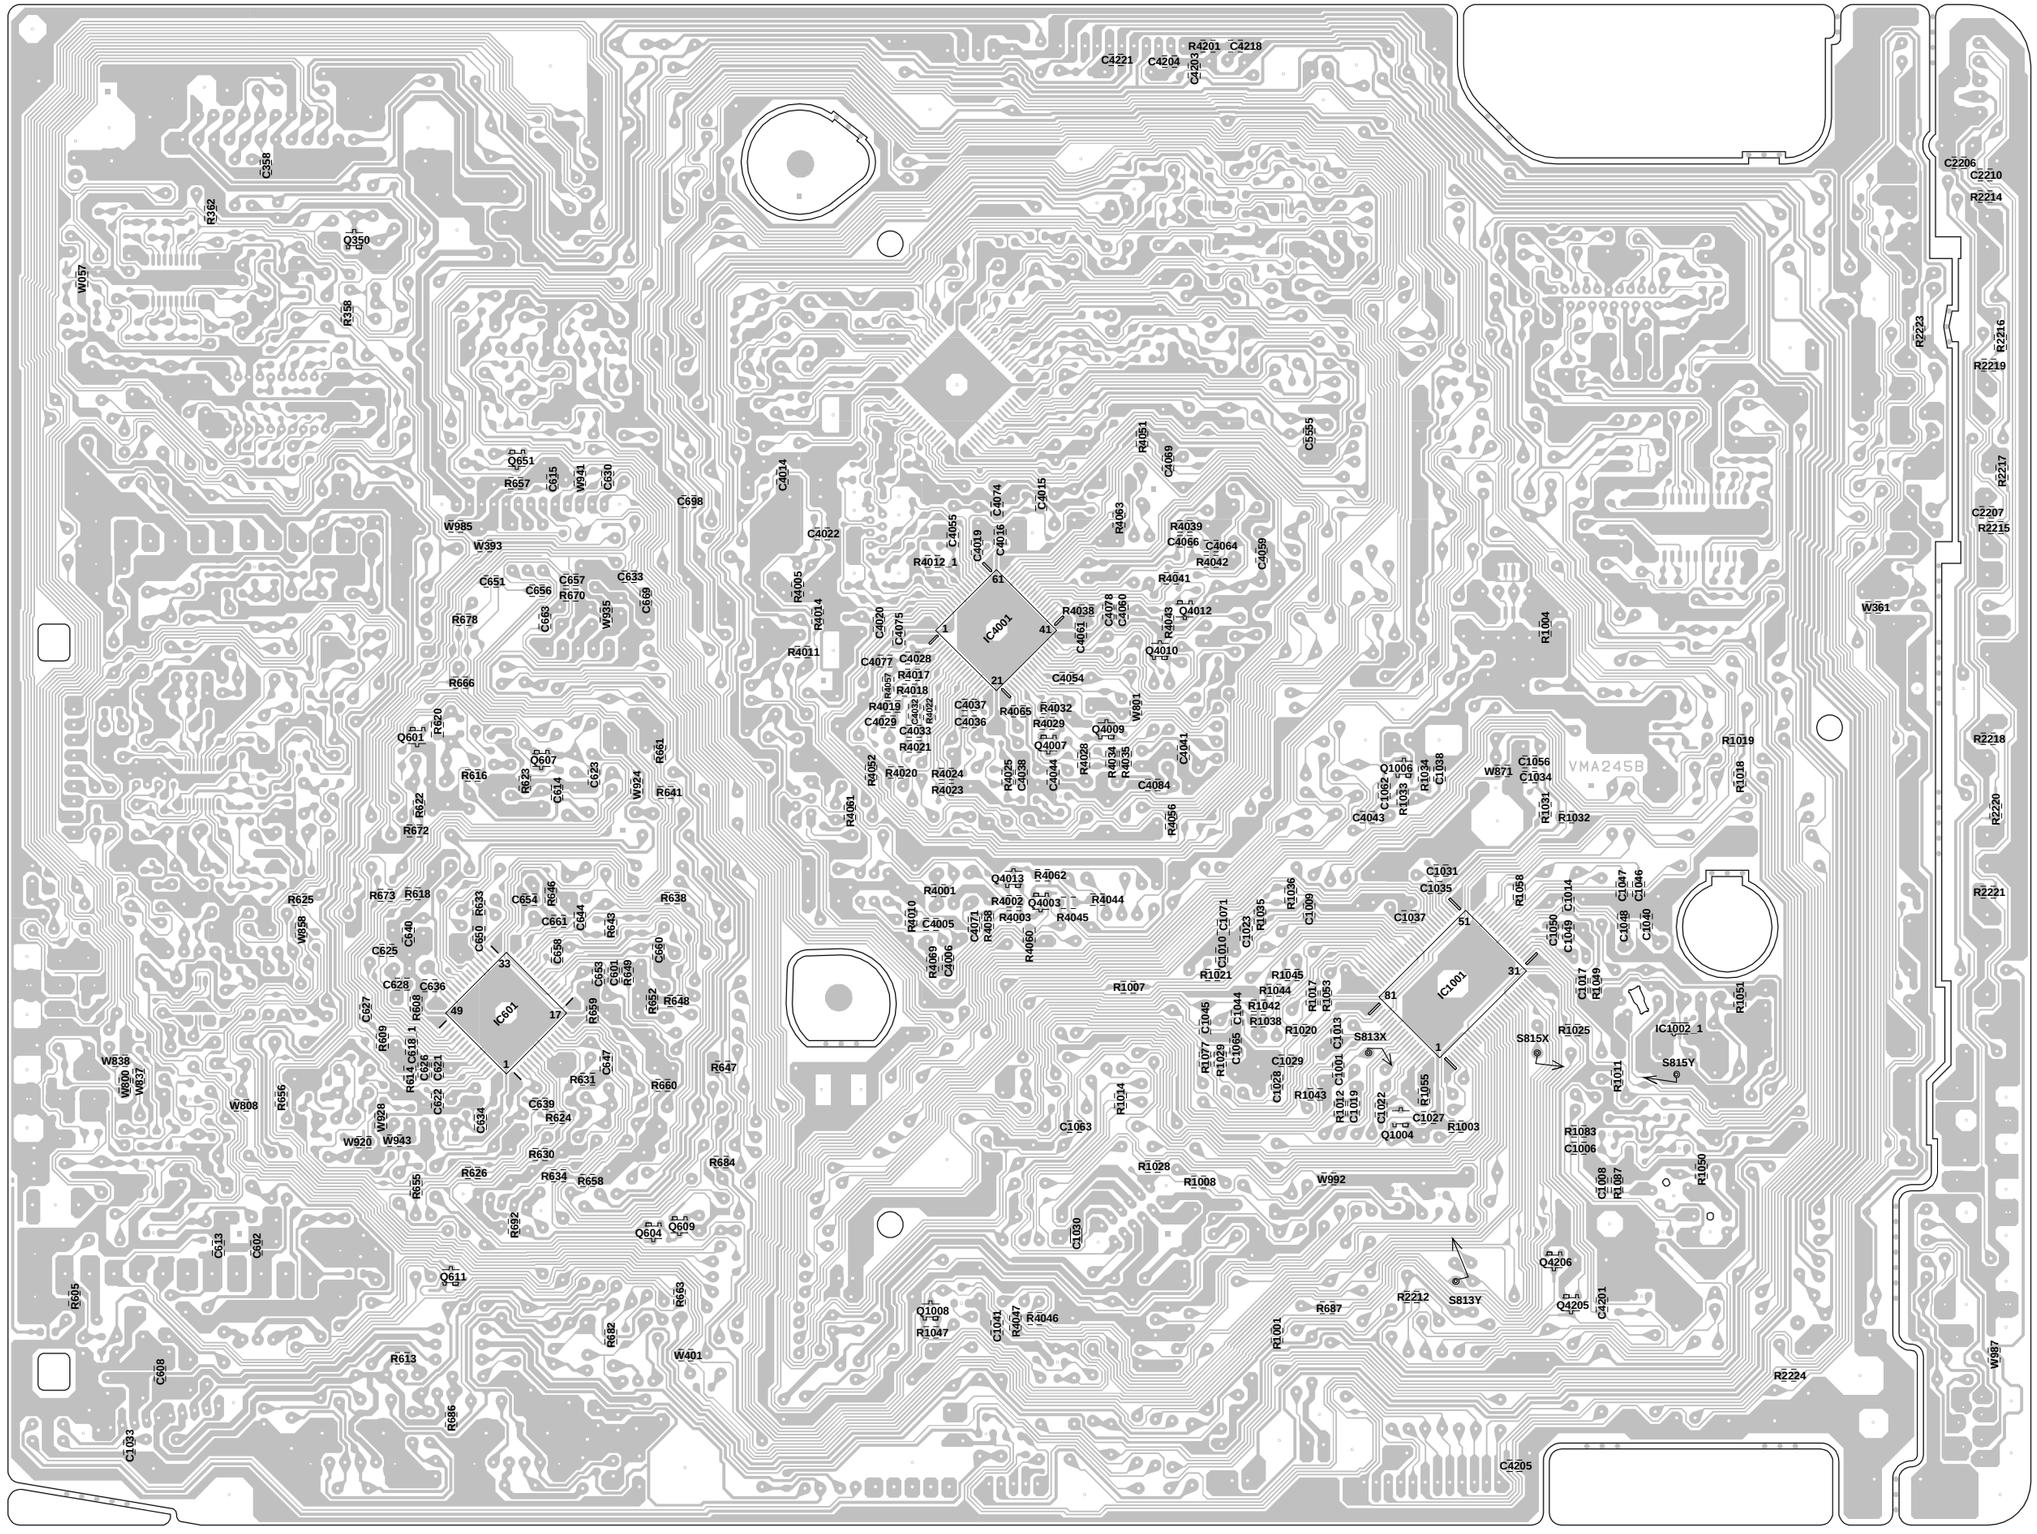

Y/C/AUDIO/HEAD AMP SCHEMATIC DIAGRAM

(SYSCON PCB)

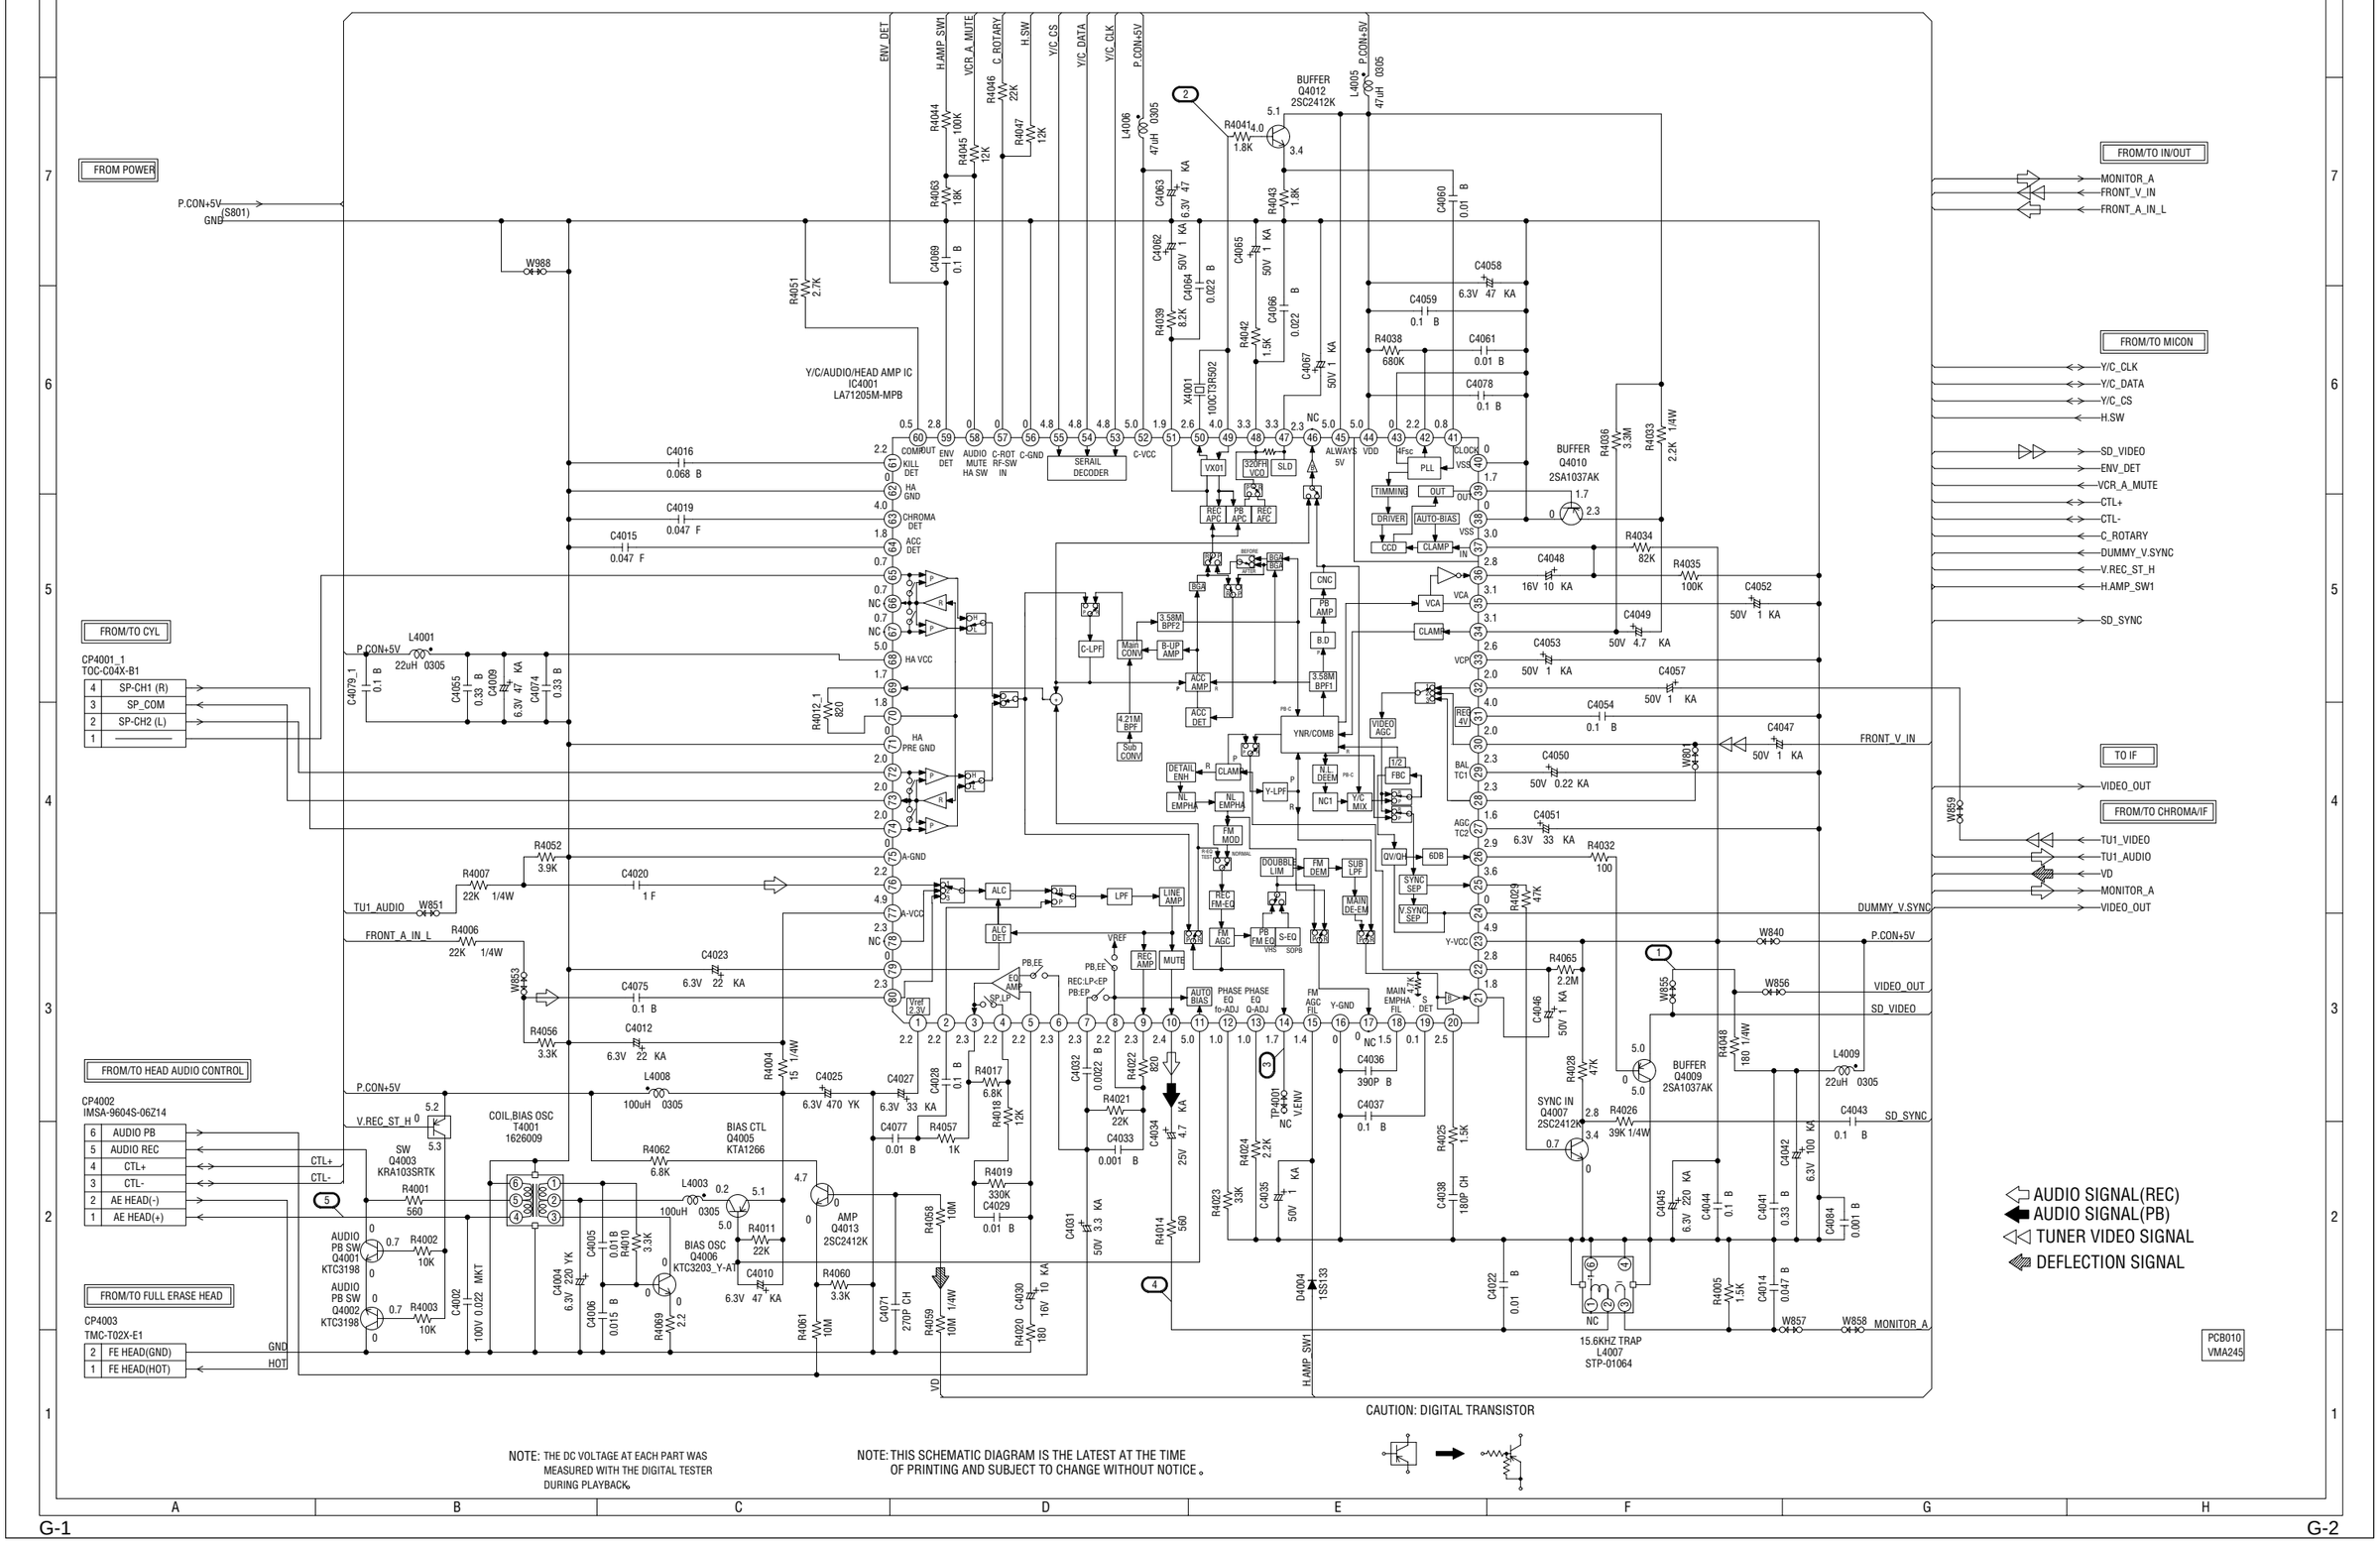

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

MICON SCHEMATIC DIAGRAM (SYSCON PCB)

FROM/TO POWER
AT+5V[BACKUP]
AT+5V[UCON]
GND
P.CON+5V
AT+12V
MOTOR_GND
X-RAY_STOP
POWER_FAIL[DC]

FROM/TO DECK
CP1001
TMC-J12P-B2

1	CAP_FG
2	CAP_VCO
3	VCC
4	CAP/M/F/R
5	I LIMIT
6	GND[M]
7	GND
8	LD/CY_VCO
9	CAP_CTL
10	LDM_CTL
11	CYL_FG/PG
12	CYL_CTL

FROM/TO DECK
CP605
52287-0211

1	DEW-
2	DEW+

CAUTION: DIGITAL TRANSISTOR

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

TIMER SYSCON MICON IC
IC1001
OEC7071A

81 VCR_A_MUTE
82 TV_A_MUTE
83 EXT_A_MUTE
84 NC(TUNER_CTL)
98 AMP-VCC
99 ANALOG VCC
100 DEW/ST_SELECT
50 TAB SW
49 OSD-VSS
48 AV2
33 PLAY LED
32 RENT_H / OTPB_LED
31 ON-TIMER LED

FROM/TO Y/C/AUDIO/HEAD AMP
Y/C_CLK
Y/C_DATA
Y/C_CS
H.SW
SD_VIDEO
ENV_DET
VCR_A_MUTE
CTL+
CTL-
C_ROTARY
DUMMY_V.SYNC
V.REC_ST_H
H.AMP_SW1
SD_SYNC

FROM/TO CHROMA/IF
HD
VD
DEGAUSS_H
POWER_FAIL
OSD_R
OSD_G
OSD_B
OSD_BLK
SDA
SCL
AFT_M
VCR_POWER_H
TV_POWER_H
X_RAY_TEST
PROTECT
IIC_OFF
H_CONTROL

FROM/TO IN/OUT
REC_LED
T-REC_LED
KEY_A
KEY_B
REMOCON_IN
X-RAY_STOP

TO SOUND AMP
TV_POWER_H
TV_A_MUTE

B.SIGNAL
G.SIGNAL
R.SIGNAL
CAPSTAN AFC SIGNAL
TUNER VIDEO SIGNAL
DEFLECTION SIGNAL
AUDIO SIGNAL(REC)
CYLINDER APC SIGNAL

PCB010
VMA245

G-3
G-4

POWER SCHEMATIC DIAGRAM

(SYSCON PCB)

FROM/TO TV POWER
CP601_1 (CP502)
003P-2100
1 GND

FROM/TO DEFLECTION
CD601 (CP402)
CH01006A
1 GND

FROM TV POWER
CP810B (CP502)
B2013H02-11P
1 GND
2 GND
3 AT+5.6V
4 AT+12V
5 MOTOR_GND
6 UNREG+8V
7 UNREG+8V
8 AT+13V
9 AT+30V
10 X-RAY_STOP
11 POWER_FAIL[DC]

R690 1K 1/2W
C608 1 F
D610 SB140-EIC
D611 SB140-EIC
REG. Q608 2SC13840W (12.6 / 8.8 / 8.2)
REG. Q606 2SC13840W (7.8 / 5.6 / 5.2)
REG. Q605 2SC13840W (7.8 / 5.6 / 5.2)
R682 100
R686 100
R663 100
C684 16V 22 KA
C685 16V 22 KA
C688_1 16V 10 KA
IC603 5V REG.IC KIA78R05PI
IN OUT GND SW (1 2 3 4) 7.7 5.2 0.3 8.8
R669 1K 1/4W
TP001
HS603_1 763WAA0017
R668 470 1/4W
R667 15 1/4W
C694 6.3V 470 YK
R613 10K
R689 560 1/2W
P.CON+13V REG. Q610 2SB1131 (13 / 13 / 12)
P.CON+13V SWITCHING Q611 KRC102SRTK (0 / 5 / 0)
W996
W878

TO Y/C/AUDIO/HEAD AMP
P.CON+5V
GND

TO MICON
AT+12V
MOTOR_GND
AT+5V[UCON]
AT+5V[BACKUP]
P.CON+5V
GND

TO IN/OUT
AT+5V[UCON]
GND

FROM/TO SOUND AMP
GND

FROM/TO CHROMA/IF
5.7VREF[PCON]
8.7VREF
AT+30V
VCR_POWER_H
P.CON+5V
P.CON+8V
P.CON+5V[CHROMA]
P.CON+5V[TU1]
GND
CHROMA+13V

TO HI-FI
P.CON+5V
GND

FROM/TO MICON
X-RAY_STOP
POWER_FAIL[DC]

PCB010
VMA245

CAUTION: DIGITAL TRANSISTOR

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

IN/OUT SCHEMATIC DIAGRAM

(SYSCON PCB)

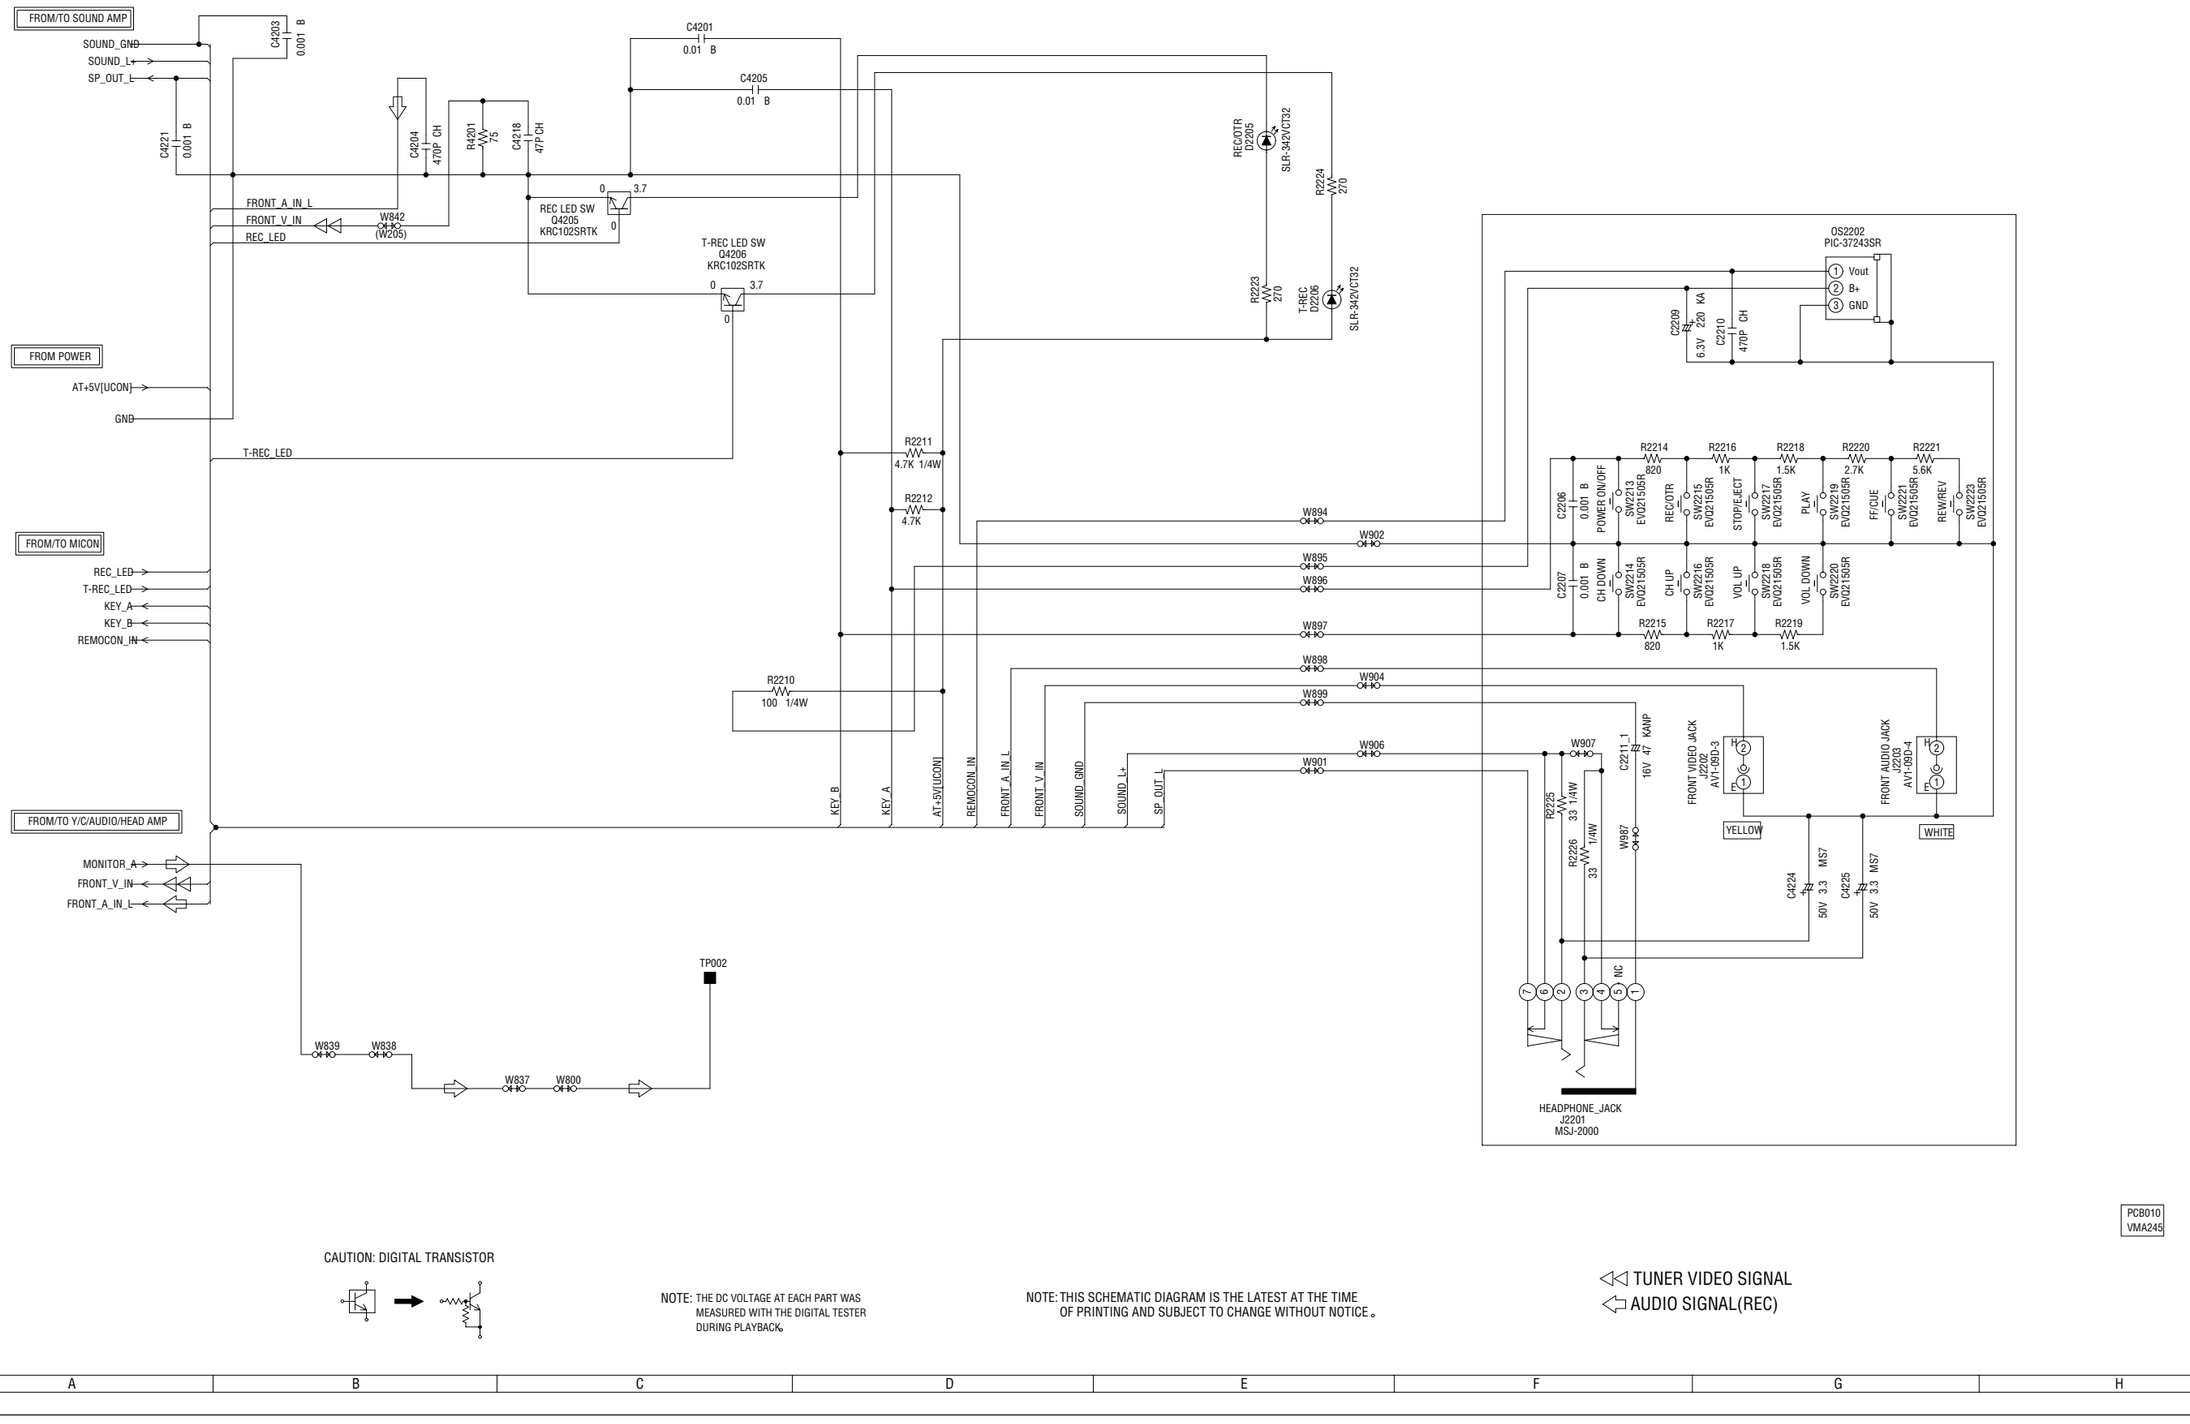

CHROMA/IF SCHEMATIC DIAGRAM (SYSCON PCB)

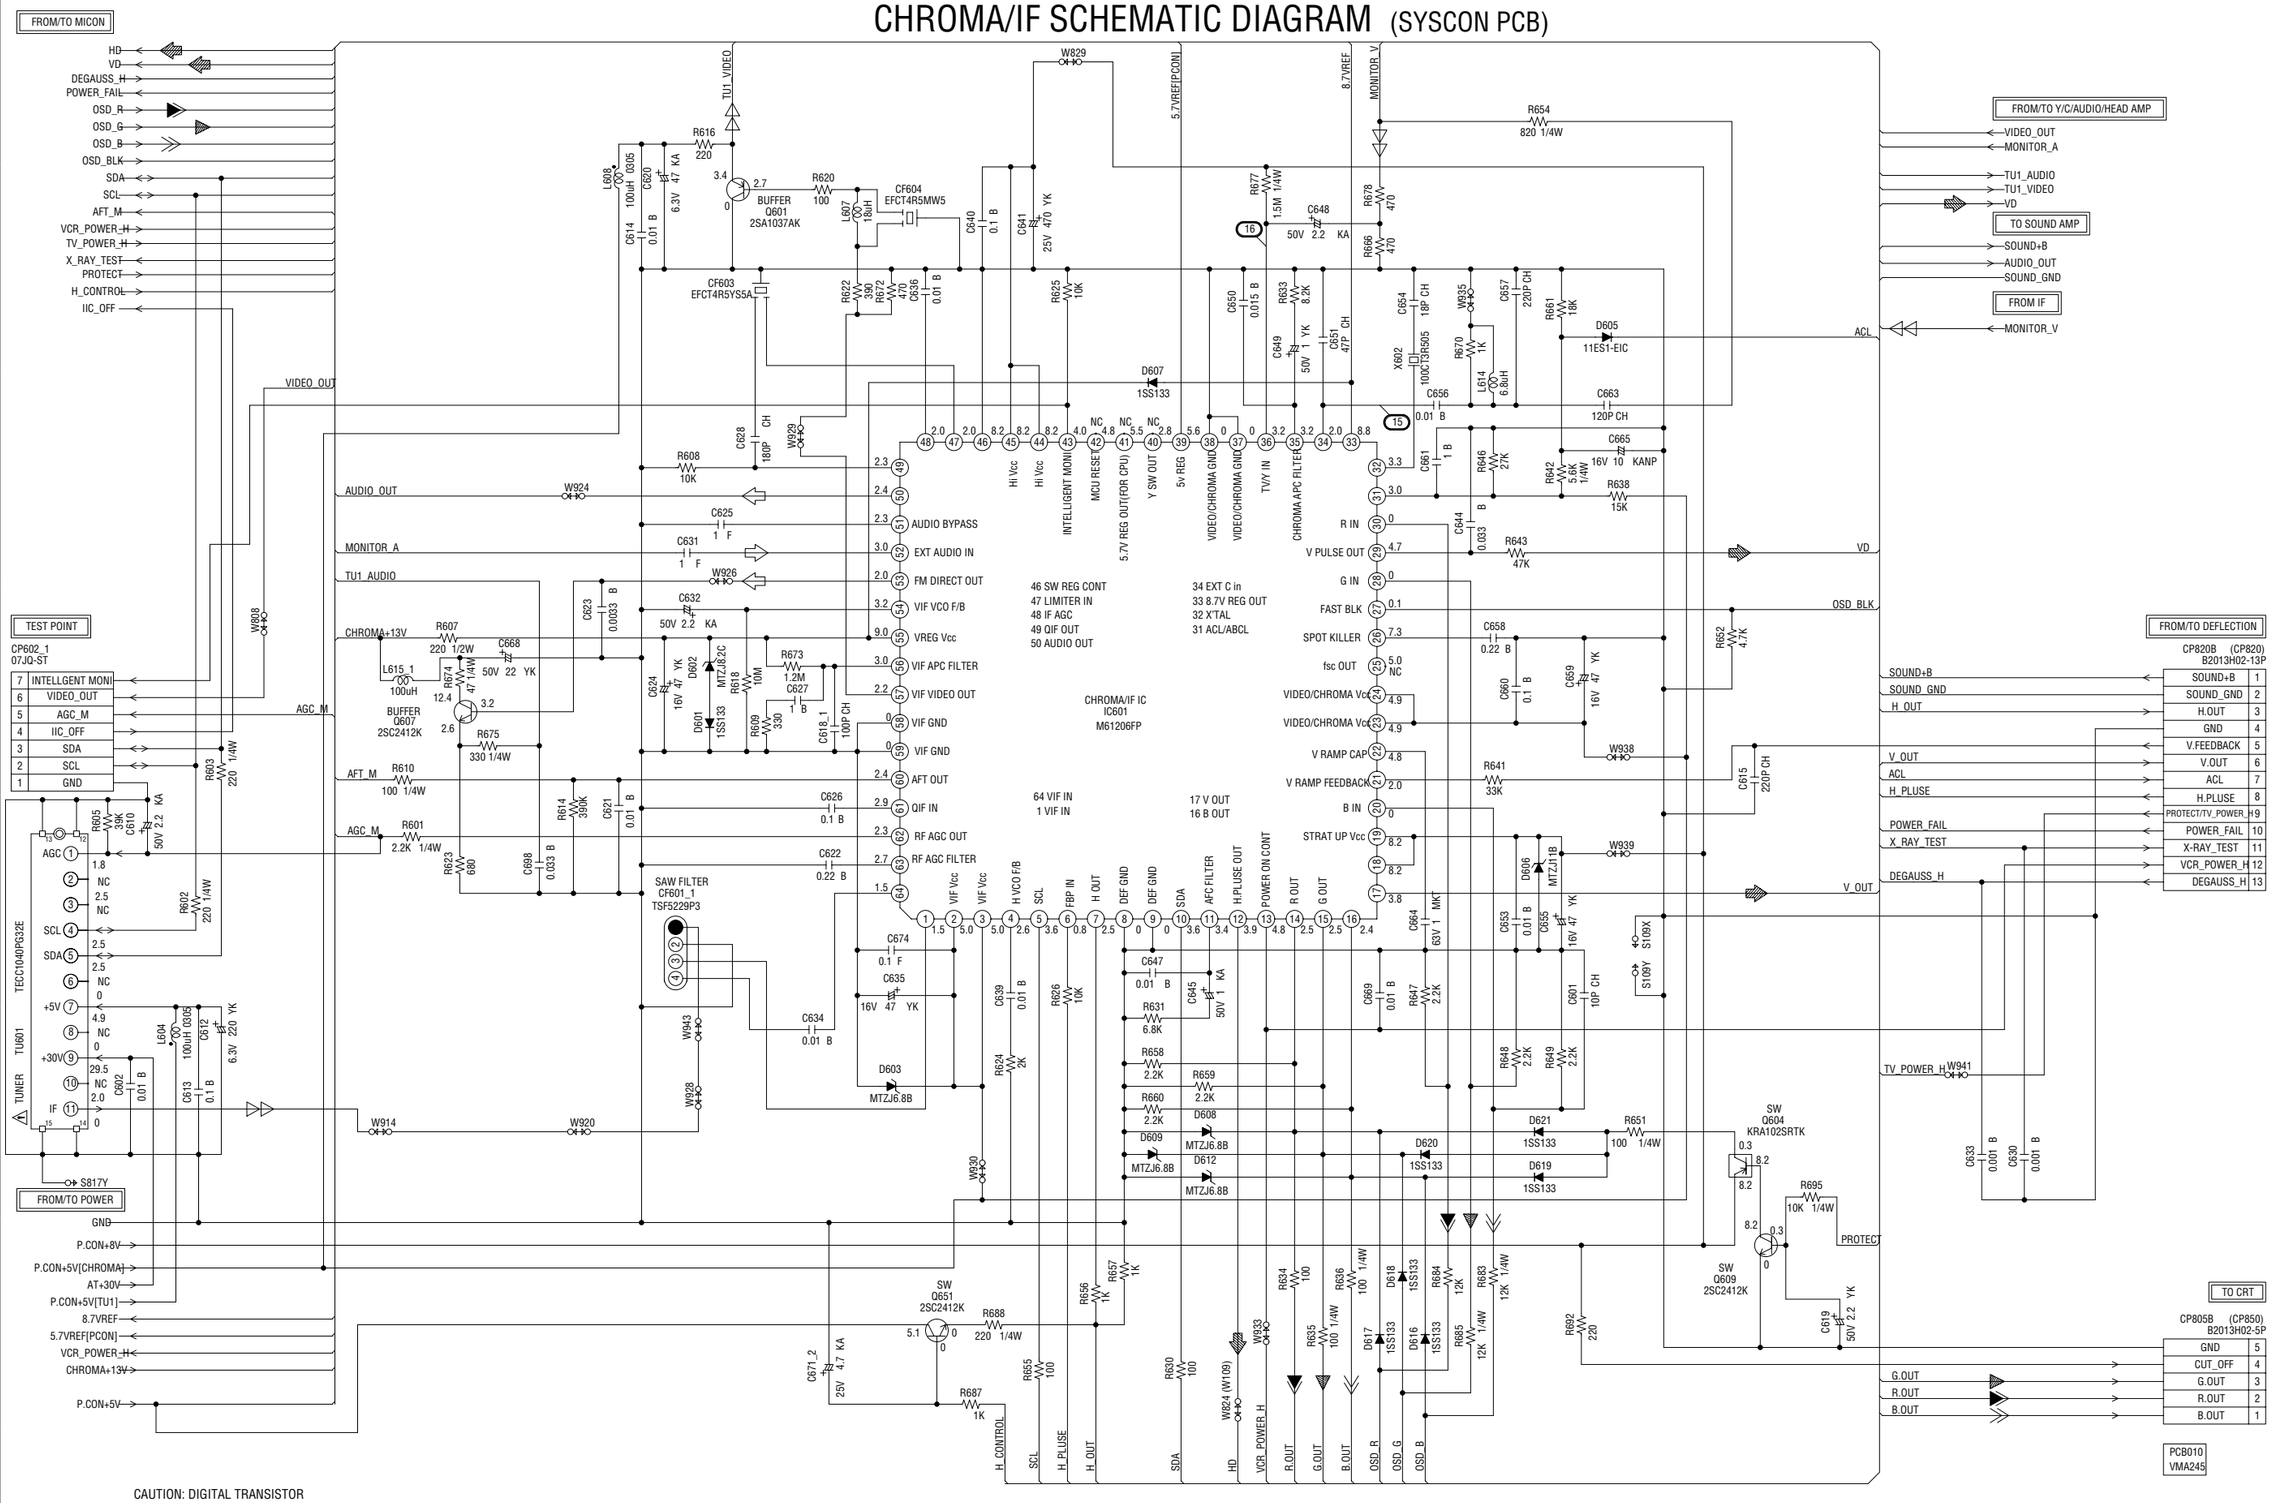

SOUND AMP SCHEMATIC DIAGRAM
(SYSCON PCB)

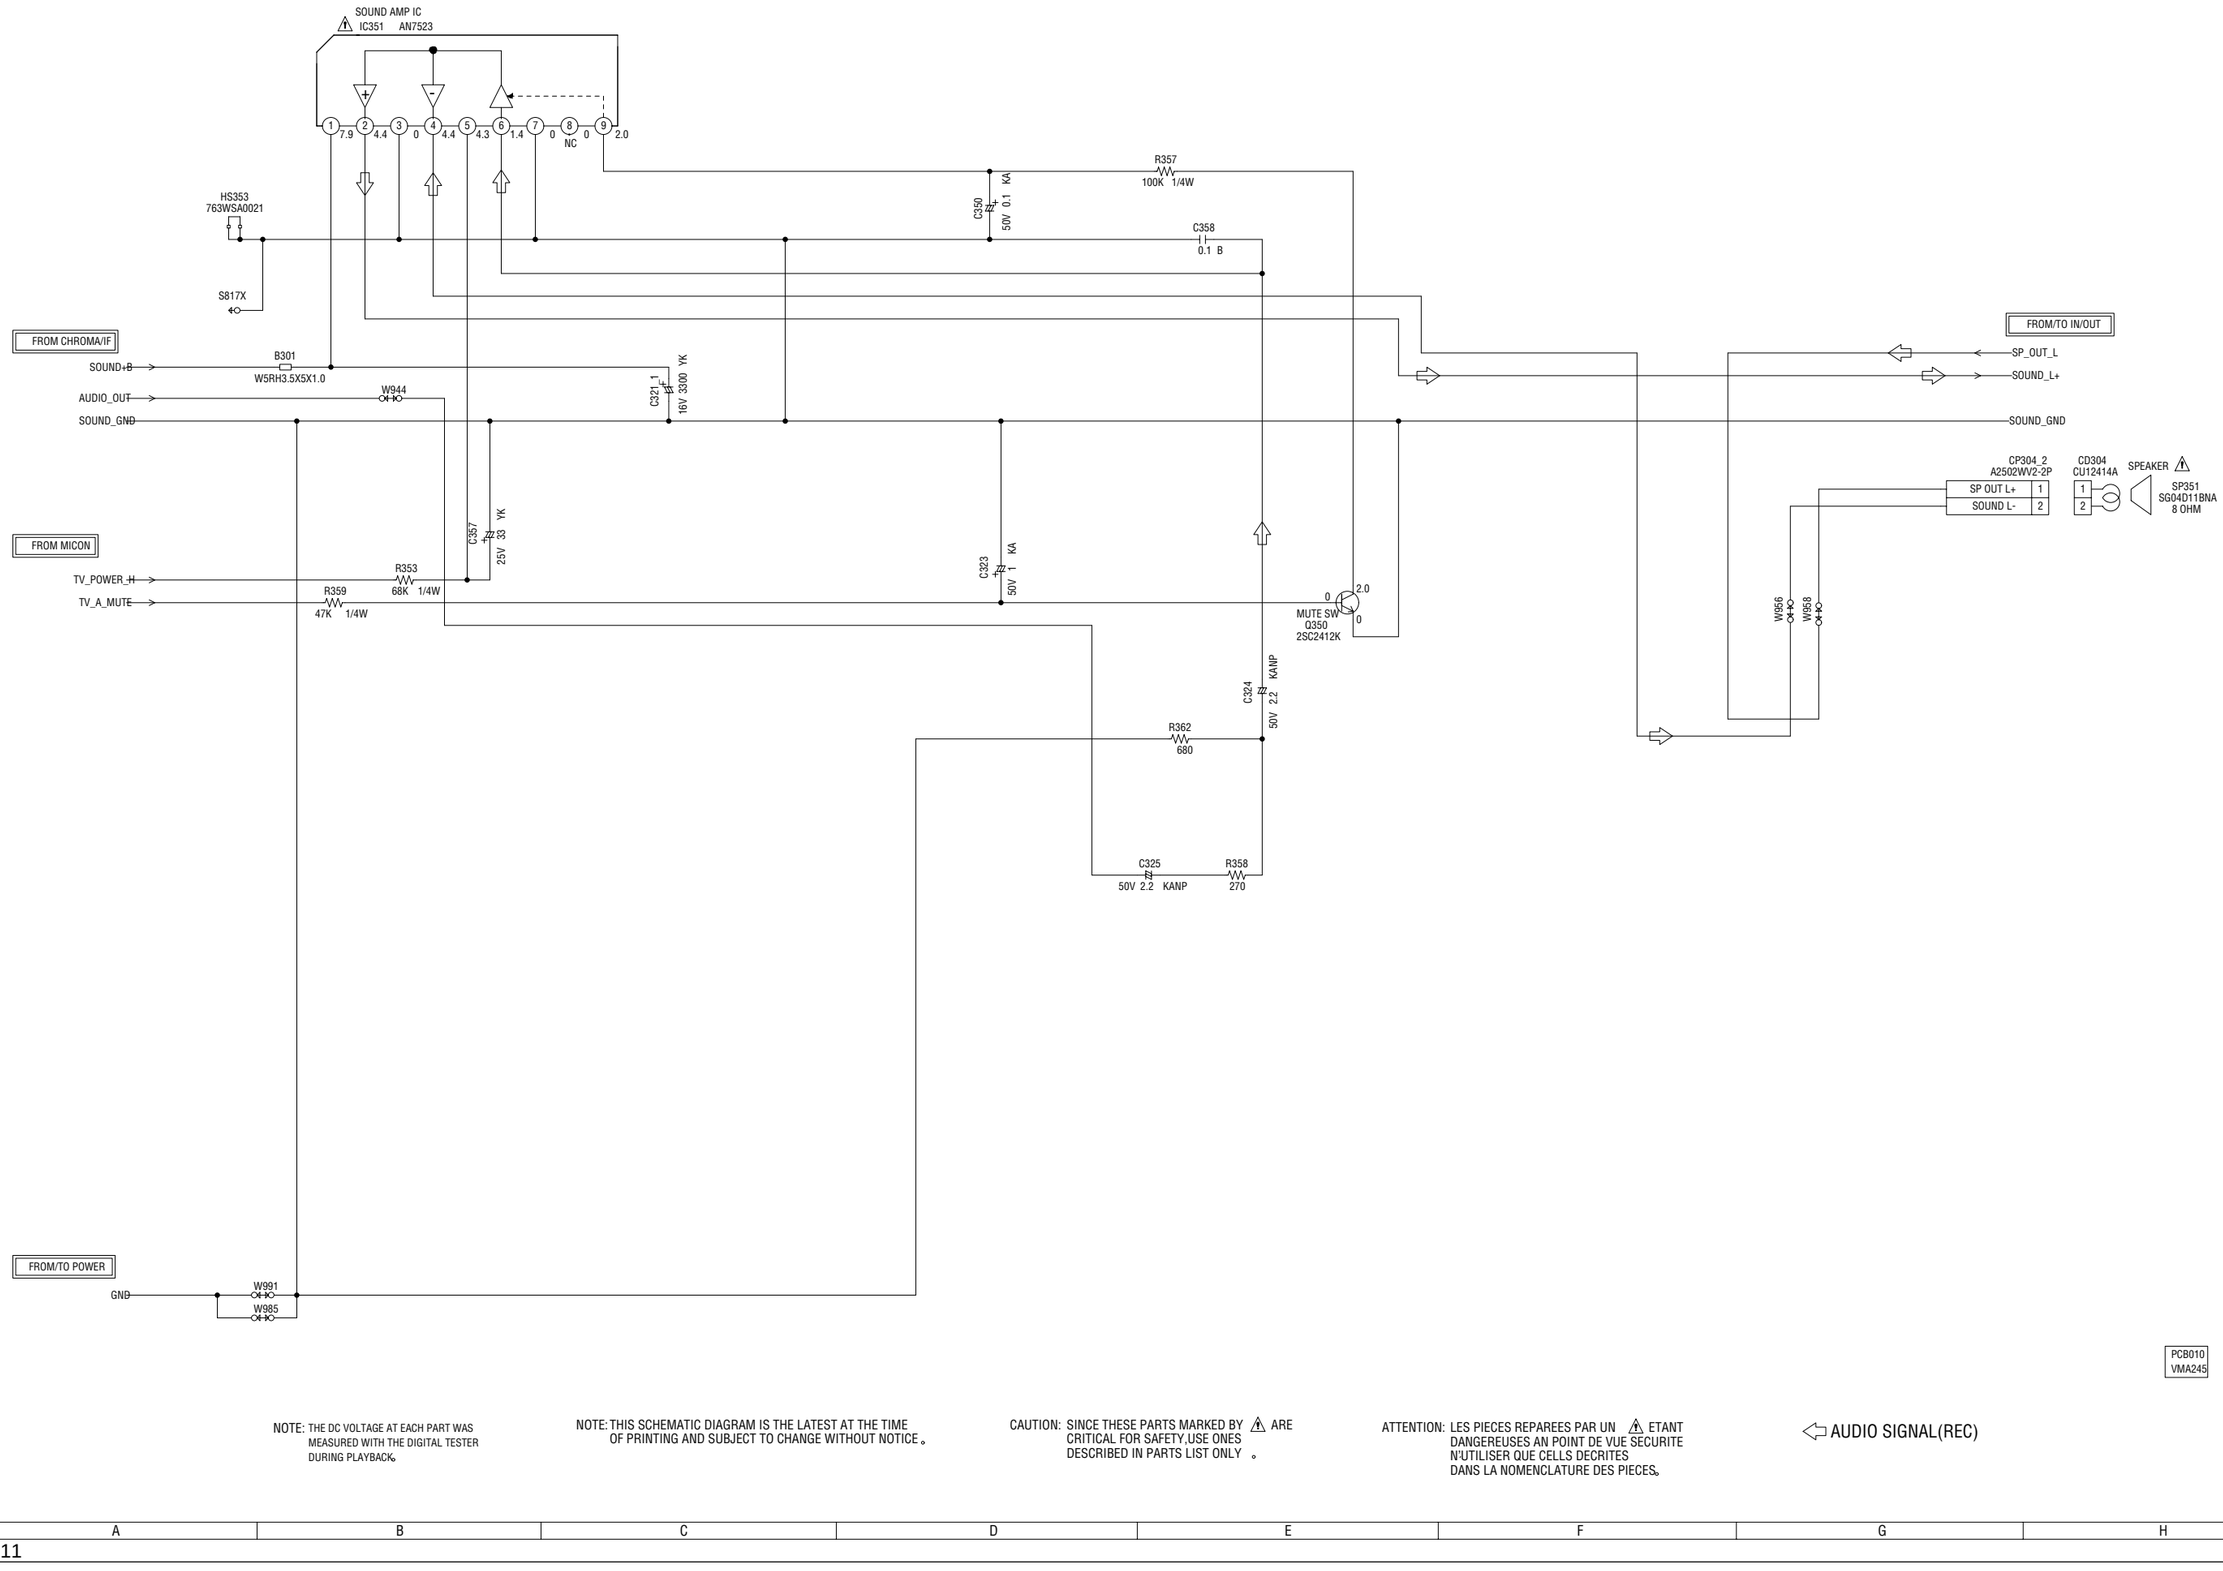

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK。

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

⇦ AUDIO SIGNAL(REC)

Hi-Fi SCHEMATIC DIAGRAM

(SYSCON PCB)

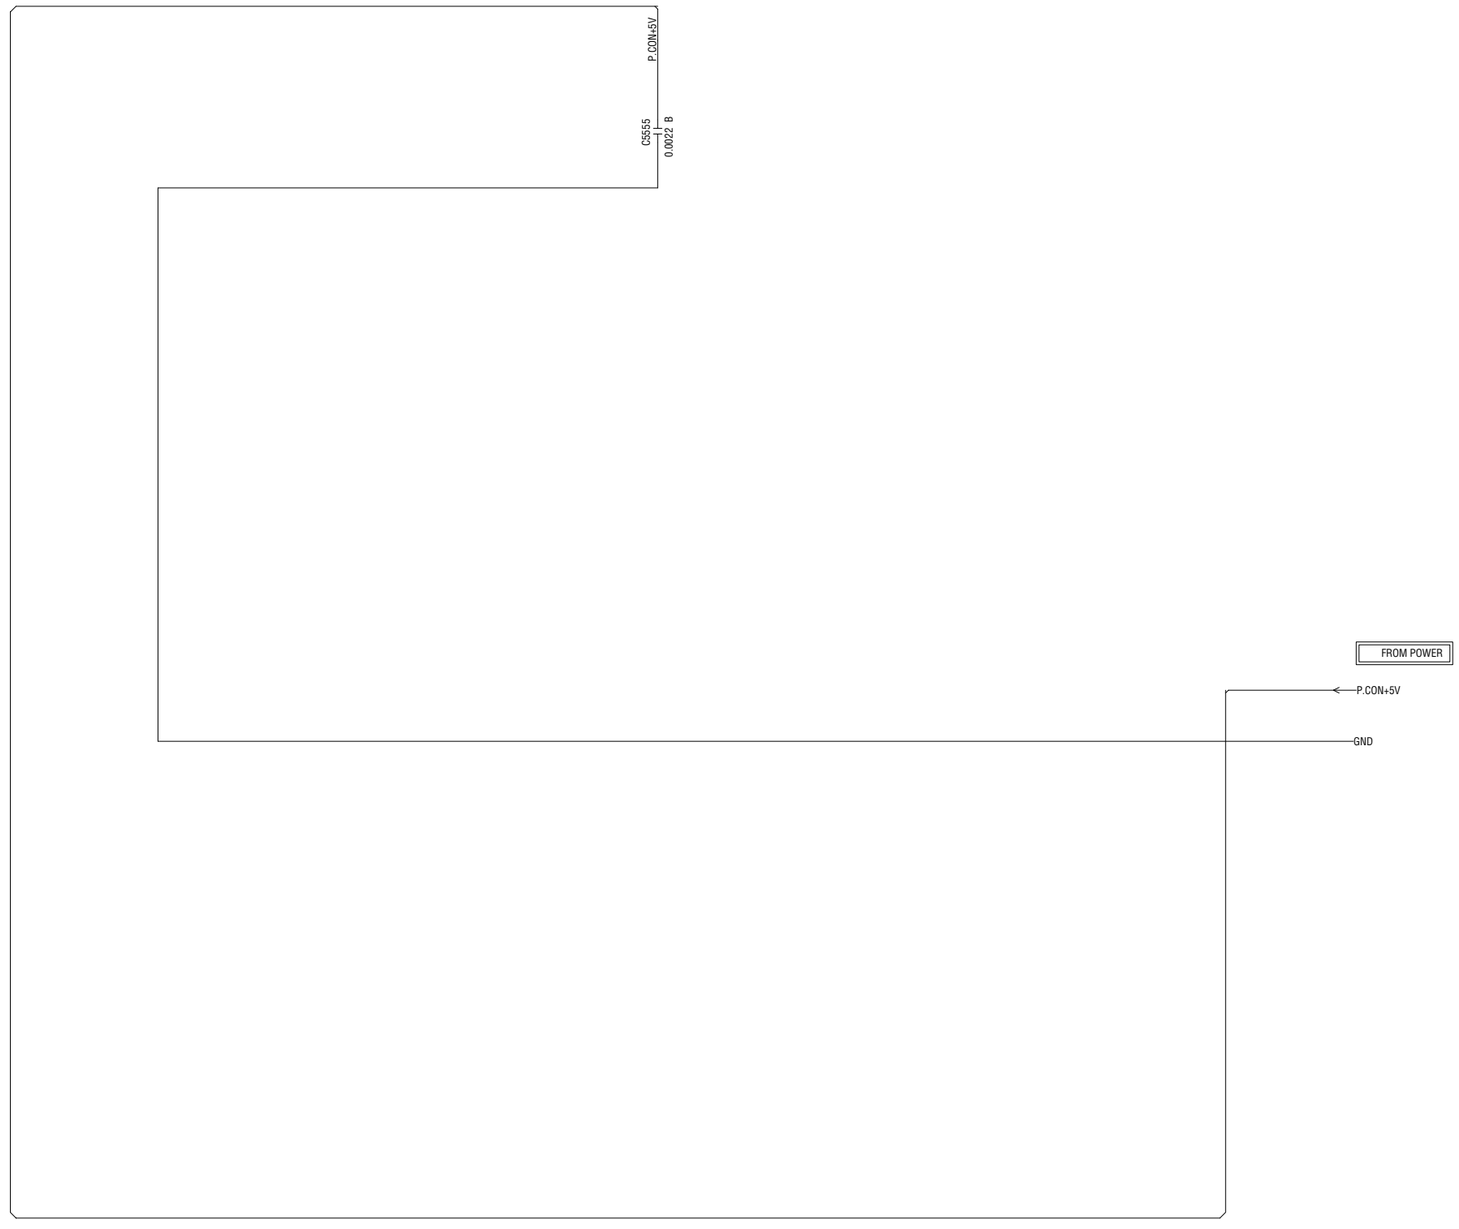

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

IF SCHEMATIC DIAGRAM
(SYSCON PCB)

PCB010
VMA245

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

◁◁ TUNER VIDEO SIGNAL

TV POWER SCHEMATIC DIAGRAM
(MAIN PCB)

5A 125V　　10A 125V

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE
5A 125V (F501) AND 10A 125V(ICP502).

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE
N'UTILISER QUE DES FUSIBLE DE MEME TYPE
5A 125V (F501) AND 10A 125V(ICP502).

CAUTION: ICP502 ARE MANUFACTURED BY LITTELFUSE INC.,TYPE 251.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP
IS NON POLAR ONE.

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT
DANGEREUSES AN POINT DE VUE SECURITE
N'UTILISER QUE CELLS DECRITES
DANS LA NOMENCLATURE DES PIECES。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE
CRITICAL FOR SAFETY,USE ONES
DESCRIBED IN PARTS LIST ONLY 。

CAUTION: DIGITAL TRANSISTOR

CAUTION: ⓐ IS THE LIVE CONNECTION

FROM/TO DEFLECTION
TO POWER
FROM/TO CHROMA/IF

PCB070
TMA527

DEFLECTION SCHEMATIC DIAGRAM
(MAIN PCB)

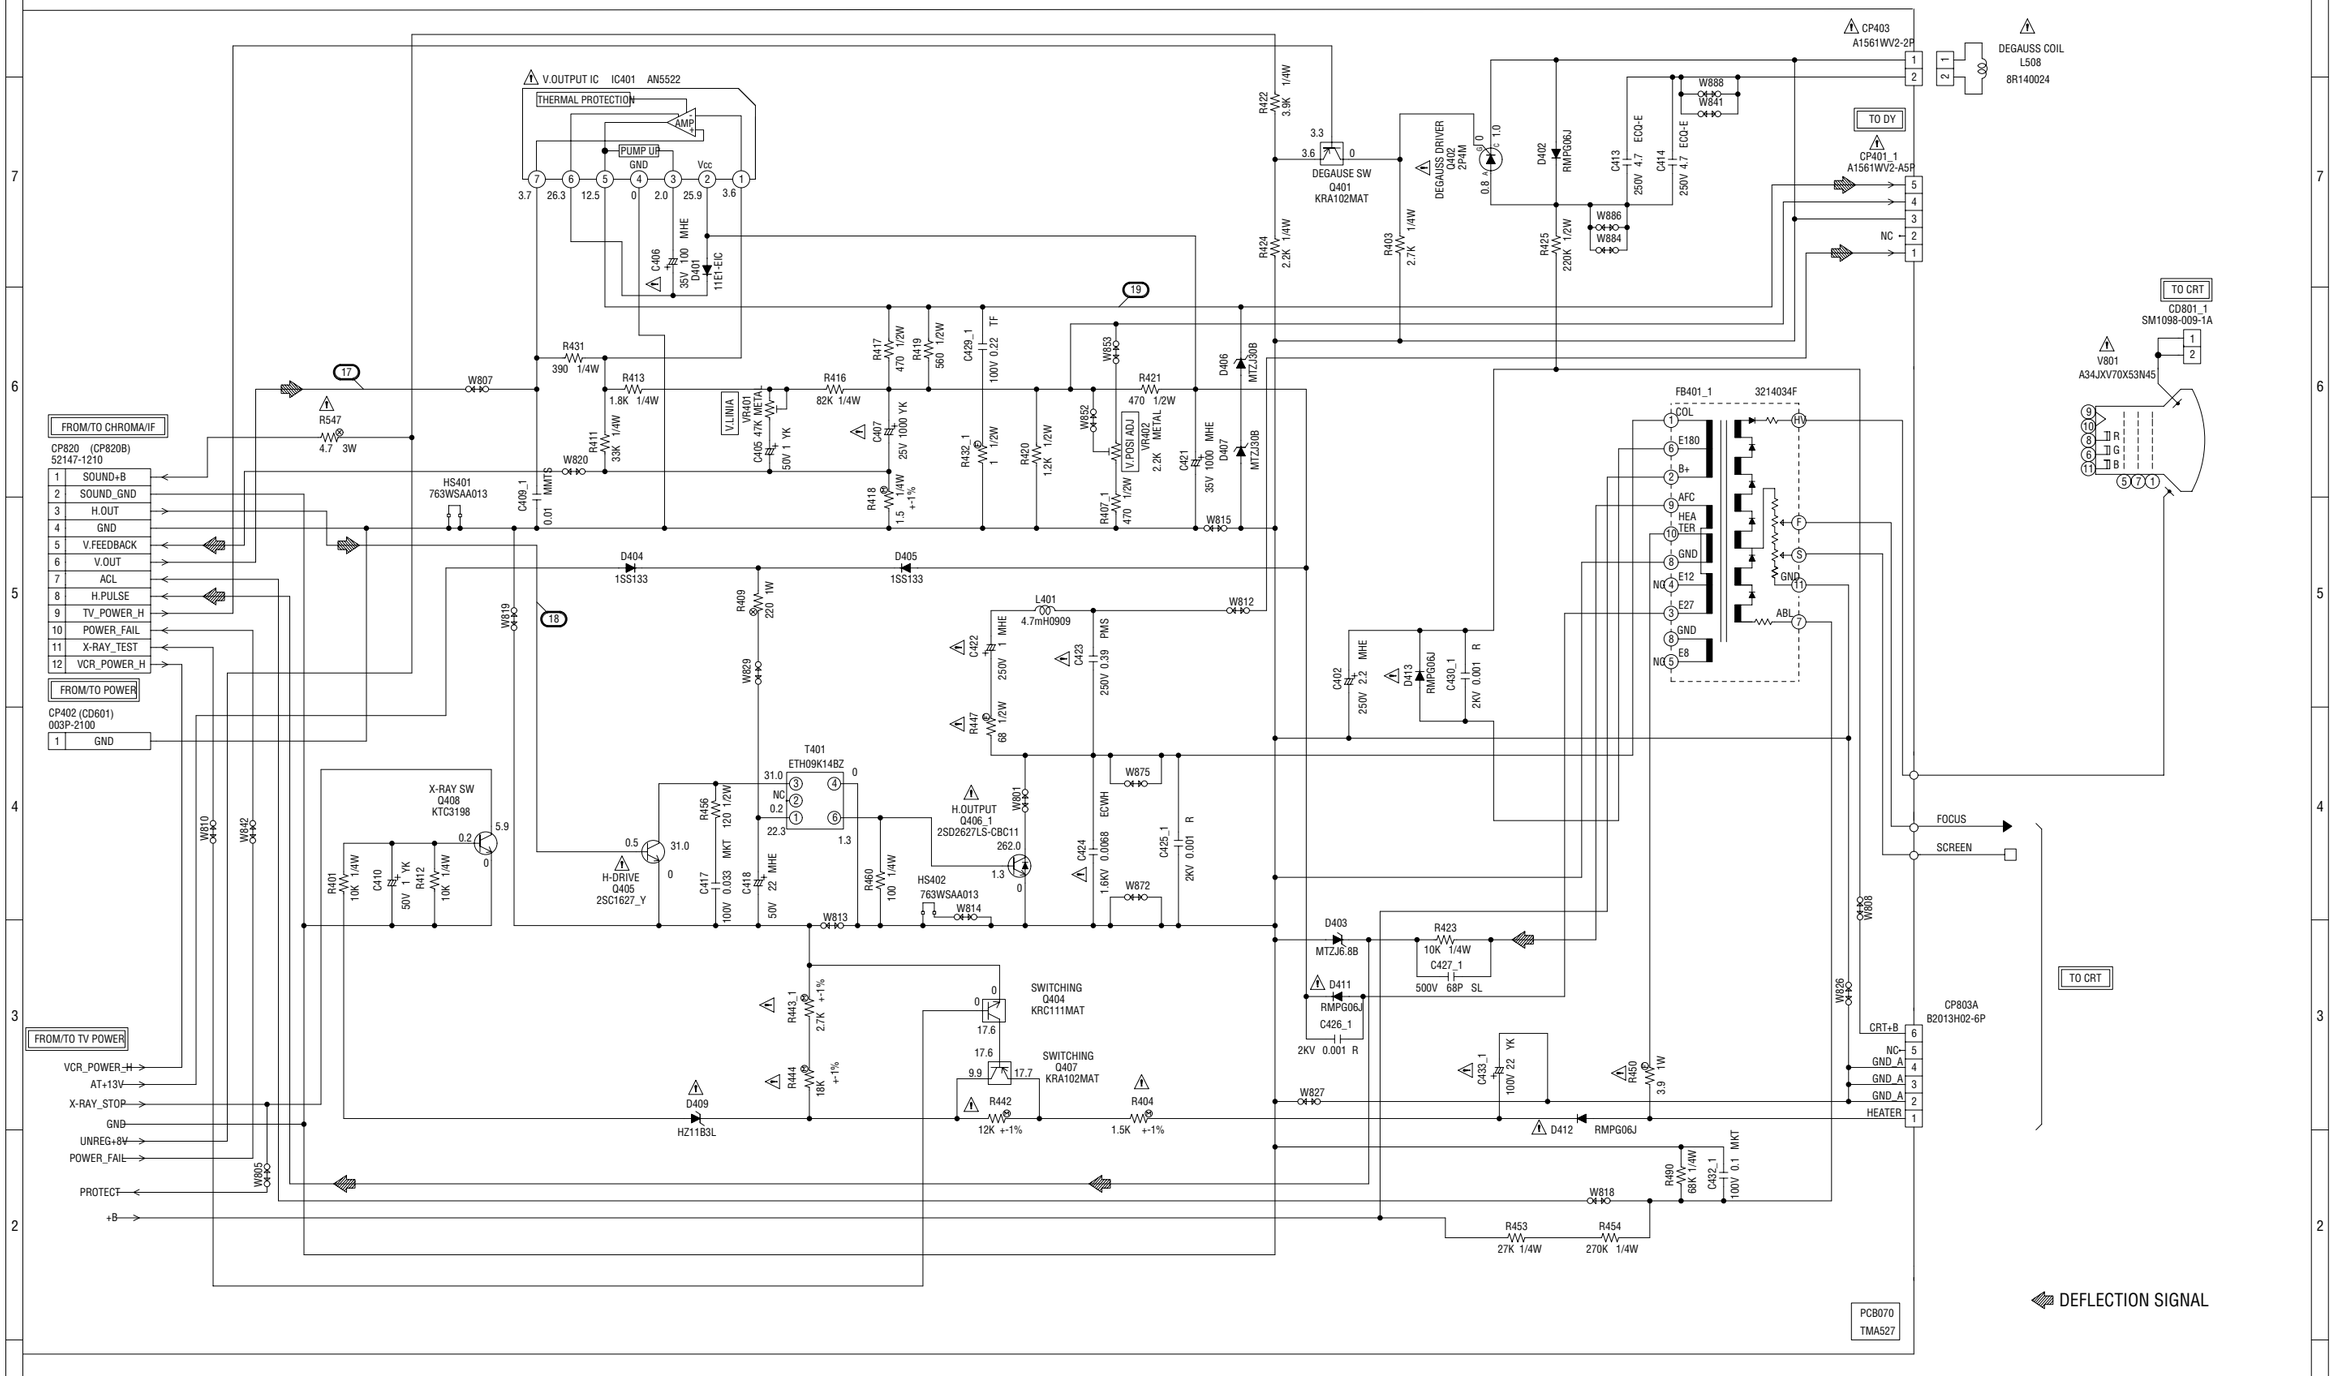

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

CAUTION: DIGITAL TRANSISTOR



CAUTION: DIGITAL TRANSISTOR



CRT SCHEMATIC DIAGRAM

(CRT PCB)

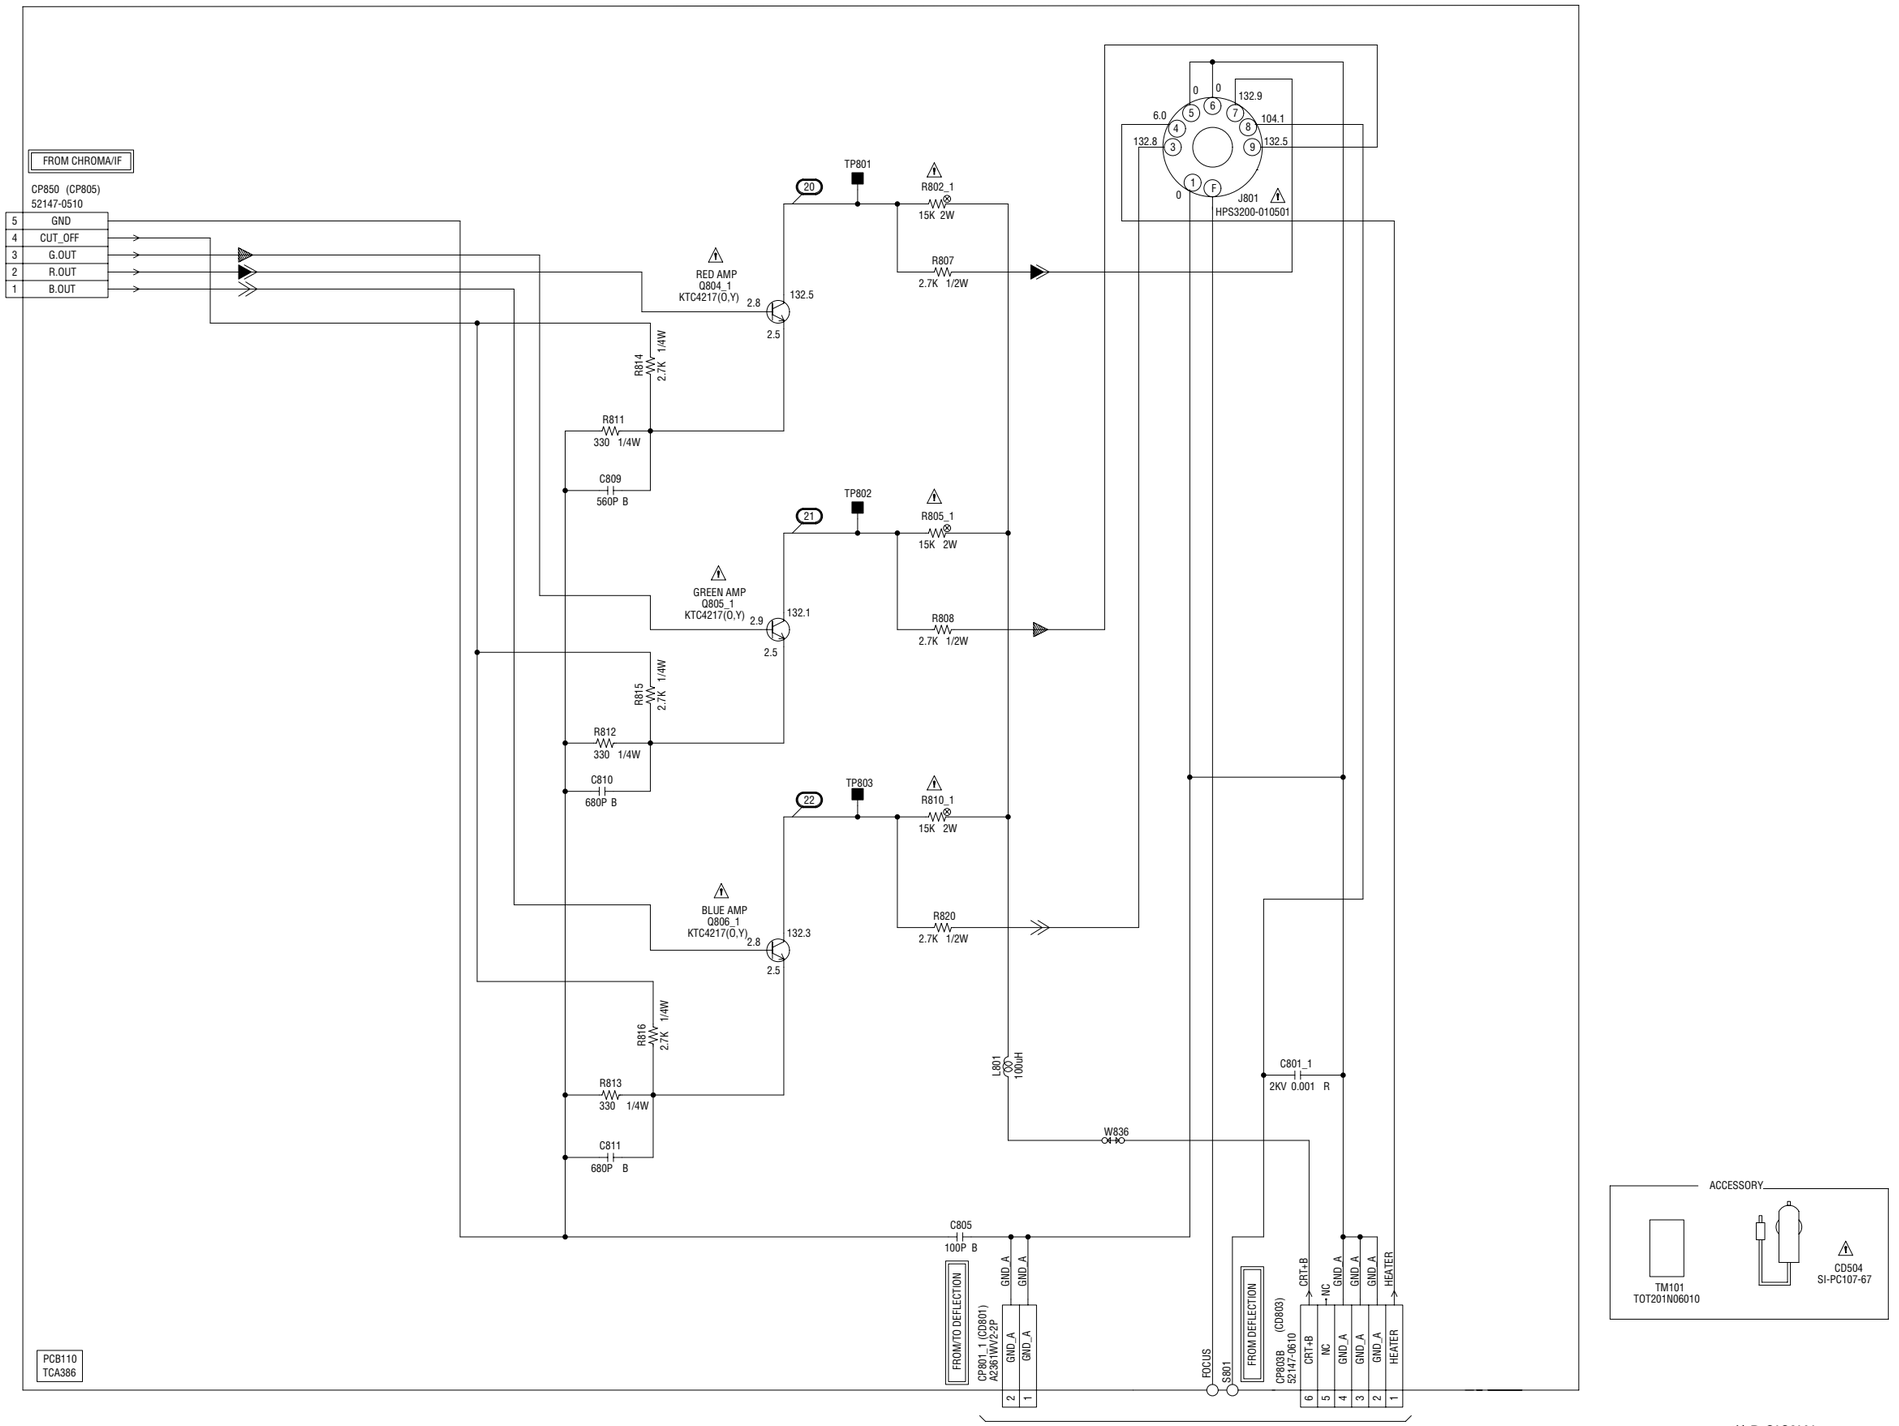

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

◀◀ R.SIGNAL
◀◀ G.SIGNAL
≪ B.SIGNAL

INTERCONNECTION DIAGRAM

HEADPHONE JACK J2201

FRONT VIDEO JACK J2202

FRONT AUDIO JACK J2203

REMOCON SENSOR OS2202 — GND, B+, Vout — FROM TM101

COMMAND TRANSMITTER TM101 — TO OS2202

SPEAKER SP351 8 OHM — CD304 — CP304_2: SP OUT L+, SOUND L-

CP1001: CAP_FG, CAP_VCO, VCC, CAP/M/F/R, I_LIMIT, MOTOR_GND, GND, CYL/LAD_VCO, CAP_CTL, LDM_CTL, CYL_FG/PG, CYL_CTL

HALL SENSOR, MAIN COIL, ROTOR MAGNET, MR FG SENSOR (VCC, O, G) — HALL VCC, HALL IN, OUT SWITCH LOGIC

CAPSTAN DD UNIT ASS'Y M2001

FFC — RED, WHITE — LM — LOADING MOTOR M101

CYLINDER UNIT ASS'Y UN4001: D-PG GND, D-PG OUT, M-GND, D-COM, D-W OUT, D-V OUT, D-U OUT

CP4001_1: SP-CH2 (L), SP_COM, SP-CH1 (R) — CH2, CH1 — SP HEAD

HEAD AUDIO CONTROL ASS'Y H5001 — FFC — AUDIO, CONTROL, AE

CP4002: AUDIO PB, AUDIO REC, CTL+, CTL-, AE HEAD(-), AE HEAD(+)

CP4003: FE HEAD (GND), FE HEAD (HOT) — FULL ERASE HEAD ASS'Y H5002

CP605: DEW+, DEW- — DEW.SENSOR D1100

TU601: IF, +30V, +5V, SDA, SCL, AGC

CP601_1: GND

CD601: GND

CP820B: SOUND+B, SOUND_GND, H.OUT, GND, V.FEEDBACK, V.OUT, ACL, H.PULSE, PROTECTER, POWER_FAIL, X-RAY_TEST, VCR_POWER_H, DEGAUSS_H

CP820: SOUND+B, SOUND_GND, H.OUT, GND, V.FEEDBACK, V.OUT, ACL, H.PULSE, PROTECTER, POWER_FAIL, X-RAY_TEST, VCR_POWER_H

CP502: GND, GND, AT+5.6V, AT+12V, MOTOR_GND, UNREG+8V, UNREG+8V, AT+13V, AT+30V, X-RAY_STOP, POWER_FAIL(DC)

CP810B: GND, GND, AT+5.6V, AT+12V, MOTOR_GND, UNREG+8V, UNREG+8V, AT+13V, AT+30V, X-RAY_STOP, POWER_FAIL(DC)

CD805B: B.OUT, R.OUT, G.OUT, CUT_OFF, GND

SYSCON PCB PCB010 VMA245

CP402: GND

CD502: GND

CRT — ANODE, H.V, V801, DY

CP401_1: NC

CRT SOCKET J801

CD802

DC JACK J503

CD503 / CP503: +B(A), +B(B)

DEGAUSS COIL L508 — CP403

AC120V_60Hz CD501_2 — BLACK, WHITE — S501, S502 — BLADE WIDE

FBT FB401_1

CP803A: HEATER, GND_A, GND_A, NC, NC, CRT+B

CD803

CP803B: HEATER, GND_A, GND_A, NC, NC, CRT+B

CP801_1: GND_A, GND_A

CP850: B.OUT, R.OUT, G.OUT, CUT_OFF, GND

SCREEN, FOCUS

FOCUS

MAIN PCB PCB070 TMA527

CRT PCB PCB110 TCA386

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THIS INTERCONNECTION DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

WAVEFORMS

Y/C/AUDIO/HEAD AMP

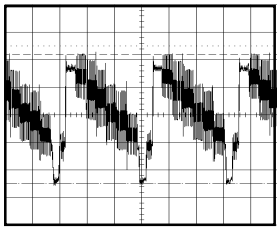

① PB
0.5V 20µs/div

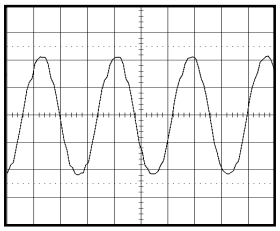

② POWER ON
100mV 0.1µs/div

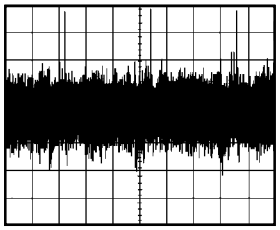

③ PB
10mV 20µs/div

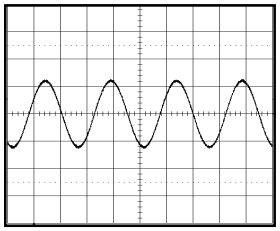

④ PB
0.5V 1ms/div

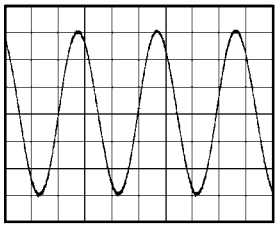

⑤ REC
10.0V 5µs/div

MICON

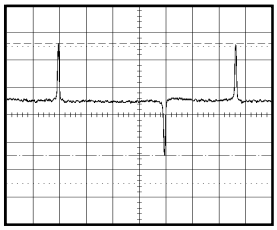

⑦ PB
1.0V 5ms/div

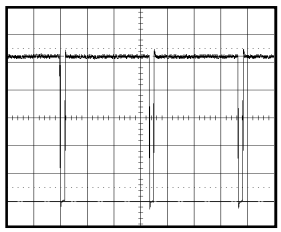

⑧ POWER ON
0.5V 10ms/div

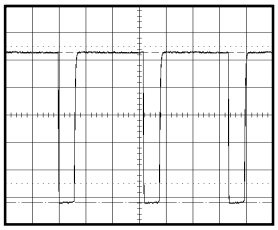

⑨ POWER ON
1.0V 20µs/div

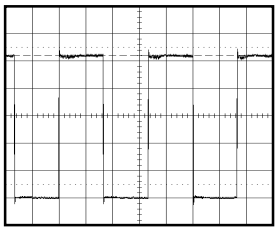

⑩ PB
1.0V 10ms/div

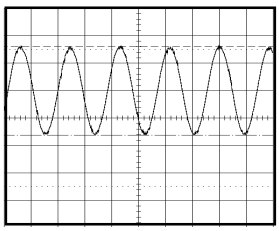

⑪ PB
0.5V 0.5ms/div

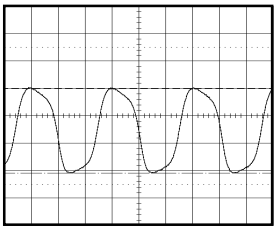

⑫ POWER ON
1.0V 10µs/div

DEFLECTION

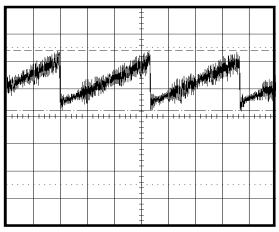

⑰ 0.5V 5ms/div

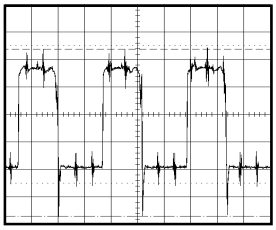

⑱ 200mV 20µs/div

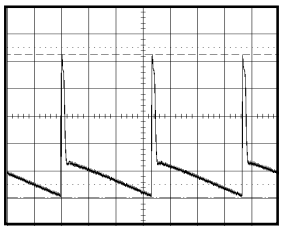

⑲ 10.0V 5ms/div

CRT

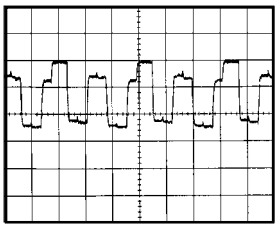

⑳ 50.0V 20µs/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS

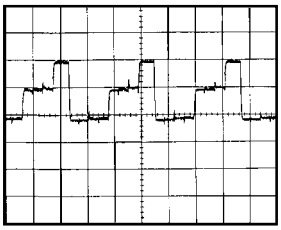

(21) 50.0V 20µs/div

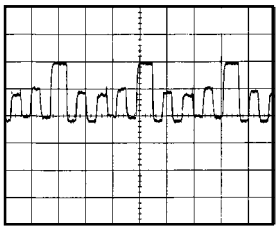

(22) 50.0V 20µs/div

CHROMA/IF

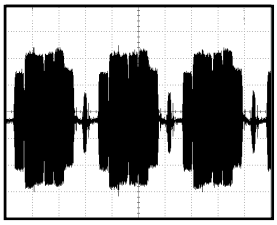

(15) 100mV 20µs/div

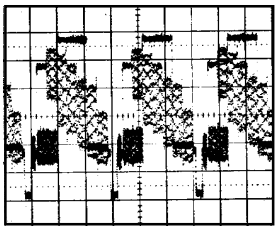

(16) 200mV 20µs/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

TOSHIBA VIDEO PRODUCTS PTE. LTD.

438B ALEXANDRA ROAD, BLOCK B #06-01 ALEXANDRA TECHNOPARK SINGAPORE 119968